


POWER TRIM TILT ASSEMBLY

Ref No.	Part Number	Description	Qty	Remarks
1	6G5-43800-02-EK	POWER TRIM TILT ASSY	1	
2	6G5-43880-01-00	.. MOTOR ASSEMBLY	1	
3	6G5-43805-00-00	.. ARMATURE ASSY	1	
4	6G5-43804-00-00	.. STATOR ASSY	1	
5	6G5-43865-00-00	...O-RING	2	
6	6G5-43887-00-00	.. BOLT, THROUGH	2	
7	6G5-43806-00-00	.. BRUSH, HOLDER ASSY	1	
8	6G5-43899-00-00	.. PLATE, STOPPER	1	
9	6G5-43886-00-00	.. BOLT	2	
10	6G5-43884-00-00	.. FRAME, COMMUTATOR END	1	
11	6G5-43893-00-00	.. WASHER	2	
12	6G5-43889-10-00	.. PLATE SEAT	2	
13	6G5-43867-00-00	.. O-RING	2	
14	6G5-43885-00-00	.. GROMMET	1	
15	6G5-4380E-01-00	.. TILT CYLINDER ASSEMBLY	1	
16	6E5-43861-00-00	.. O-RING	1	
17	6G5-43862-00-00	.. O-RING	2	
18	6E5-43872-00-00	.. RING, BACK UP	2	
19	6E5-43814-02-00	.. PISTON, FREE	1	
20	6E5-43829-00-00	.. PLUG, RESERVOIR	1	


CONTINUED ON NEXT FRAME >

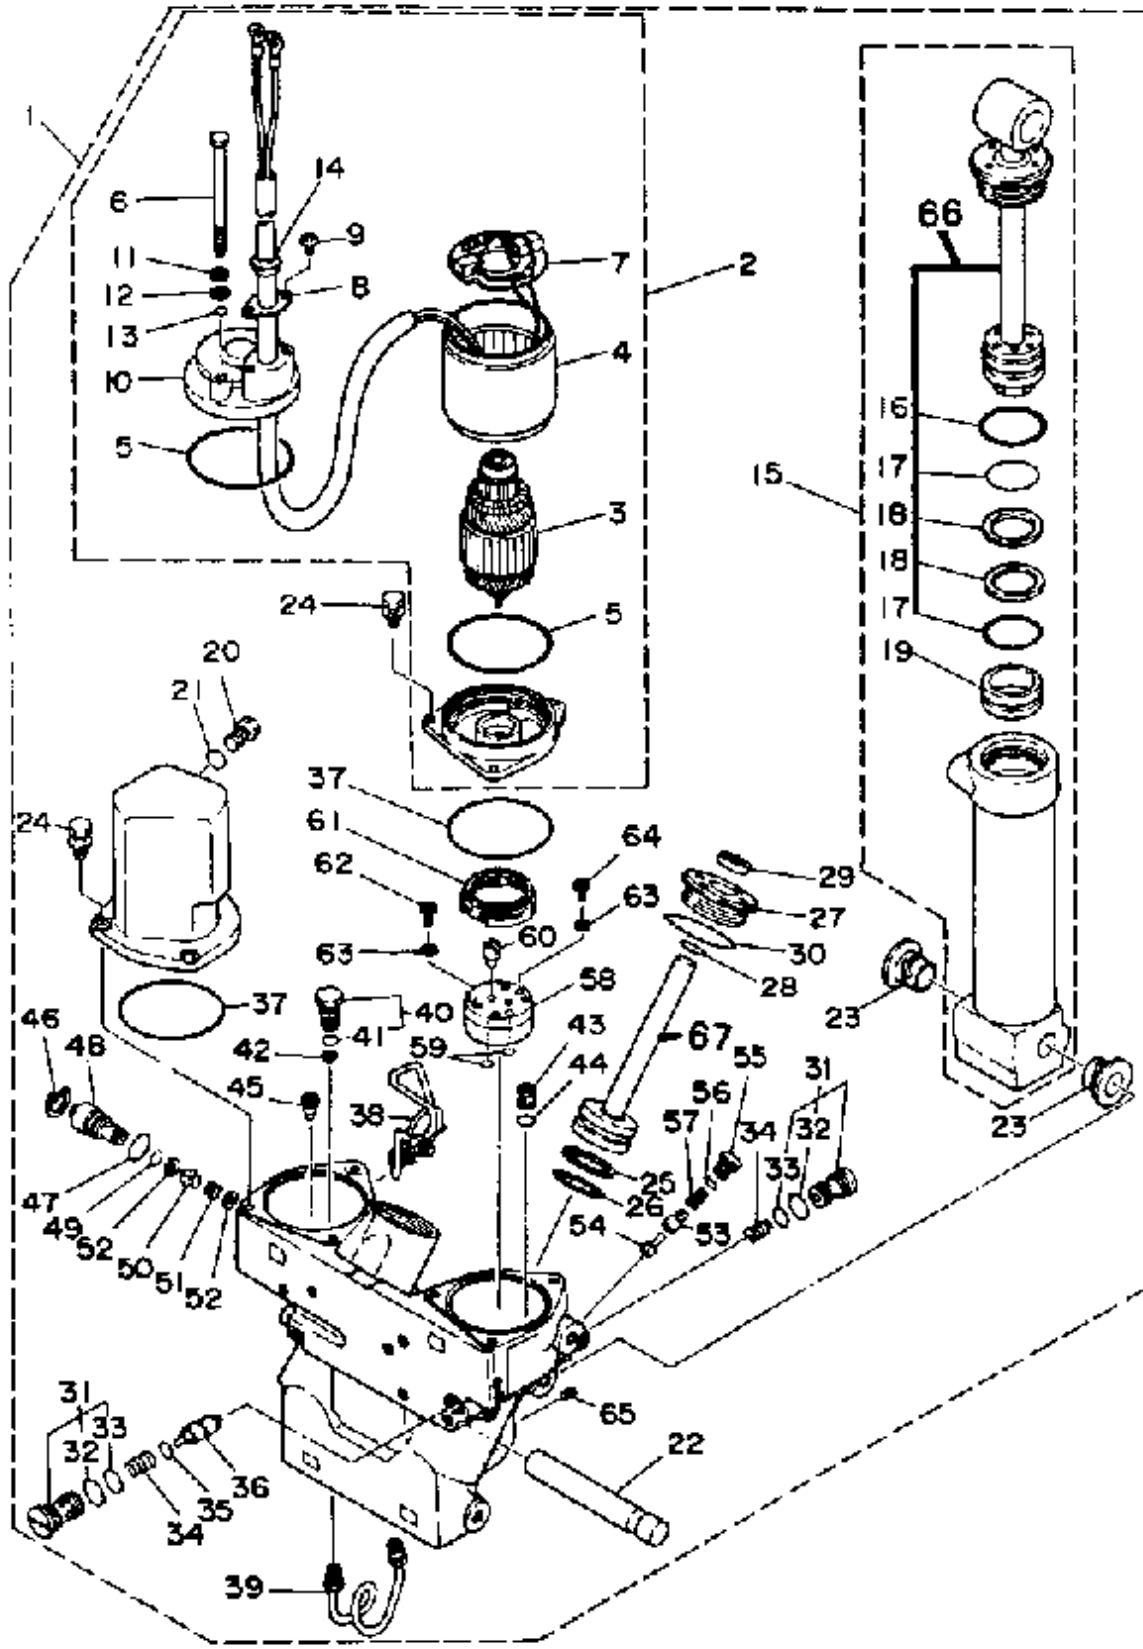

POWER TRIM TILT ASSEMBLY

Ref No.	Part Number	Description	Qty	Remarks
21	6E5-43863-00-00	. O-RING	1	
22	6G5-43818-00-00	. PIN, LOWER SHOCK MOUNT	1	
23	90386-18M14-00	. BUSH	2	
25	6G5-43874-00-00	. RING, BACK UP	2	
26	6G5-43864-00-00	. O-RING	2	
27	6G5-43821-01-00	. SCREW, TRIM CYLINDER END (6G5-43821-00-00)	2	
28	6E5-43865-00-00	. O-RING	2	
29	6E5-43822-01-00	. SEAL, TRIM DUST	2	
30	6G5-43861-00-00	. O-RING	2	
31	6G5-43802-01-00	. VALVE SUB ASSY	2	
32	6E5-43866-00-00	. O-RING	1	
33	6E5-43867-00-00	. O-RING	1	
34	6G5-43894-00-00	. SPRING, SHUTTLE RETURN	2	
34	6G5-43894-00-00	. SPRING, SHUTTLE RETURN	6	
35	6E5-43868-00-00	. O-RING	1	
36	6G5-43841-00-00	. PISTON, SHUTTLE	1	
37	6E5-43869-00-00	. O-RING	2	
38	6G5-43835-00-00	. PIPE	1	
39	6G5-43833-00-00	. PIPE	1	
40	6G5-43809-00-00	. SEAT, VALVE COMP 2	1	


CONTINUED ON NEXT FRAME >

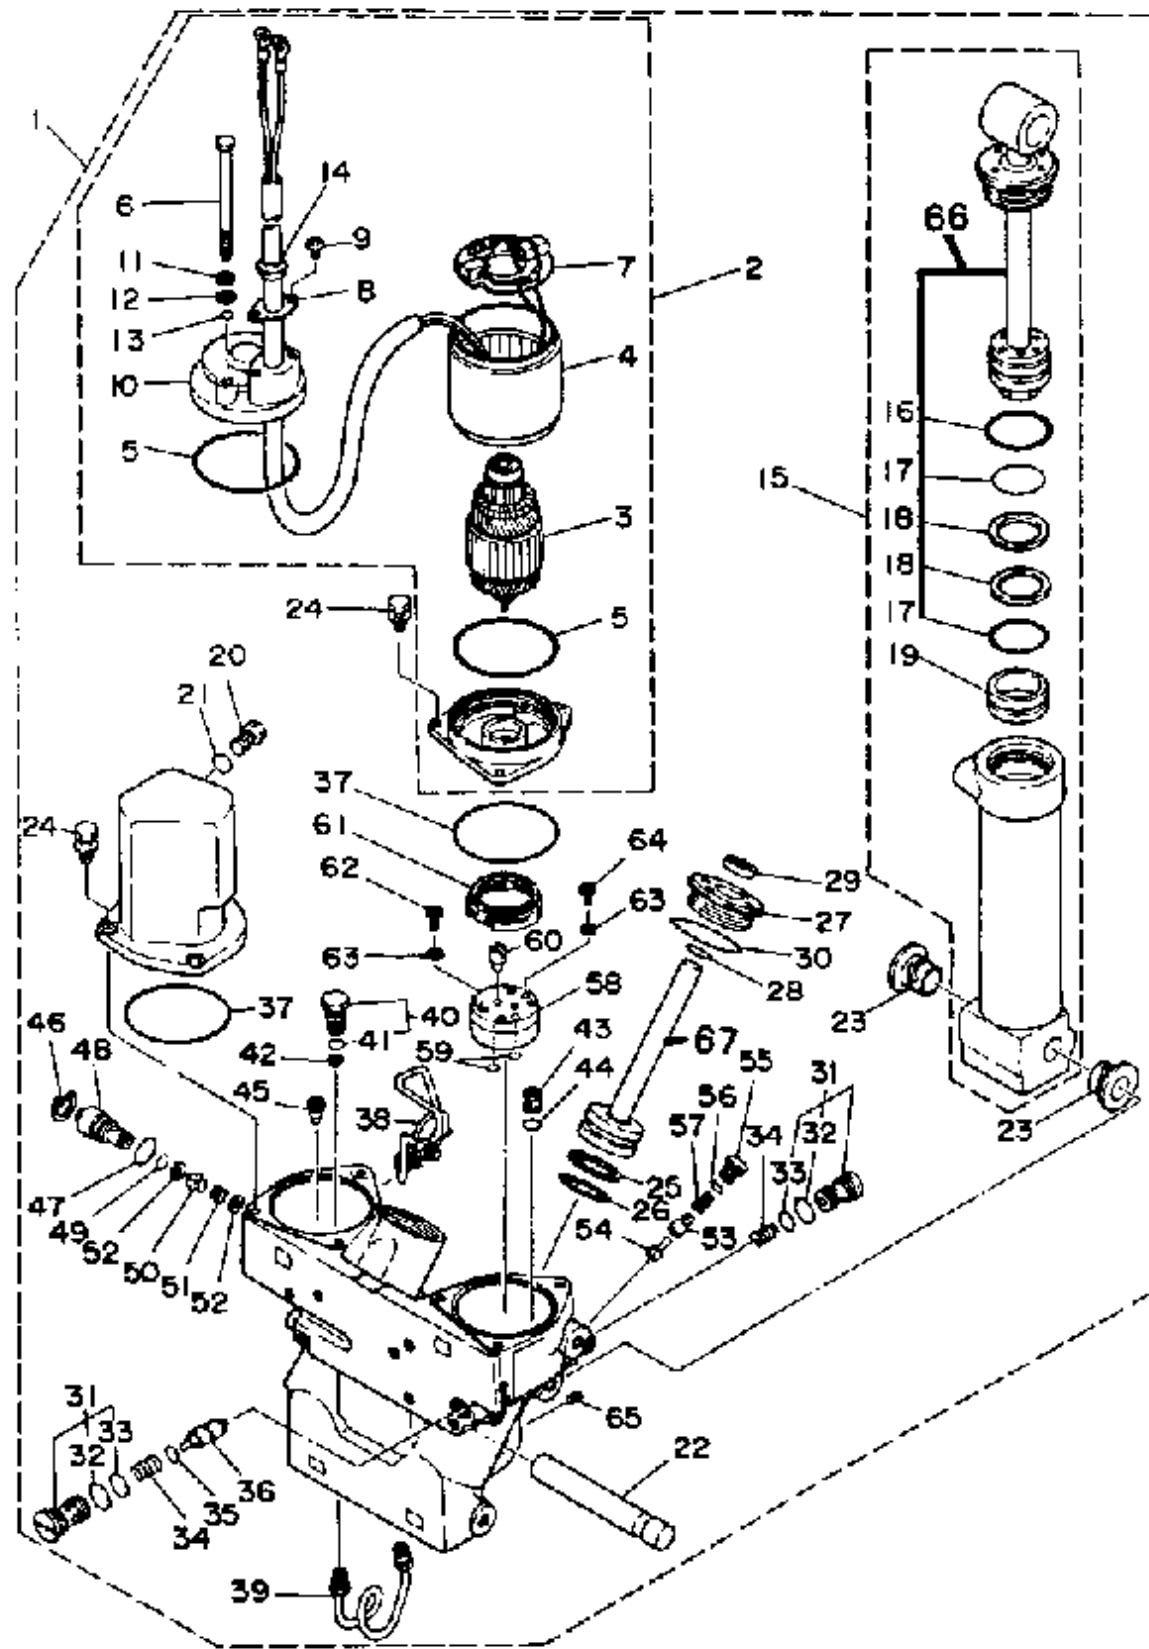

POWER TRIM TILT ASSEMBLY

Ref No.	Part Number	Description	Qty	Remarks
41	6E5-43896-00-00O-RING	1	
42	6G5-43816-00-00	. FILTER 1	1	
43	6G5-43808-01-00	. SEAT, VALVE COMP 1	1	
44	6E5-43883-00-00	. O-RING	1	
45	6G5-43803-00-00	. CASE VALVE COMP	1	
46	6H1-43875-00-00	. RING, SNAP	1	
47	93210-18M75-00	. O-RING	1	
48	6G5-43845-00-00	. SCREW, MANUAL RELEASE	1	
49	93210-10M74-00	. O-RING	1	
50	6E5-4382A-00-00	. ADAPTER 1	1	
51	6E5-43854-01-00	. SPRING, MANUAL RELEASE	1	
52	6E5-43847-00-00	. SEAT, MANUAL VALVE	2	
53	6G5-43849-00-00	. PIN, VALVE SUPPORT	1	
54	6G5-4381A-00-00	. SHAFT	1	
55	6G5-43842-00-00	. SCREW, VALVE SEAT	1	
56	6G5-43866-00-00	. O-RING	1	
57	6E5-43824-01-00	. SPRING, COMPRESSION	1	
58	6G5-43830-00-00	. GEAR PUMP ASSY	1	
59	6G5-43863-00-00	. .O-RING	2	
60	6G5-43831-00-00	. CONNECTOR, SHAFT	1	

CONTINUED ON NEXT FRAME >

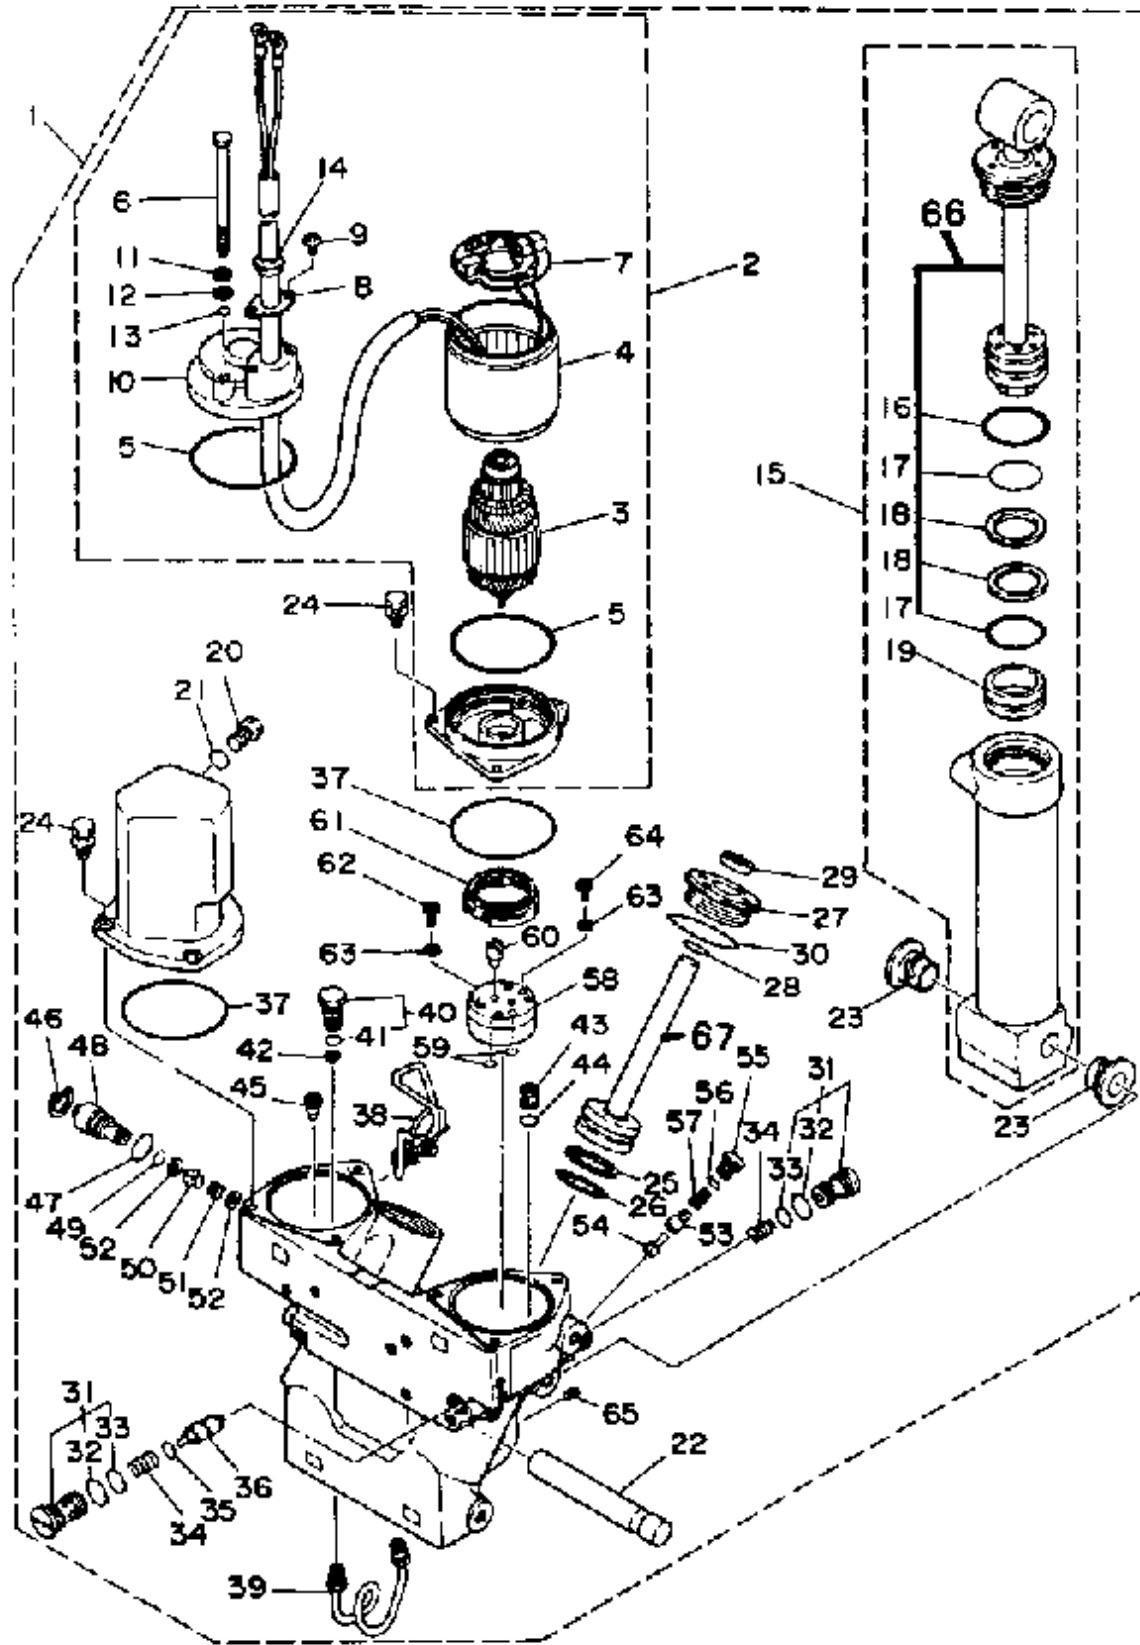

POWER TRIM TILT ASSEMBLY

Ref No.	Part Number	Description	Qty	Remarks
61	6E5-43817-10-00	. FILTER 2	1	
62	6G5-43878-01-00	. BOLT, SOCKET	1	
63	90201-05M00-00	. WASHER, PLATE	3	
64	6G5-43888-01-00	. BOLT, SOCKET	1	
65	6G5-43878-10-00	. BOLT, SOCKET	1	
66	6G5-43810-00-00	PISTON SUB ASSEMBLY	1	
67	6G5-43820-01-00	PISTON SUB ASSEMBLY	2	

