


GENERATOR

Ref No.	Part Number	Description	Qty	Remarks
1	6A1-81350-20-00	ROTOR ASSEMBLY	1	
2	6A1-81310-20-00	BASE ASSEMBLY	1	
3	6A1-81311-20-00	. COIL, IGNITION 1	1	
4	90159-05040-00	. .SCREW, WITH WASHER	2	
5	806-81321-20-00	. CONTACT BRKR ASSEMBLY	1	
6	90159-04036-00	. .SCREW, WITH WASHER	1	
7	624-81325-20-00	. CONDENSER 1	1	
8	116-81331-20-00	. LUBRICATOR	1	
9	110-81346-21-00	. SCREW, PAN HEAD	1	
10	650-82340-10-00	. HIGH TENSION CORD ASSEMBLY 1	1	
11	90280-04M06-00	KEY, WOODRUFF	1	
12	6A1-81362-00-00	COVER, HOLE	1	
13	95303-10600-00	NUT	1	
14	92990-10100-00	WASHER, SPRING	1	
15	97095-06030-00	BOLT	2	
16	92995-06100-00	WASHER	2	
17	92990-06600-00	WASHER, PLATE	2	
18	663-82370-01-00	PLUG CAP ASSY	1	
19	90446-10M05-00	HOSE	1	

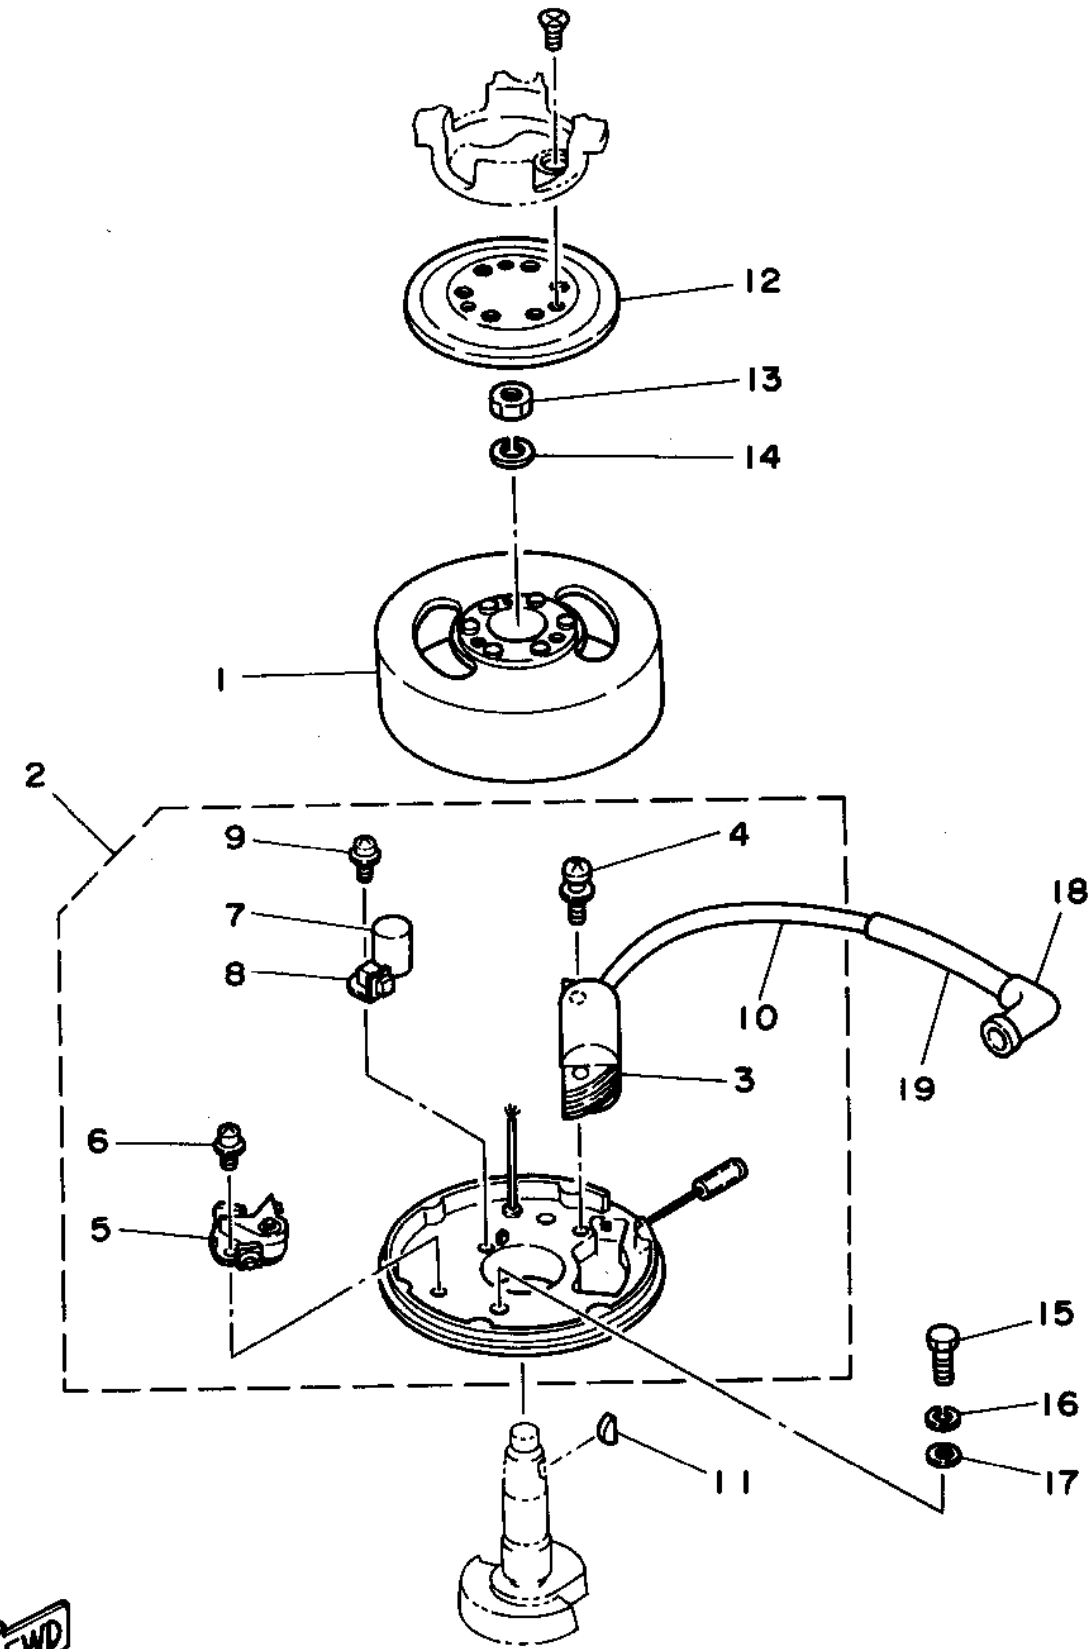

2mhs

B6