



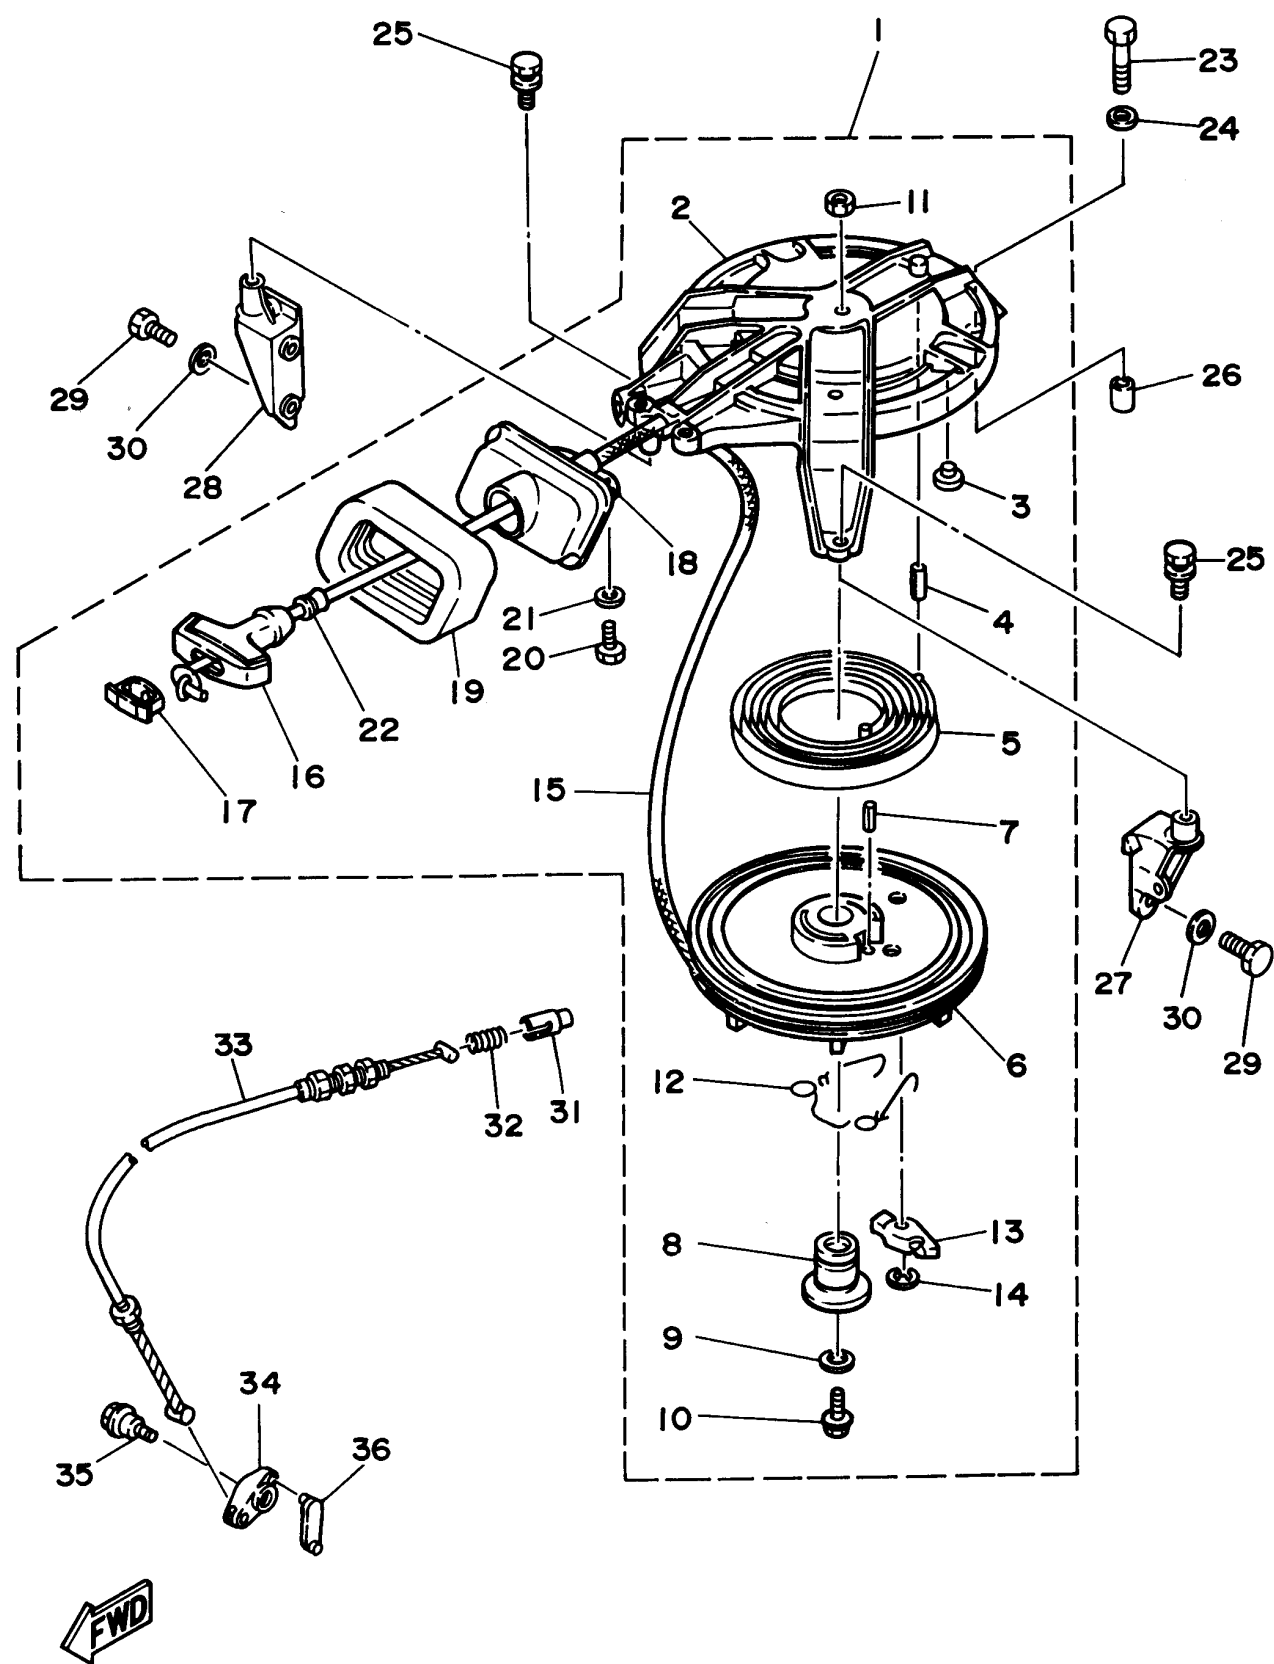

STARTER

Ref No.	Part Number	Description	Qty	Remarks
1	6E7-15710-05-4D	STARTER ASSEMBLY	1	
2	682-15711-71-94	. CASE, STARTER	1	
3	648-15773-00-00	. STAY 3	1	
4	91690-40016-00	. PIN, SPRING	1	
5	90510-08M04-00	. .SPRING, SPIRAL	1	
6	677-15714-00-94	. DRUM, SHEAVE	1	
7	91690-40020-00	. PIN, SPRING	1	
8	677-15717-01-00	. .SHAFT, STARTER	1	
9	90201-065F3-00	. WASHER, PLATE	1	
10	90119-06M34-00	. BOLT, WITH WASHER	1	
11	95601-06200-00	. NUT, U-FLANGE	1	
12	677-15705-02-00	. SPRING, DRIVE PAWL	1	
13	677-15741-01-00	. .PAWL, DRIVE	1	
14	93430-06M02-00	. .CIRCLIP	1	
15	90580-50M01-00	. ROPE, STARTER	1	
16	689-15755-01-00	. .HANDLE, STARTER	1	
17	6F5-15779-02-00	. .COVER	1	
18	682-15758-00-4D	. GUIDE, ROPE	1	
19	682-15761-10-00	. SEAL, RUBBER 1	1	
20	97095-06016-00	. BOLT	2	

CONTINUED ON NEXT FRAME >

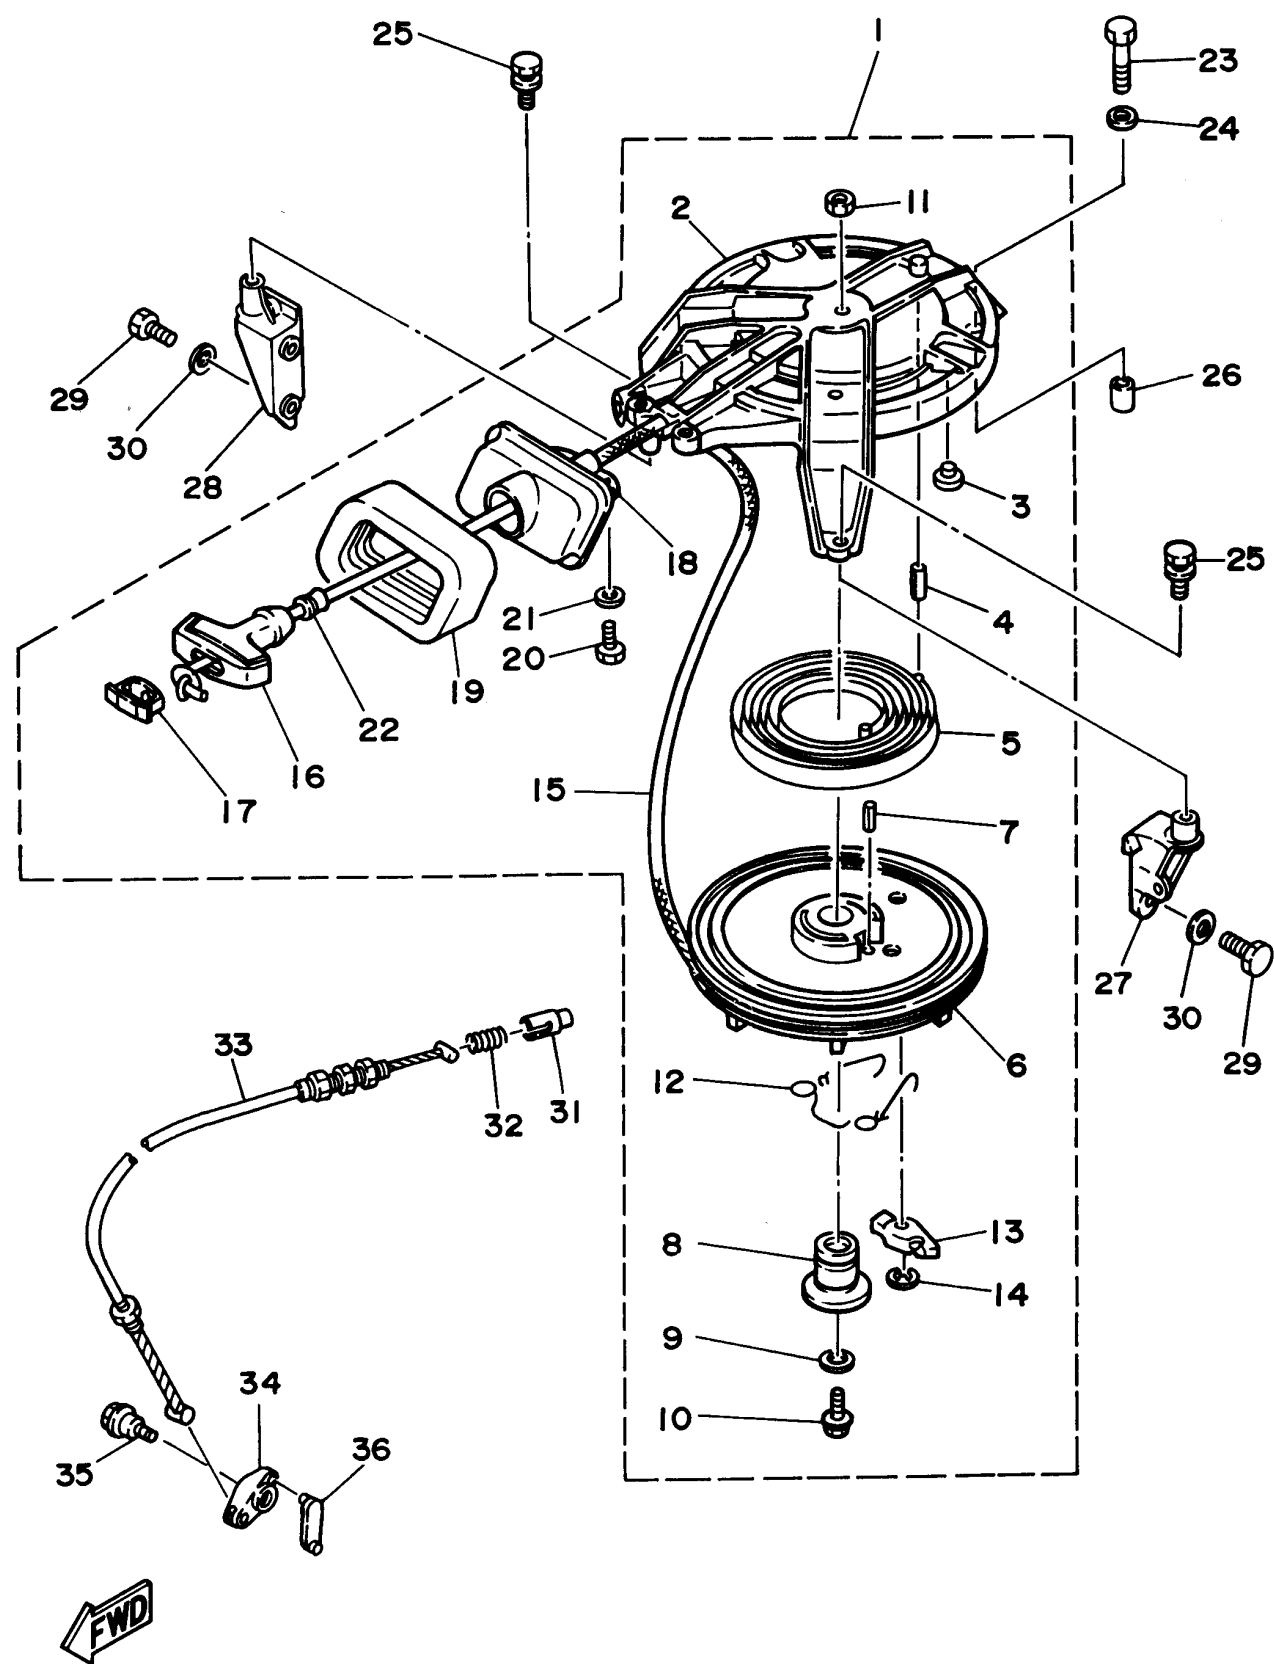

STARTER

Ref No.	Part Number	Description	Qty	Remarks
21	92990-06600-00	. .WASHER, PLATE	2	
22	689-15789-00-00	. DAMPER	1	
23	97095-06035-00	BOLT	1	
24	92990-06600-00	.WASHER, PLATE	1	
25	97595-06520-00	BOLT, WITH WASHER	2	
26	99530-10014-00	PIN, DOWEL	1	
27	6E7-15771-01-94	STAY 1	1	
28	6E7-15771-80-94	STAY 1	1	
29	97313-06018-00	BOLT	4	
30	92990-06600-00	.WASHER, PLATE	4	
31	656-15748-00-00	PLUNGER, STARTER STOP	1	
32	90501-10227-00	SPRING, COMPRESSION	1	
33	682-15770-00-00	CABLE COMP., STARTER STOP	1	
34	682-15746-00-00	ARM	1	
35	90109-06M04-00	BOLT	1	
36	682-15747-00-00	LINK	1	