


POWER TRIM TILT ASSEMBLY 1

Ref No.	Part Number	Description	Qty	Remarks
1	61A-43800-21-4D	POWER TRIM & TILT ASSEMBLY	1	
2	61A-43840-00-00	. POWER TILT ASSEMBLY	1	
3	61A-43810-00-00	...TILT PISTON SUB ASSY	1	
4	6H1-43861-00-00	...O-RING	1	
5	61A-43861-00-00	.. O-RING	1	
6	61A-43871-00-00	...RING, BACK UP	1	
7	61A-43861-00-00	.. O-RING	1	
8	6H1-43814-11-00	...PISTON, FREE	1	
9	61A-43813-00-00	.. CYLINDER, TILT	1	
10	97595-06420-00	. BOLT, WITH WASHER	6	
11	61A-43835-00-00	. PIPE	1	
12	61A-43833-00-00	. PIPE	1	
13	61A-43818-00-00	. PIN, LOWER SHOCK MOUNT	1	
14	90386-18M14-00	. BUSH	2	
15	6H1-43817-00-00	..FILTER 2	1	
16	98511-04030-00	. SCREW, PAN HEAD	3	
17	92901-04100-00	. WASHER, SPRING	3	
18	61A-43828-00-00	..BODY, RESERVOIR	1	
19	6H1-43869-00-00	. O-RING	2	
20	61A-4384L-00-00	..SPRING, TRIM DOWN	1	


CONTINUED ON NEXT FRAME >

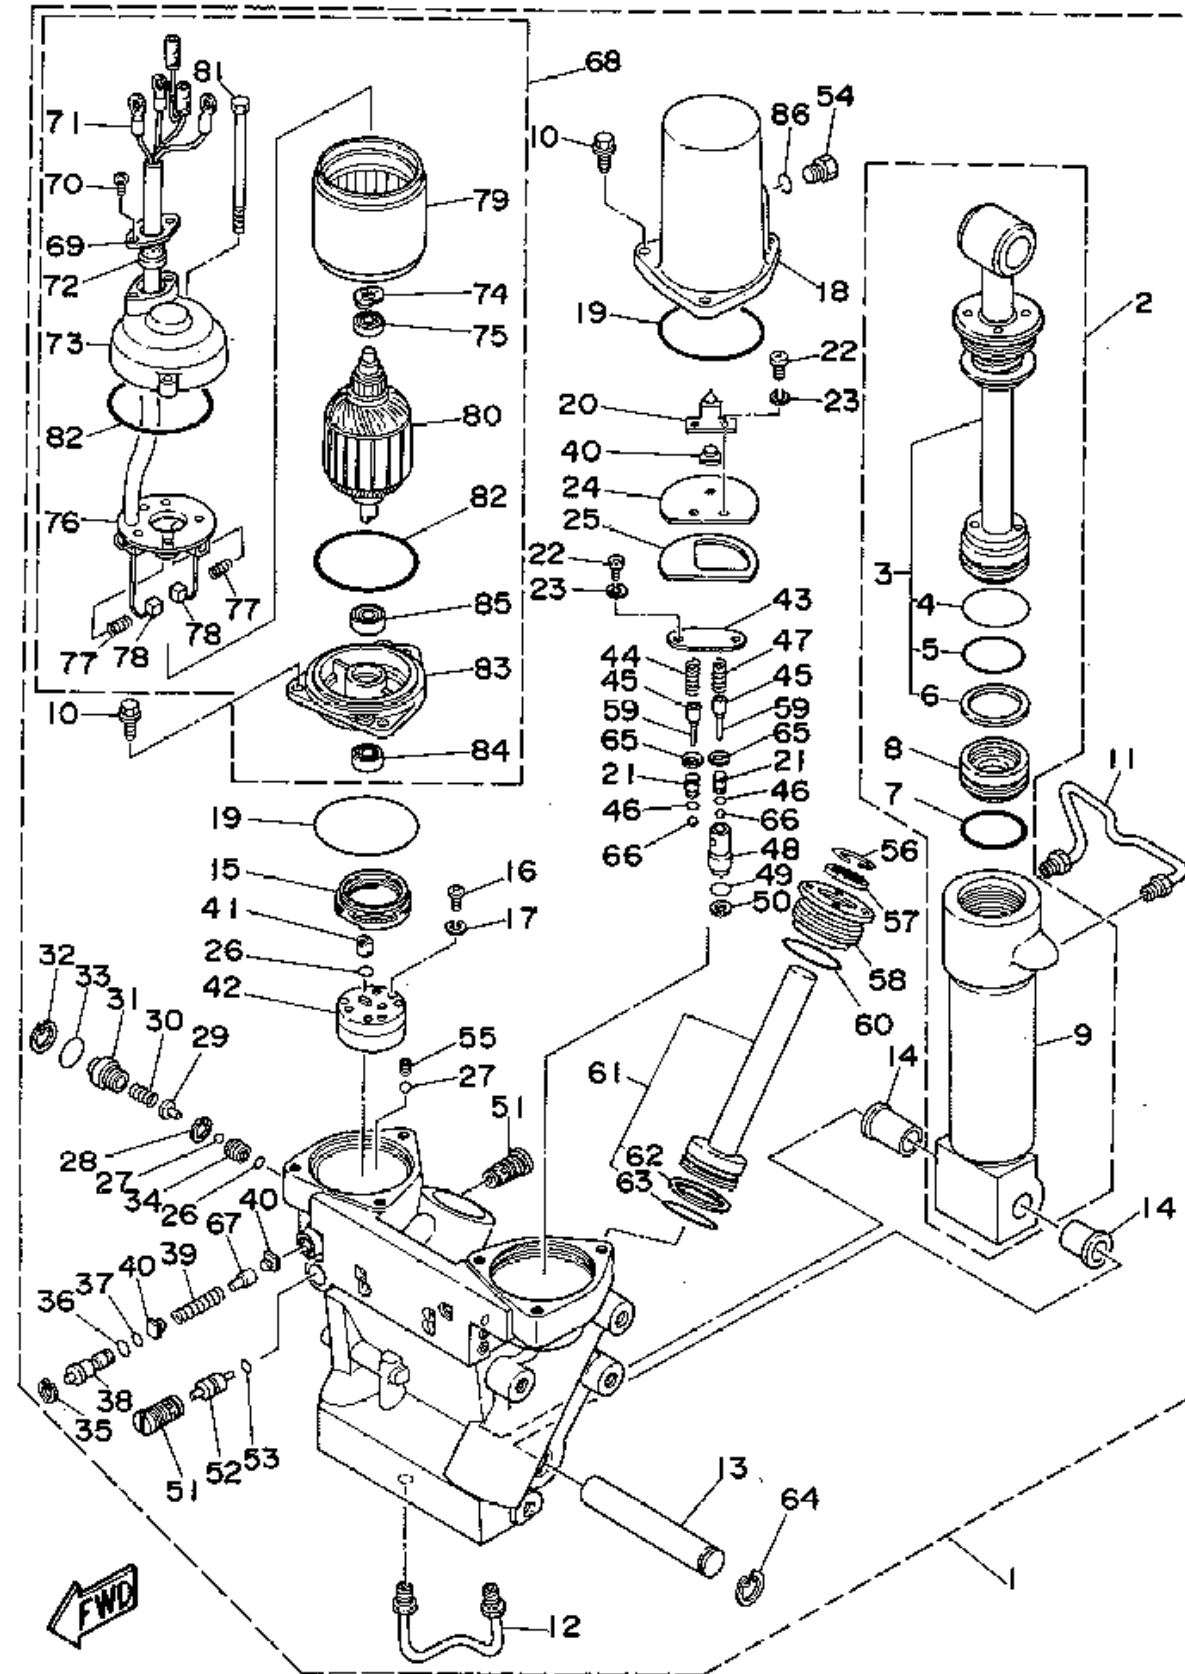

POWER TRIM TILT ASSEMBLY 1

Ref No.	Part Number	Description	Qty	Remarks
21	6T4-43851-00-00	..SEAT, RELIEF VALVE	2	
22	98580-05010-00	..SCREW, PAN HEAD	4	
23	92990-05100-00	..WASHER, SPRING	4	
24	61A-4384K-00-00	..PLATE, TRIM DOWN	1	
25	61A-4384J-00-00	..SEAL, TRIM DOWN	1	
26	93210-06519-00	..O-RING	2	
27	93505-32038-00	..BALL	2	
28	61A-43875-00-00	..RING, SNAP	1	
29	61A-43848-00-00	..ROD, MANUAL RELEASE	1	
30	61A-43854-00-00	..SPRING, MANUAL RELEASE	1	
31	61A-43845-00-00	..SCREW, MANUAL RELEASE	1	
32	6H1-43875-00-00	..RING, SNAP	1	
33	93210-18M75-00	..O-RING	1	
34	61A-43847-00-00	..SEAT, MANUAL VALVE	1	
35	6T4-43876-00-00	..RING, SNAP	1	
36	6H1-43868-00-00	..O-RING	1	
37	93210-06632-00	..O-RING	1	
38	6T4-43849-00-00	..PIN, VALVE SUPPORT	1	
39	61A-4385H-00-00	..SPRING, SEAL	1	
40	61A-4384F-00-00	..SEAL, MAIN VALVE	2	


CONTINUED ON NEXT FRAME >

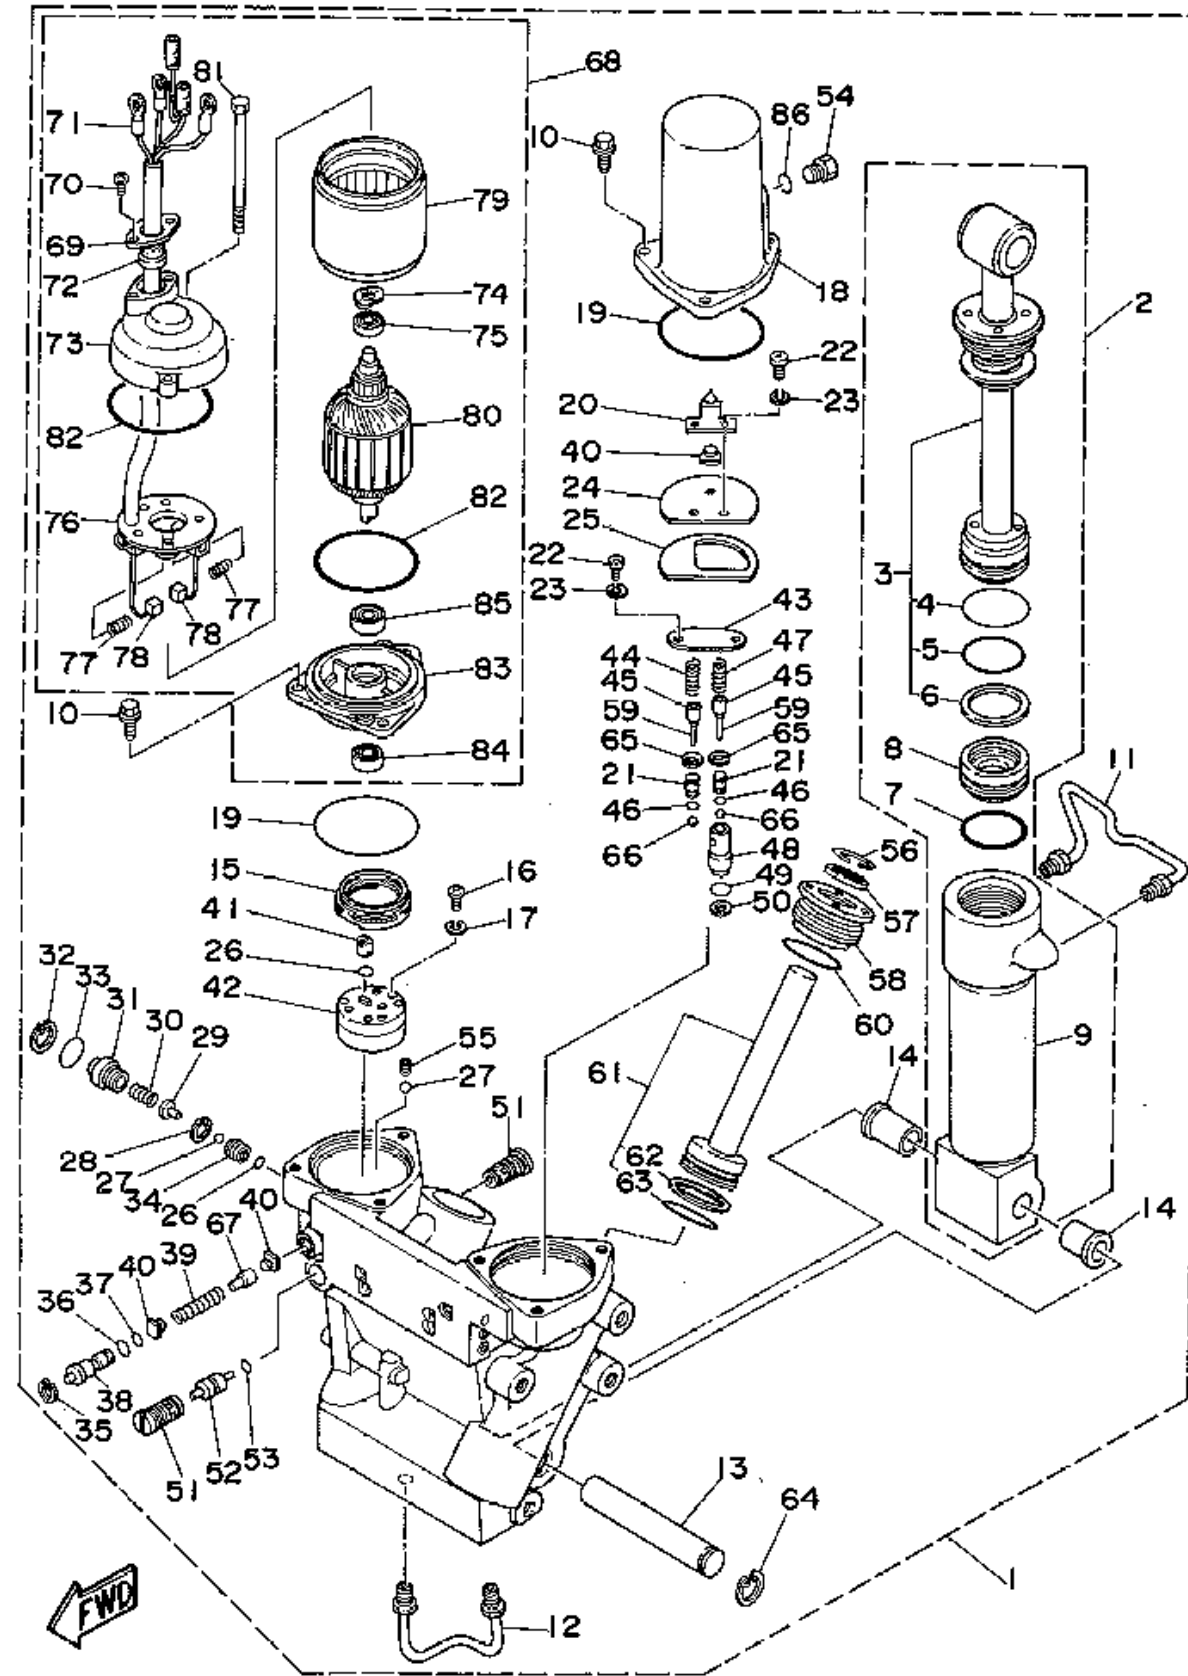

POWER TRIM TILT ASSEMBLY 1

Ref No.	Part Number	Description	Qty	Remarks
61	61A-43820-00-00	. PISTON SUB ASSEMBLY	2	
62	61A-43874-00-00	.. RING, BACK UP	1	
63	61A-43864-00-00	.. O-RING	1	
64	61A-43876-00-00	. RING, SNAP	1	
65	6T4-43893-00-00	.. WASHER	2	
66	93501-08001-00	.. BALL	2	
67	61A-4382A-00-00	.. ADAPTOR 1	1	
68	61A-43880-01-00	. MOTOR ASSEMBLY	1	
69	6T4-4386J-00-00	.. WASHER, SPECIAL	1	
70	90157-05107-00SCREW, PAN HEAD	2	
71	61A-43807-00-00WIRE SUB ASSY	1	
72	6T4-43885-00-00	.. GROMMET	1	
73	61A-43884-00-00	.. FRAME, COMMUTATOR END	1	
74	90206-14086-00	.. WASHER, WAVE	3	
75	93300-60820-00	.. BEARING	1	
76	61A-43806-00-00BRUSH HOLDER ASSY	1	
77	61A-4386K-00-00SPRING, BRUSH	4	
78	61A-43891-00-00BRUSH 1	2	
79	61A-43804-00-00	.. STATOR ASSEMBLY	1	
80	61A-43805-01-00ARMATURE ASSY	1	

CONTINUED ON NEXT FRAME >

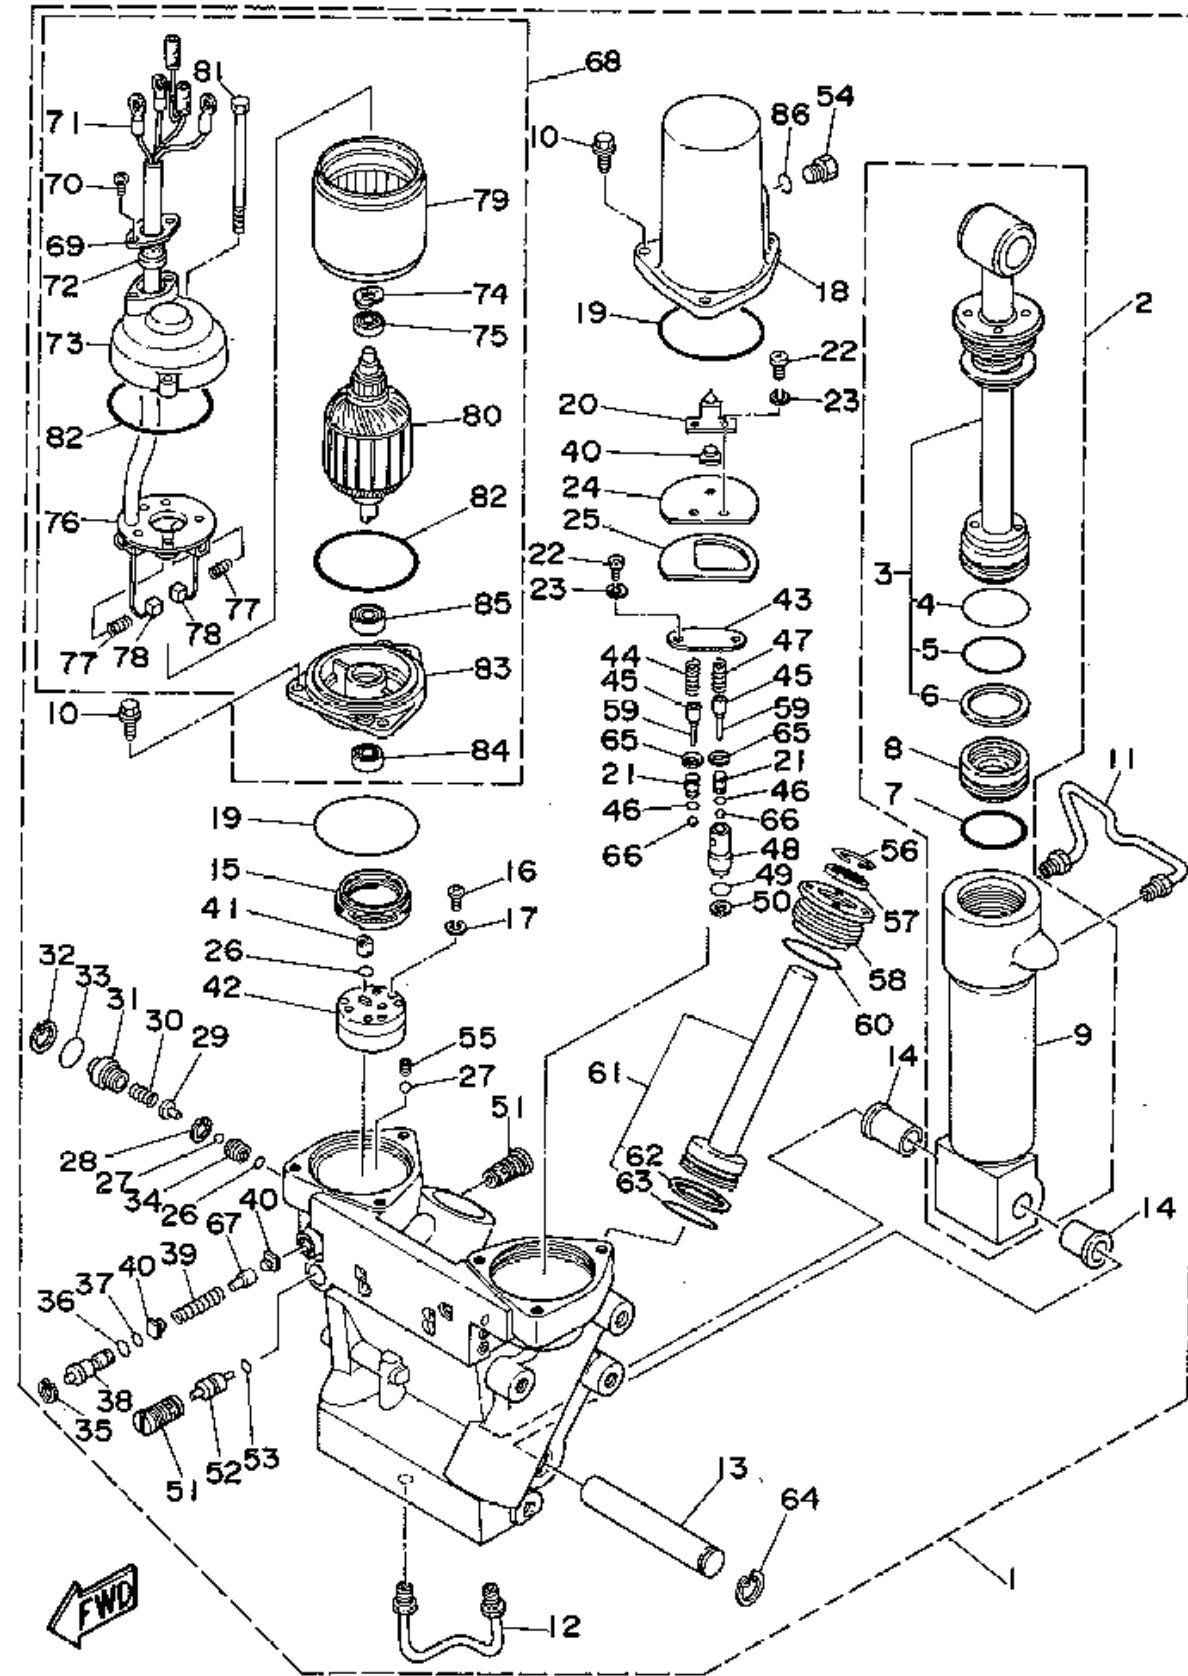

POWER TRIM TILT ASSEMBLY 1

Ref No.	Part Number	Description	Qty	Remarks
81	61A-43887-00-00	...BOLT, THROUGH	2	
82	93210-72789-00	...O-RING	2	
83	61A-43881-00-00	.. FRAME, END	1	
84	93102-08414-00	...OIL SEAL	1	
85	93300-60820-00	.. BEARING	1	
86	93210-09350-00	. O-RING	1	