



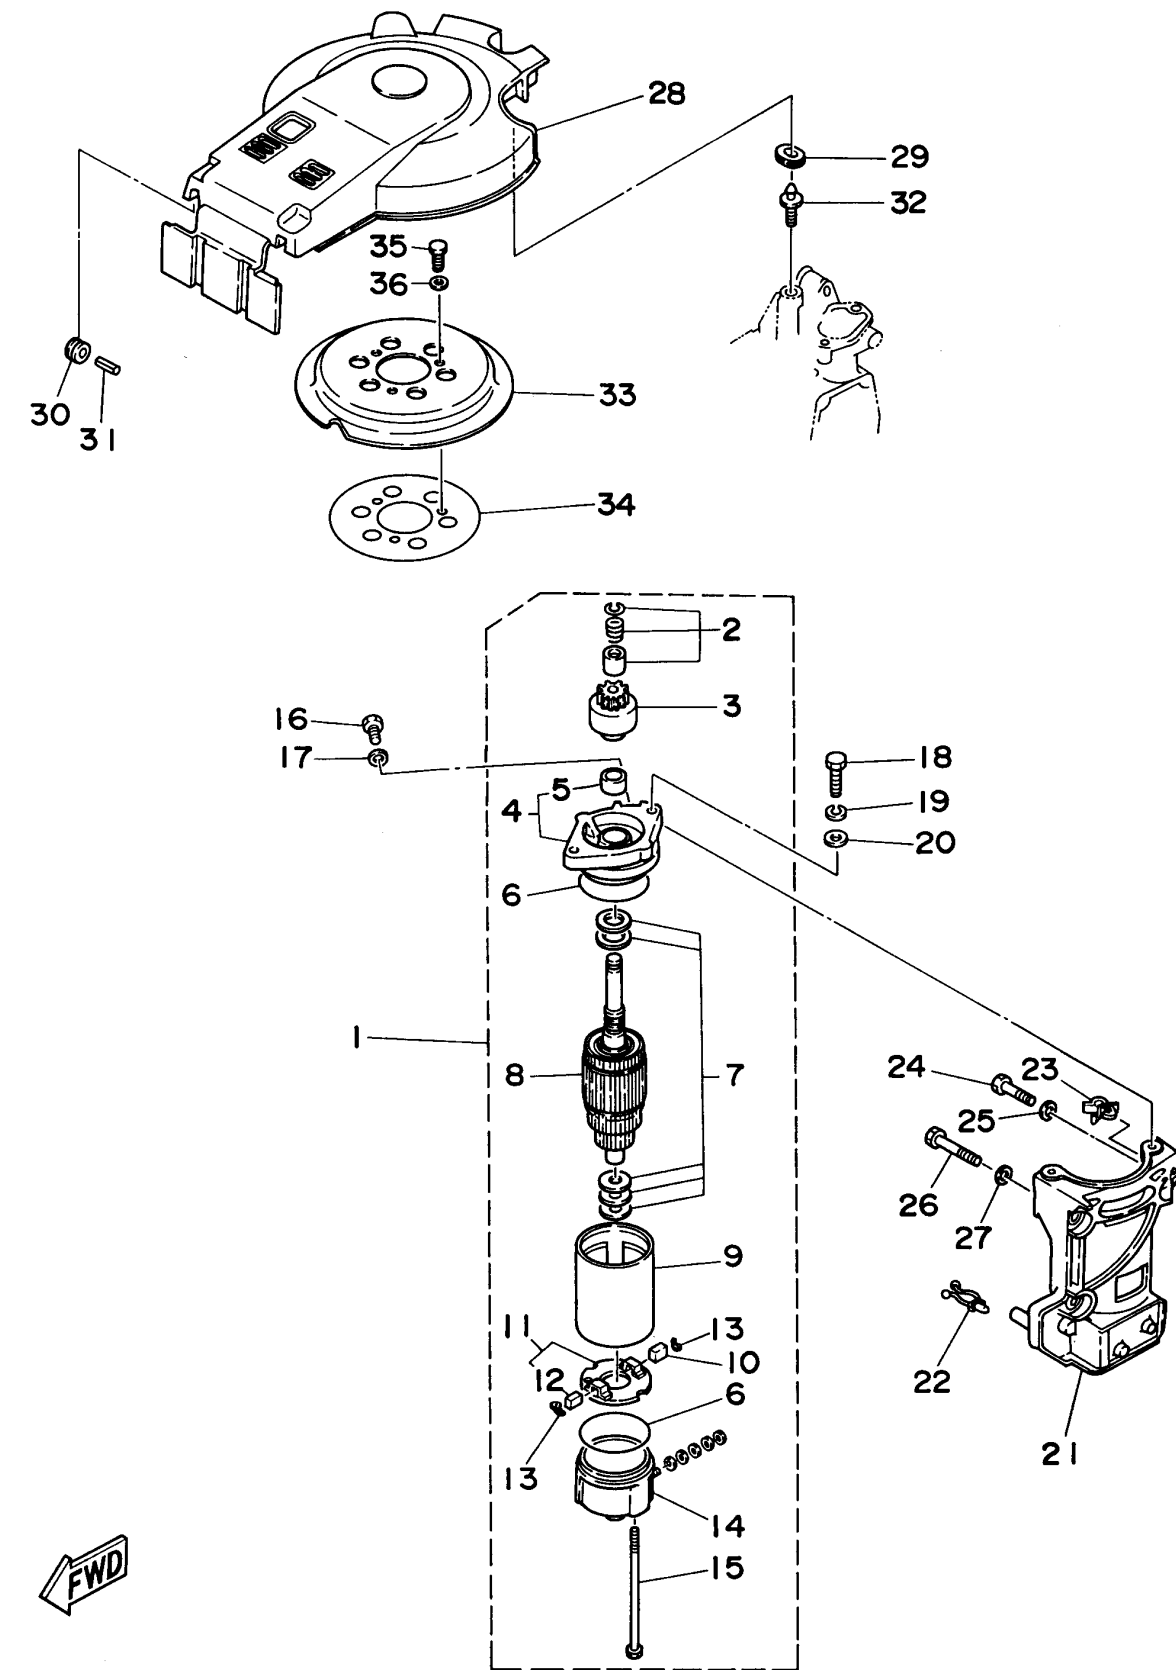

STARTING MOTOR (EH ER))

Ref No.	Part Number	Description	Qty	Remarks
1	6F5-81800-11-00	STARTING MOTOR ASSY	1	
2	689-81857-11-00	. PINION STOPPER SET	1	
3	689-81807-12-00	. GEAR ASSY, STARTING MOTOR	1	
4	6F5-81830-11-00	. .FRONT BRACKET ASSY	1	
5	689-81831-00-00	. . METAL, FRONT	1	
6	689-81847-11-00	. O-RING	2	
7	689-81809-11-00	. WASHER KIT	1	
8	689-81850-12-00	. ARMATURE ASSY	1	
9	689-81810-11-00	. STATOR ASSY	1	
10	689-81811-11-00	. BRUSH 1	1	
11	689-81840-11-00	. BRUSH HOLDER ASSY	1	
12	689-81812-11-00	. . BRUSH 2	1	
13	689-81813-10-00	. SPRING, BRUSH	2	
14	689-81820-11-00	. REAR BRACKET ASSEMBLY	1	
15	689-81826-10-00	. BOLT	2	
16	97313-08016-00	BOLT, HEXAGON	1	
17	92990-08600-00	.WASHER, PLATE	1	
18	97013-08030-00	BOLT	2	
19	92990-08100-00	.WASHER, SPRING	2	
20	92990-08600-00	.WASHER, PLATE	2	

CONTINUED ON NEXT FRAME >

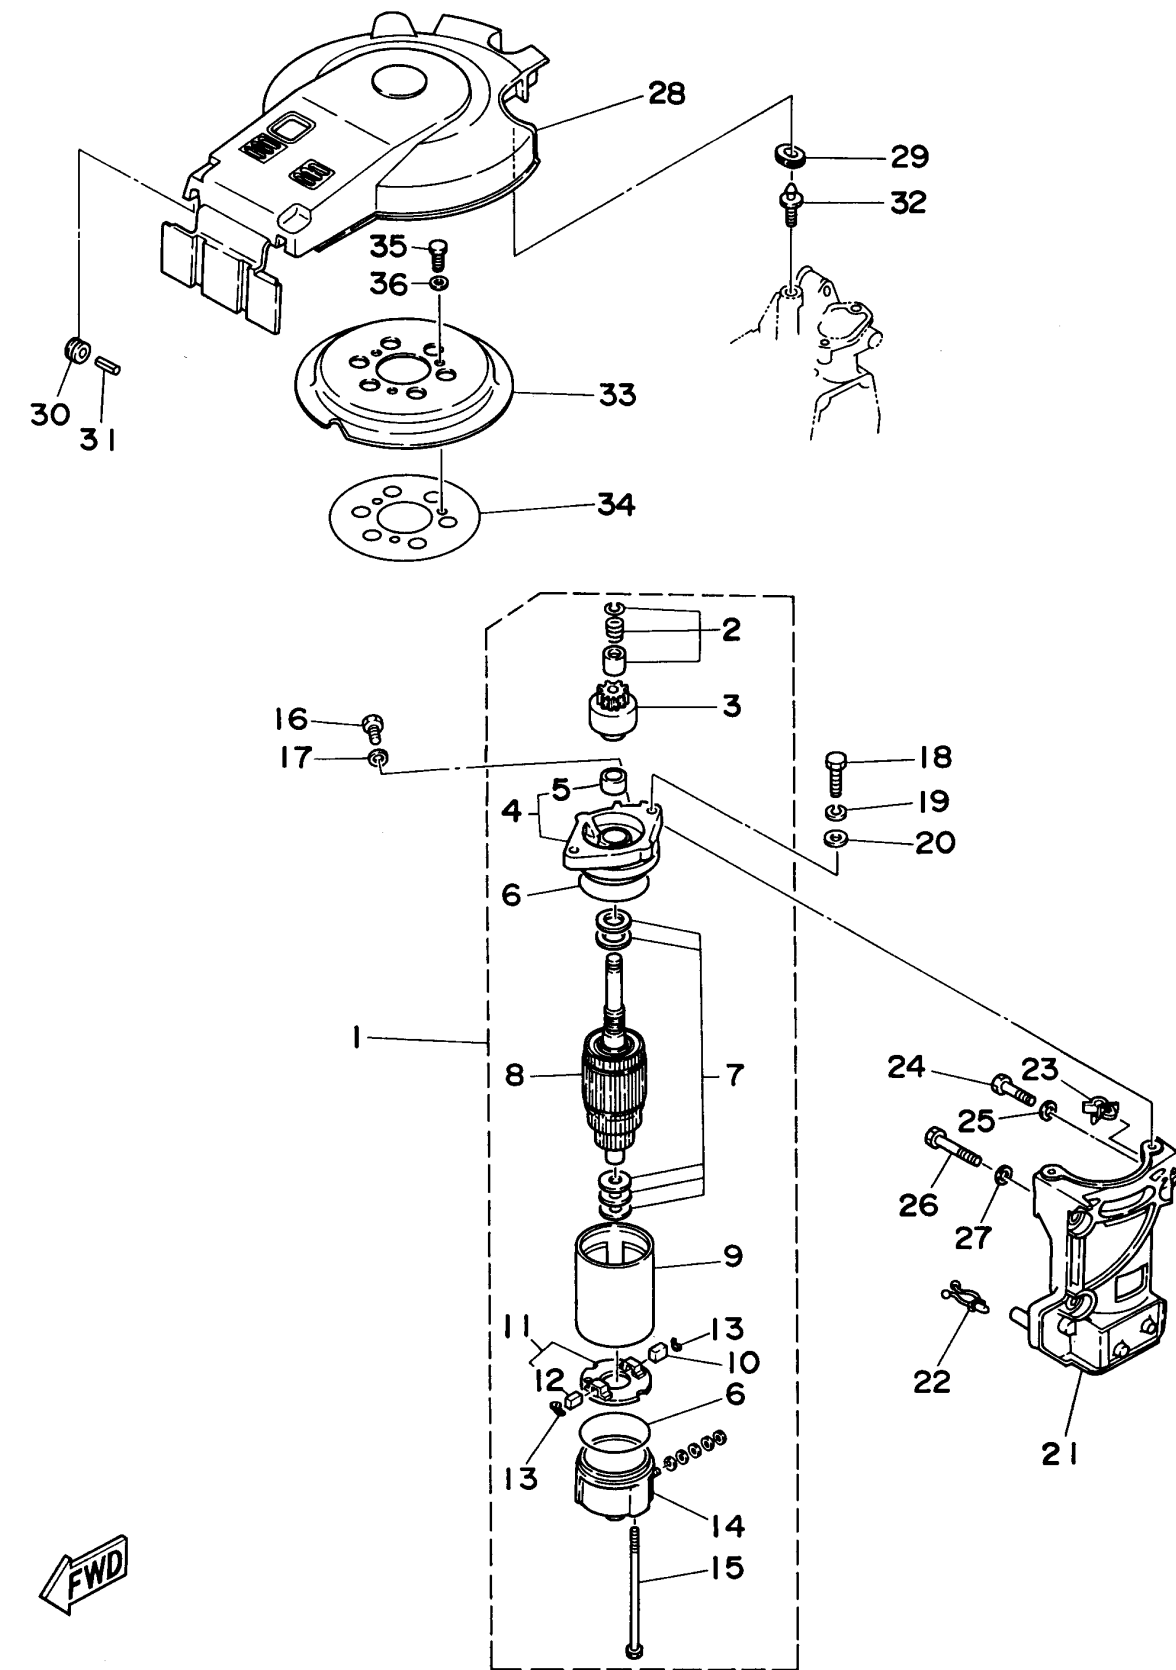

STARTING MOTOR (EH ER))

Ref No.	Part Number	Description	Qty	Remarks
21	6J8-81822-00-94	BRACKET, STARTING MOTOR	1	
22	90464-12M17-00	CLAMP	2	
23	90464-03M15-00	.CLAMP	1	
24	97013-08035-00	BOLT	2	
25	92990-08600-00	.WASHER, PLATE	2	
26	97013-08055-00	BOLT	1	
27	92990-08600-00	.WASHER, PLATE	1	
28	6J8-81337-10-00	COVER, FLYWHEEL	1	
29	90480-14M17-00	GROMMET	1	
30	90480-10M16-00	.GROMMET	2	
31	91690-50022-00	PIN, SPRING	2	
32	6J8-81338-00-00	STAY	1	
33	6J8-15723-E1-00	PULLEY, STARTER	1	
34	6J8-81365-A0-00	GASKET, HOLE COVER	1	
35	97017-08016-00	BOLT	3	
36	92990-08600-00	.WASHER, PLATE	3	