


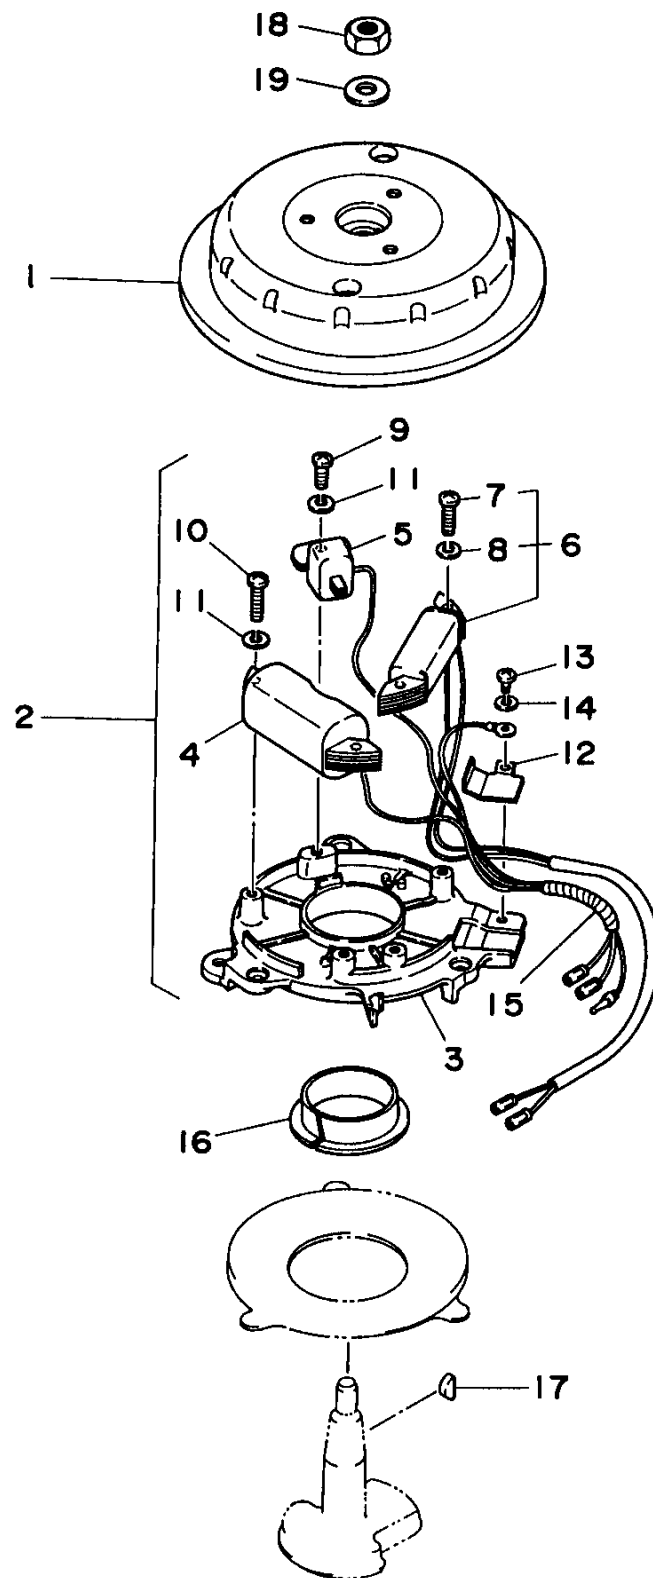

GENERATOR

Ref No.	Part Number	Description	Qty	Remarks
1	6G1-85550-71-00	ROTOR ASSEMBLY	1	
2	6G1-85560-F0-00	BASE ASSY	1	
3	6G1-85509-70-00	. .BASE, MAGNETO	1	
4	6E7-85520-70-00	. .COIL, CHARGE	1	
5	6E7-85580-70-00	. .COIL, PULSER	1	
6	6E7-81303-A0-00	. .LIGHTING COIL ASSY	1	
7	97802-05025-00	. . SCREW, PAN HEAD	2	
8	92990-05100-00	. . WASHER, SPRING	2	
9	97902-05116-00	. SCREW, PAN HEAD (97802-05016-00)	1	
10	97802-05020-00	. .SCREW, PAN HEAD	2	
11	92990-05100-00	. . WASHER, SPRING	3	
12	6G1-85548-70-00	. .HOLDER	1	
13	98580-04008-00	. .SCREW, PAN HEAD	1	
14	92990-04100-00	. . WASHER, SPRING	1	
15	6G1-85515-70-00	. .LEAD WIRE ASSY	1	
16	90386-44M42-00	BUSH	1	
17	90280-04M06-00	KEY, WOODRUFF	1	
18	90170-10113-00	NUT	1	
19	90201-102G9-00	WASHER, PLATE	1	



6G1JA-4150

6mhy

C6