


REPAIR KIT

Ref No.	Part Number	Description	Qty	Remarks
1	6L5-W0001-A1-00	POWER HEAD GASKET KIT	1	(3MH)
2	93101-20M29-00	. OIL SEAL	1	(3MH)
3	93101-09M42-00	. OIL SEAL	1	(3MH)
4	6L5-15369-A0-00	. GASKET, OIL SEAL HOUSING	1	(3MH)
5	6L5-11181-A2-00	. GASKET, CYLINDER HEAD 1	1	(3MH)
6	6L5-11193-A1-00	. GASKET, HEAD COVER 1	1	(3MH)
7	6L5-12414-A1-00	. GASKET, COVER	1	(3MH)
8	93102-20M06-00	. OIL SEAL	1	(3MH)
9	6L5-13621-A2-00	. GASKET, VALVE SEAT	1	(3MH)
10	6L5-14198-A1-00	. GASKET	1	(3MH)
11	6G1-14398-00-00	. WASHER	1	(3MH)
12	6L5-45113-A1-00	. GASKET, UPPER CASING	1	(3MH)
13	646-44365-00-00	. DAMPER, WATER SEAL	1	(3MH)
14	6G1-W0093-00-00	CARBURETOR REPAIR KIT	1	(3MH)
15	679-14923-00-00	. SCREW, PILOT	1	(3MH)
16	6G1-14966-00-00	. CAP	1	(3MH)
17	6G1-14126-00-00	. GASKET	1	(3MH)
18	676-14966-00-00	. CAP	1	(3MH)
19	6G1-14984-00-00	. O-RING	1	(3MH)
20	97980-04114-00	. SCREW, WITH WASHER	4	(3MH)

CONTINUED ON NEXT FRAME >

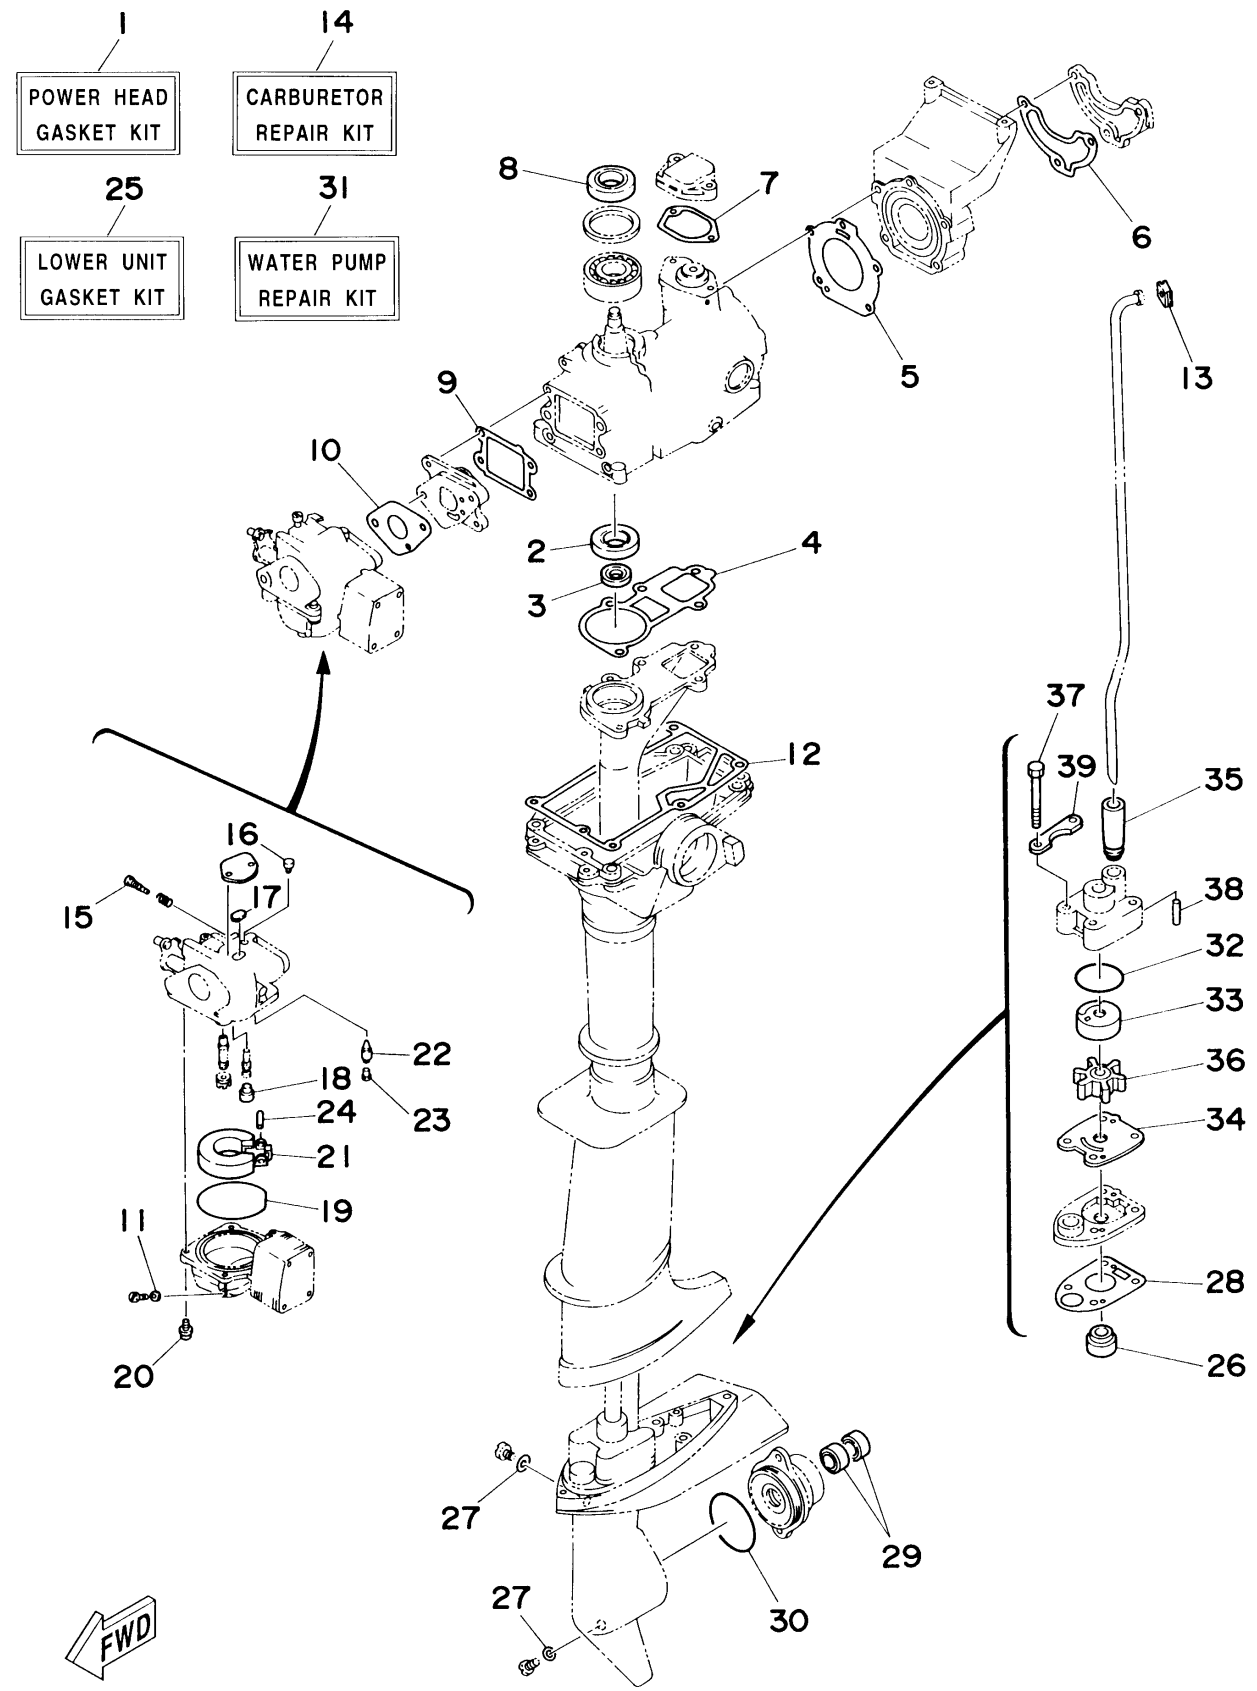

REPAIR KIT

Ref No.	Part Number	Description	Qty	Remarks
21	6G1-14985-00-00	. .FLOAT	1	(3MH)
22	6G1-14546-00-00	. .VALVE, NEEDLE	1	(3MH)
23	676-14186-00-00	. .PIN, FLOAT	1	(3MH)
24	688-14548-00-00	. .PIN, FLOAT ARM	1	(3MH)
25	6L5-W0001-21-00	LOWER UNIT GASKET KIT	1	(3MH)
26	93103-09M41-00	. .OIL SEAL	1	(3MH)
27	90430-08020-00	. .GASKET	2	(3MH)
28	6L5-45315-A0-00	. .PACKING, LOWER CASING	1	(3MH)
29	93101-13M12-00	. .OIL SEAL	2	(3MH)
30	93210-48214-00	. .O-RING	1	(3MH)
31	6L5-W0078-00-00	WATER PUMP REPAIR KIT	1	(3MH)
32	93210-33M85-00	. .O-RING	1	(3MH)
33	6L5-44322-00-00	. .INSERT, CARTRIDGE	1	(3MH)
34	6L5-44323-00-00	. .OUTER PLATE, CARTRIDGE	1	(3MH)
35	6E0-44366-00-00	. .DAMPER, WATER SEAL	1	(3MH)
36	6L5-44352-00-00	. .IMPELLER	1	(3MH)
37	97095-06040-00	. .BOLT	4	(3MH)
38	93604-18080-00	. .PIN, DOWEL	2	(3MH)
39	6L5-44328-00-00	. .PLATE	2	(3MH)