


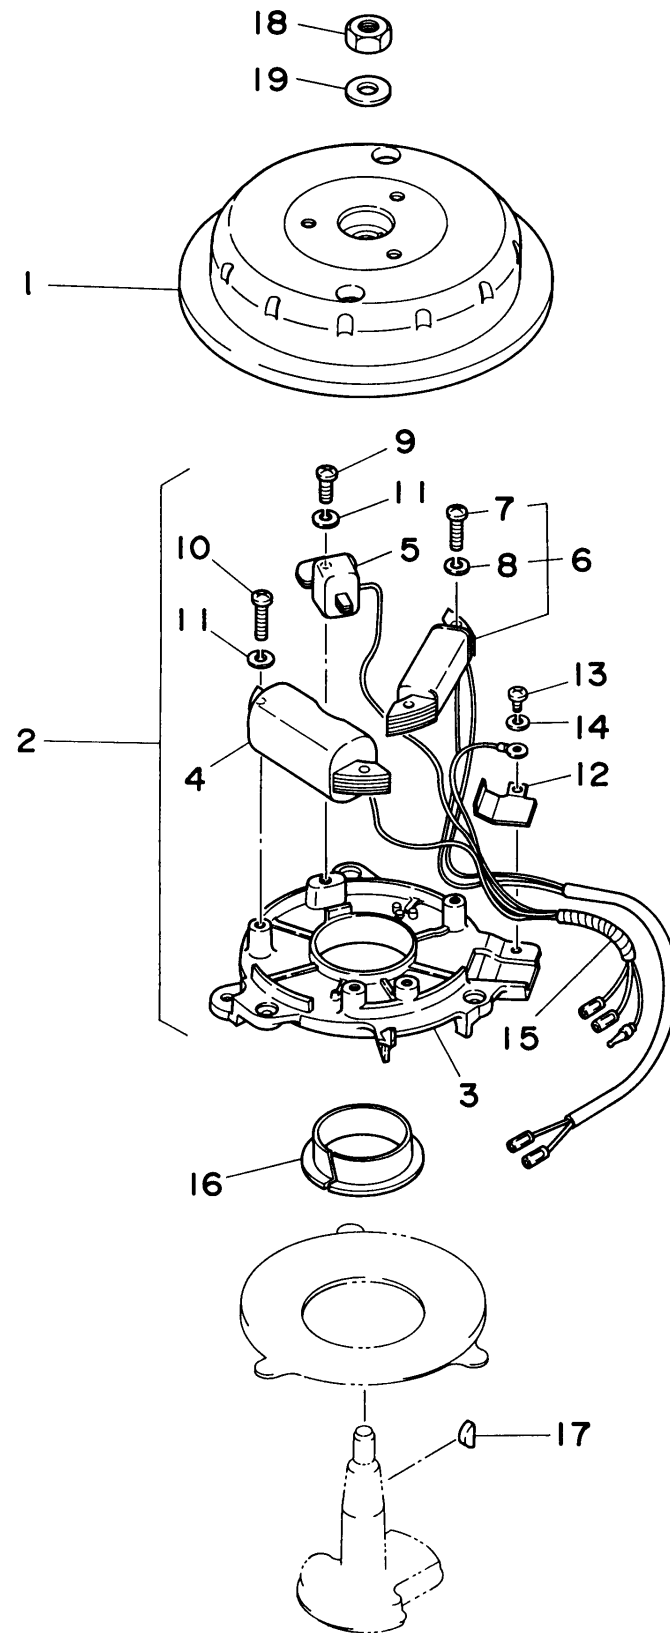

GENERATOR

Ref No.	Part Number	Description	Qty	Remarks
1	6G1-85550-A0-00	ROTOR ASSY	1	(8MH)
2	6G1-85560-F0-00	BASE ASSY	1	(8MH)
3	6G1-85509-70-00	. .BASE, MAGNETO	1	(8MH)
4	6E7-85520-70-00	. .COIL, CHARGE	1	(8MH)
5	6E7-85580-70-00	. .COIL, PULSER	1	(8MH)
6	6E7-81303-A0-00	. .LIGHTING COIL ASSY	1	(8MH)
7	97802-05025-00	. . SCREW, PAN HEAD	2	(8MH)
8	92902-05100-00	. . .WASHER, SPRING	2	(8MH)
9	97802-05016-00	. .SCREW, PAN HEAD	1	(8MH)
10	97802-05020-00	. .SCREW, PAN HEAD	2	(8MH)
11	92902-05100-00	. .WASHER, SPRING	3	(8MH)
12	6G1-85548-70-00	. .HOLDER	1	(8MH)
13	97802-04008-00	. .SCREW, PAN HEAD	1	(8MH)
14	92902-04100-00	. .WASHER, SPRING	1	(8MH)
15	6G1-85515-70-00	. .LEAD WIRE ASSY	1	(8MH)
16	90386-44M42-00	BUSH	1	(8MH)
17	90280-04M06-00	KEY, WOODRUFF	1	(8MH)
18	90170-10113-00	NUT	1	(8MH)
19	90201-10126-00	WASHER, PLATE	1	(8MH)

