


FUEL

Ref No.	Part Number	Description	Qty	Remarks
1	61A-24313-00-00	PIPE 3	1	
2	90445-13M17-00	HOSE (L2700)	1	
3	6R3-24377-00-00	PIPE, JOINT 2	1	
4	90465-11M10-00	CLAMP	4	
5	65L-24560-00-00	FILTER ASSY	1	
6	61A-24521-00-00	. CUP, FILTER	1	
7	65L-24531-01-00	. .NUT	1	
8	61A-24564-00-00	. O-RING	1	
9	65L-24577-00-00	. SPRING	1	
10	65L-24563-00-00	. ELEMENT, FILTER	1	
11	61A-24469-00-00	. FLOAT, WATER LEVEL	1	
12	65L-24564-00-00	. .O-RING	1	
13	60H-24558-00-00	HOLDER, FILTER	1	
14	97095-06016-00	BOLT	1	
15	92995-06100-00	WASHER, SPRING	1	
16	90201-06068-00	WASHER, PLATE	1	
17	67H-24566-00-00	BRACKET, FILTER	1	
18	97095-06014-00	BOLT	1	
19	92995-06600-00	WASHER	1	
20	97095-06016-00	BOLT	2	


CONTINUED ON NEXT FRAME >

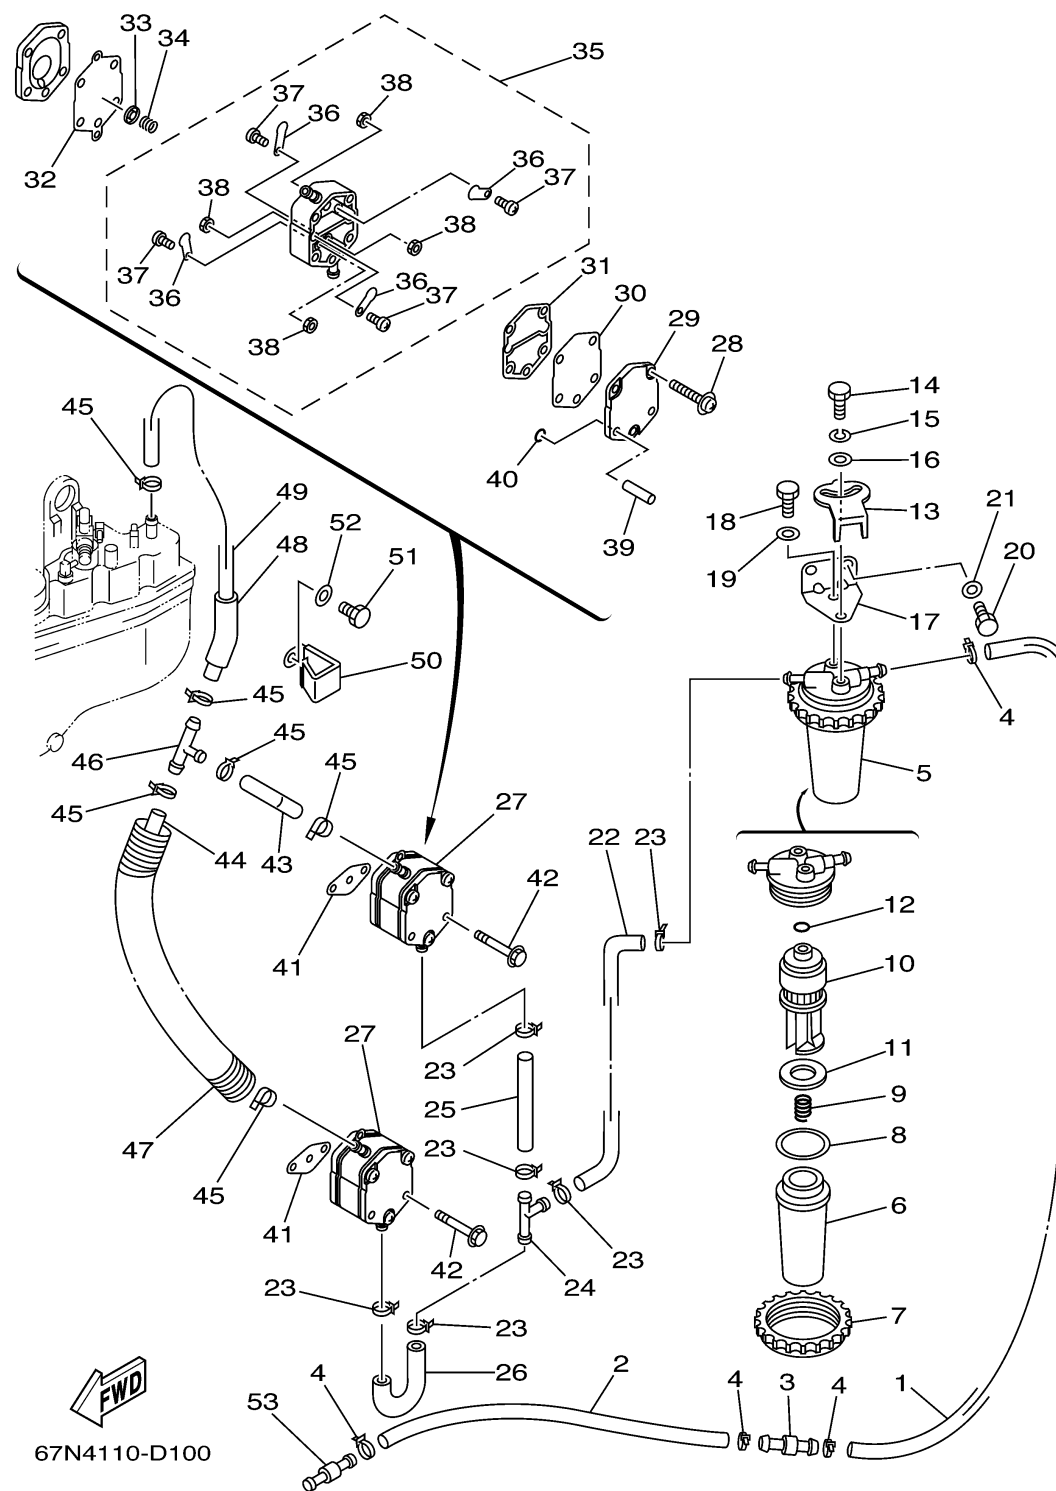

FUEL

Ref No.	Part Number	Description	Qty	Remarks
21	92995-06600-00	WASHER	2	
22	68F-24311-00-00	PIPE, FUEL 1	1	
23	90465-11M10-00	CLAMP	6	
24	6E5-24378-00-00	PIPE, JOINT 3	1	
25	90445-13M31-00	HOSE (L85)	1	
26	67H-24311-00-00	PIPE, FUEL 1	1	
27	6E5-24410-04-00	FUEL PUMP ASSY	2	
28	6E5-24444-01-00	..SCREW	3	
29	6E5-24413-01-00	..BODY 2	1	
30	6E5-24471-01-00	..DIAPHRAGM	1	
31	6E5-24435-01-00	..GASKET, BODY 2	1	
32	6E5-24411-01-00	..DIAPHRAGM	1	
33	648-24424-00-00	..SEAT, SPRING	1	
34	6E5-24423-00-00	..SPRING, DIAPHRAGM	1	
35	6E5-24412-11-00	..BODY 1	1	
36	6A0-24421-01-00	...VALVE, CHECK	4	
37	6A0-14325-00-00	...SCREW, PAN HEAD	4	
38	95380-03600-00	...NUT	4	
39	6E5-24492-00-00	...BUSH, FUEL PUMP	2	
40	6E5-24486-00-00	..O-RING	2	

CONTINUED ON NEXT FRAME >

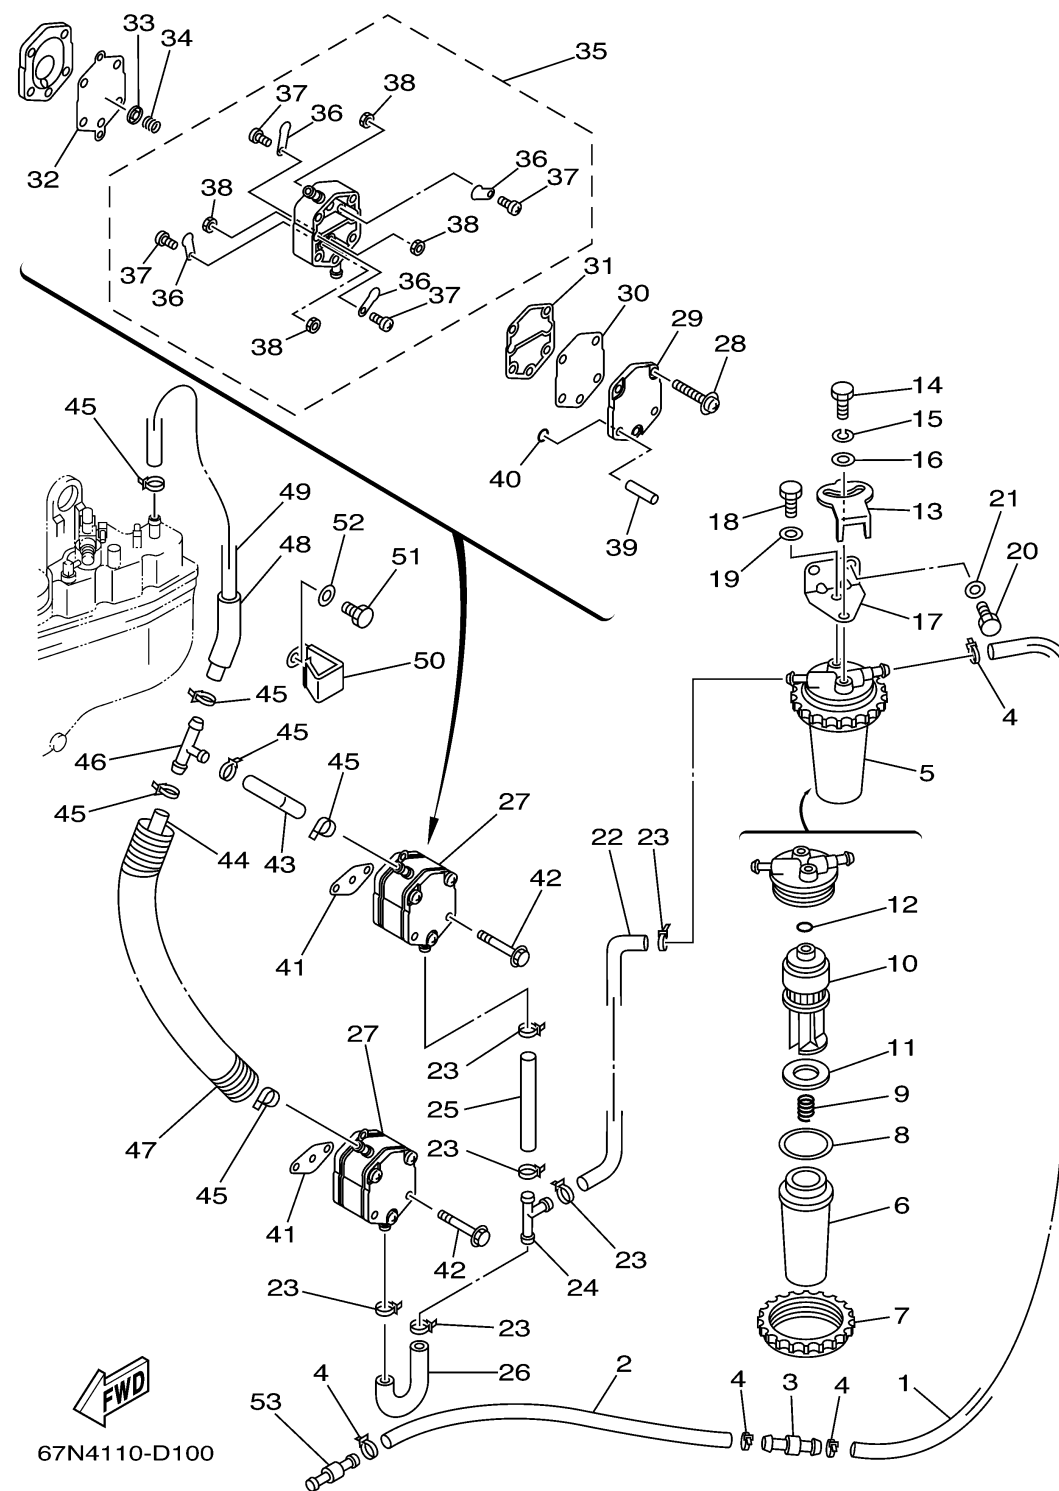

FUEL

Ref No.	Part Number	Description	Qty	Remarks
41	650-24431-A0-00	GASKET, FUEL PUMP 1	2	
42	97595-06550-00	BOLT, WITH WASHER	4	
43	61U-24316-00-00	PIPE 6	1	
44	6E5-24313-00-00	PIPE 3	1	
45	90465-11M10-00	CLAMP	6	
46	6E5-24378-00-00	PIPE, JOINT 3	1	
47	6H1-83557-00-00	TUBE	1	
48	90446-15M07-00	HOSE (L60)	1	
49	90445-13M12-00	HOSE (L235)	1	
50	90465-05M87-00	CLAMP	1	
51	97095-06012-00	BOLT	1	
52	92995-06600-00	WASHER	1	
53	6R3-24377-10-00	PIPE, JOINT 2	1	