



FUEL INJECTION PUMP 1

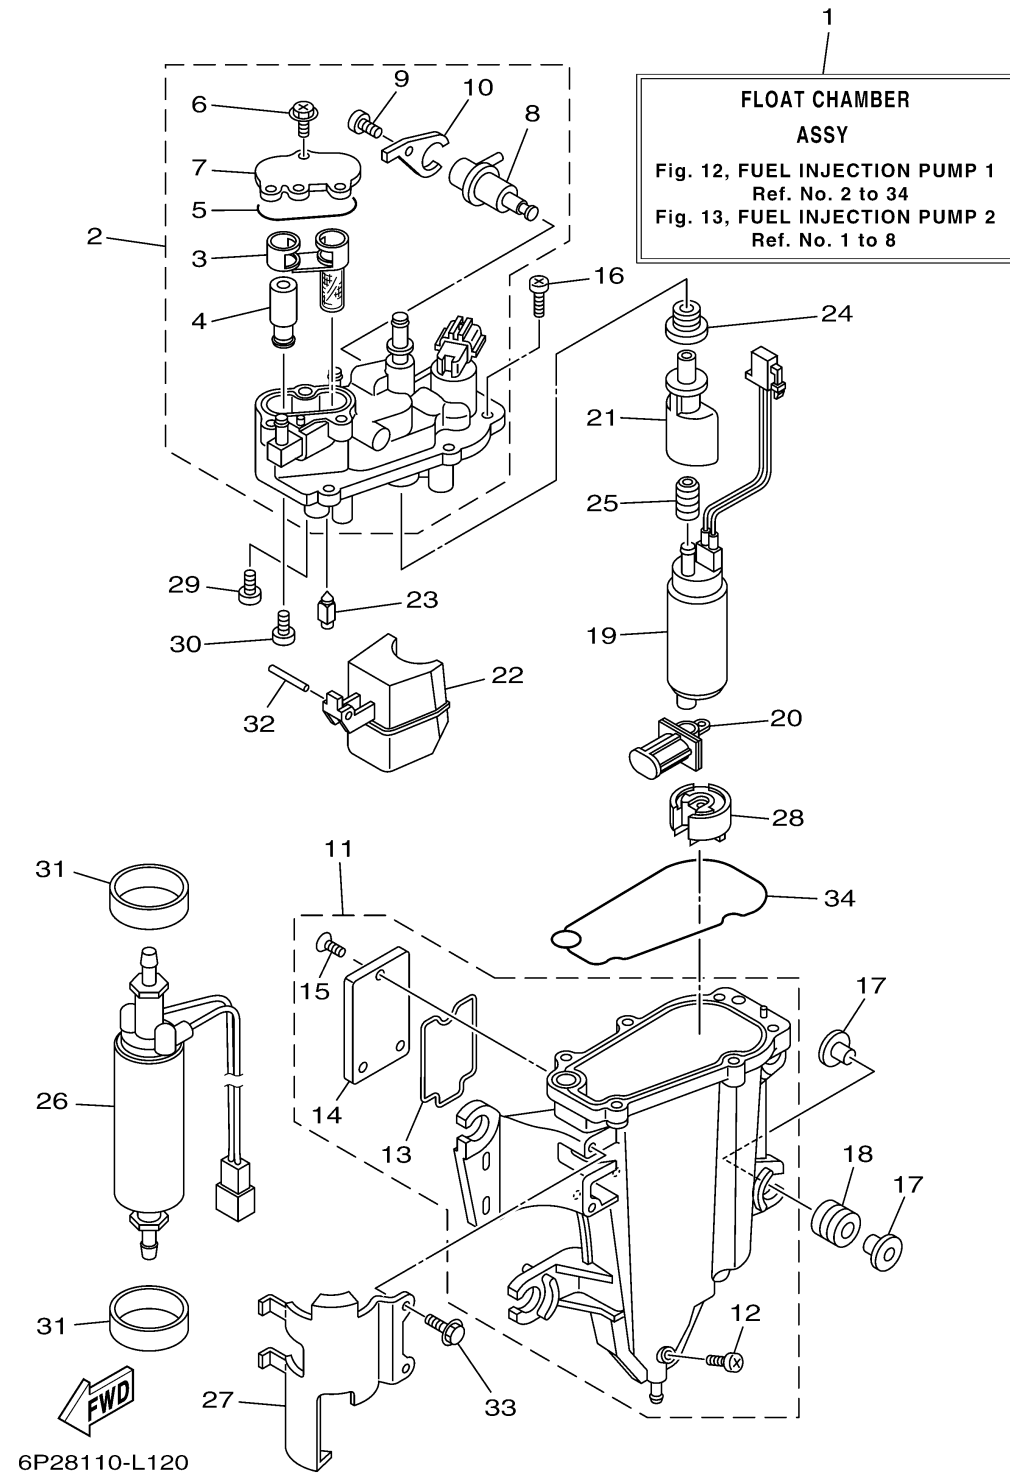

Ref No.	Part Number	Description	Qty	Remarks
1	6P2-14180-30-00	FLOAT CHAMBER ASSY	1	
2	6AW-14182-10-00	COVER, FLOAT CHAMBER	1	
3	6CB-24501-01-00	. .FILTER, FUEL	1	
4	6CB-24460-00-00	. .RELIEF VALVE ASSY	1	
5	6CB-13016-00-00	. .O-RING	1	
6	6CB-14216-00-00	. .SCREW	3	
7	6CB-24217-00-00	. .COVER	1	
8	6CB-13906-01-00	. .REGULATOR, PRESSURE	1	
9	6CB-14564-00-00	. .SCREW	1	
10	6CB-14146-00-00	. .PLATE	1	
11	6AW-14181-10-00	BODY, FLOAT CHAMBER 1	1	
12	6P2-14191-00-00	. .PLUG, DRAIN	1	
13	6CB-14239-00-00	. .SEAL	1	
14	6CB-24452-00-00	. .COVER	1	
15	6CB-14429-00-00	. .SCREW	3	
16	63P-14567-00-00	SCREW	6	
17	69J-13716-00-00	. .COLLAR	8	
18	6CB-13593-00-00	. .DAMPER	4	
19	6P2-13907-20-00	FUEL PUMP COMP.	1	
20	63P-13915-00-00	FILTER	1	

CONTINUED ON NEXT FRAME >

FUEL INJECTION PUMP 1

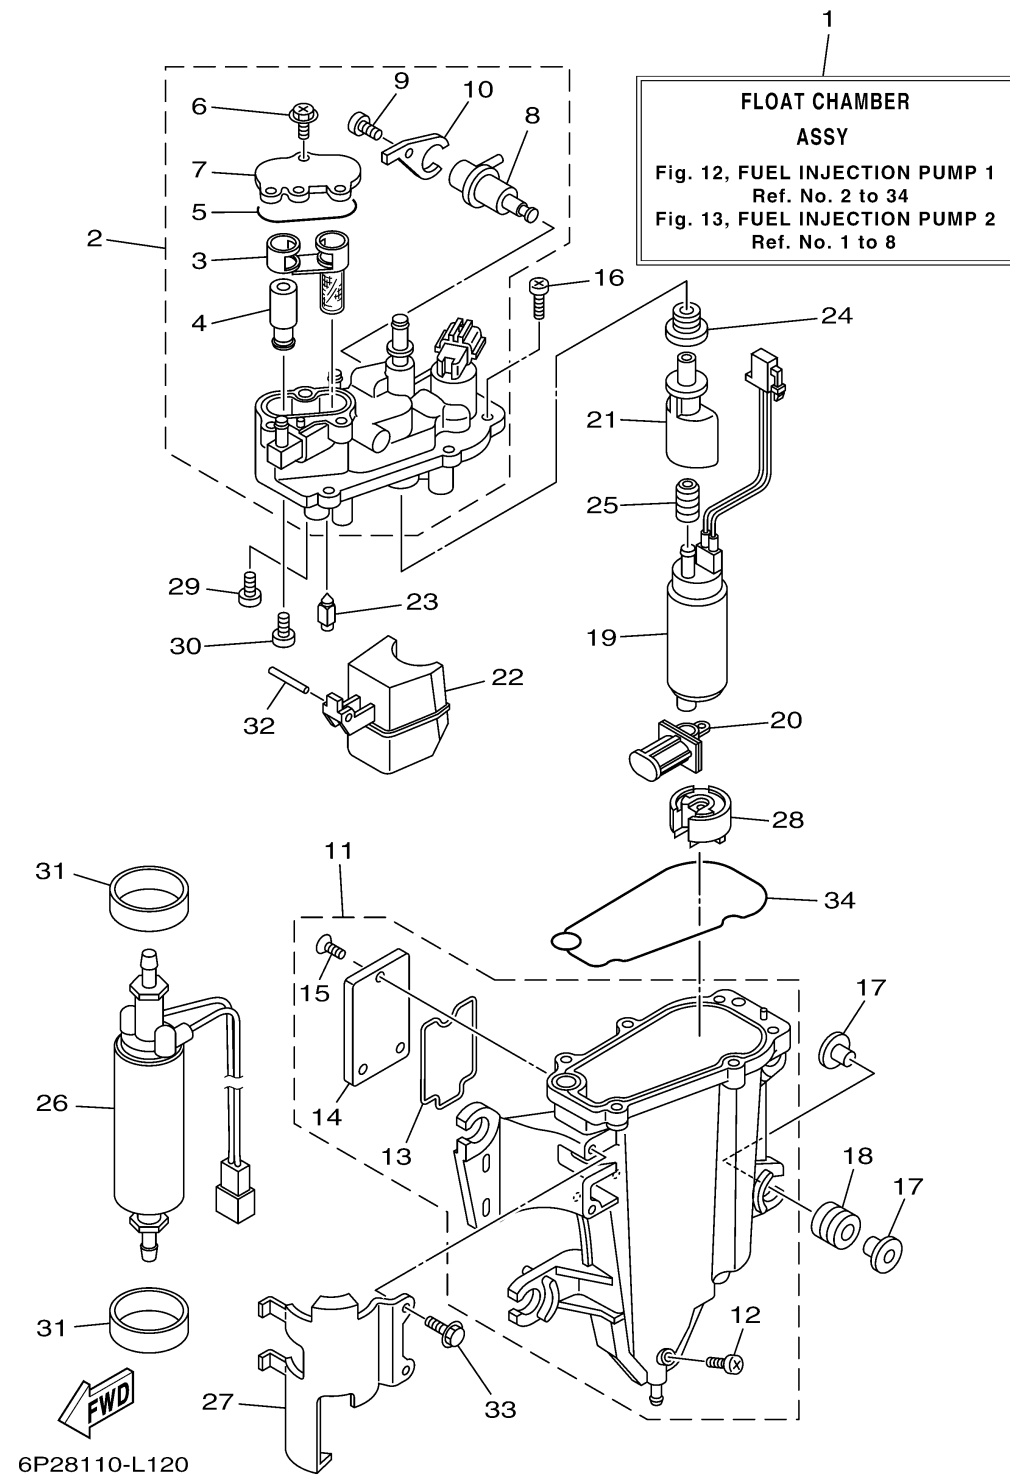

Ref No.	Part Number	Description	Qty	Remarks
21	6AW-13132-00-00	JOINT	1	
22	6CB-14985-00-00	FLOAT	1	
23	6CB-14546-00-00	VALVE, NEEDLE	1	
24	6CB-1447B-00-00	BUSH 1	1	
25	6AW-13781-00-00	DAMPER, PUMP	1	
26	6CB-24410-00-00	FUEL PUMP ASSY	1	
27	6AW-24491-10-00	BRACKET, FUEL PUMP	1	
28	6AW-13784-00-00	COVER, PUMP	1	
29	4SV-24453-00-00	SCREW	1	
30	98507-04008-00	..SCREW, PAN HEAD	1	
31	6CB-24492-00-00	BUSH, FUEL PUMP	2	
32	6P2-14386-00-00	PIN, FLOAT	1	
33	6CB-24592-00-00	BOLT	2	
34	6CB-14984-00-00	GASKET, FLOAT CHAMBER	1	