



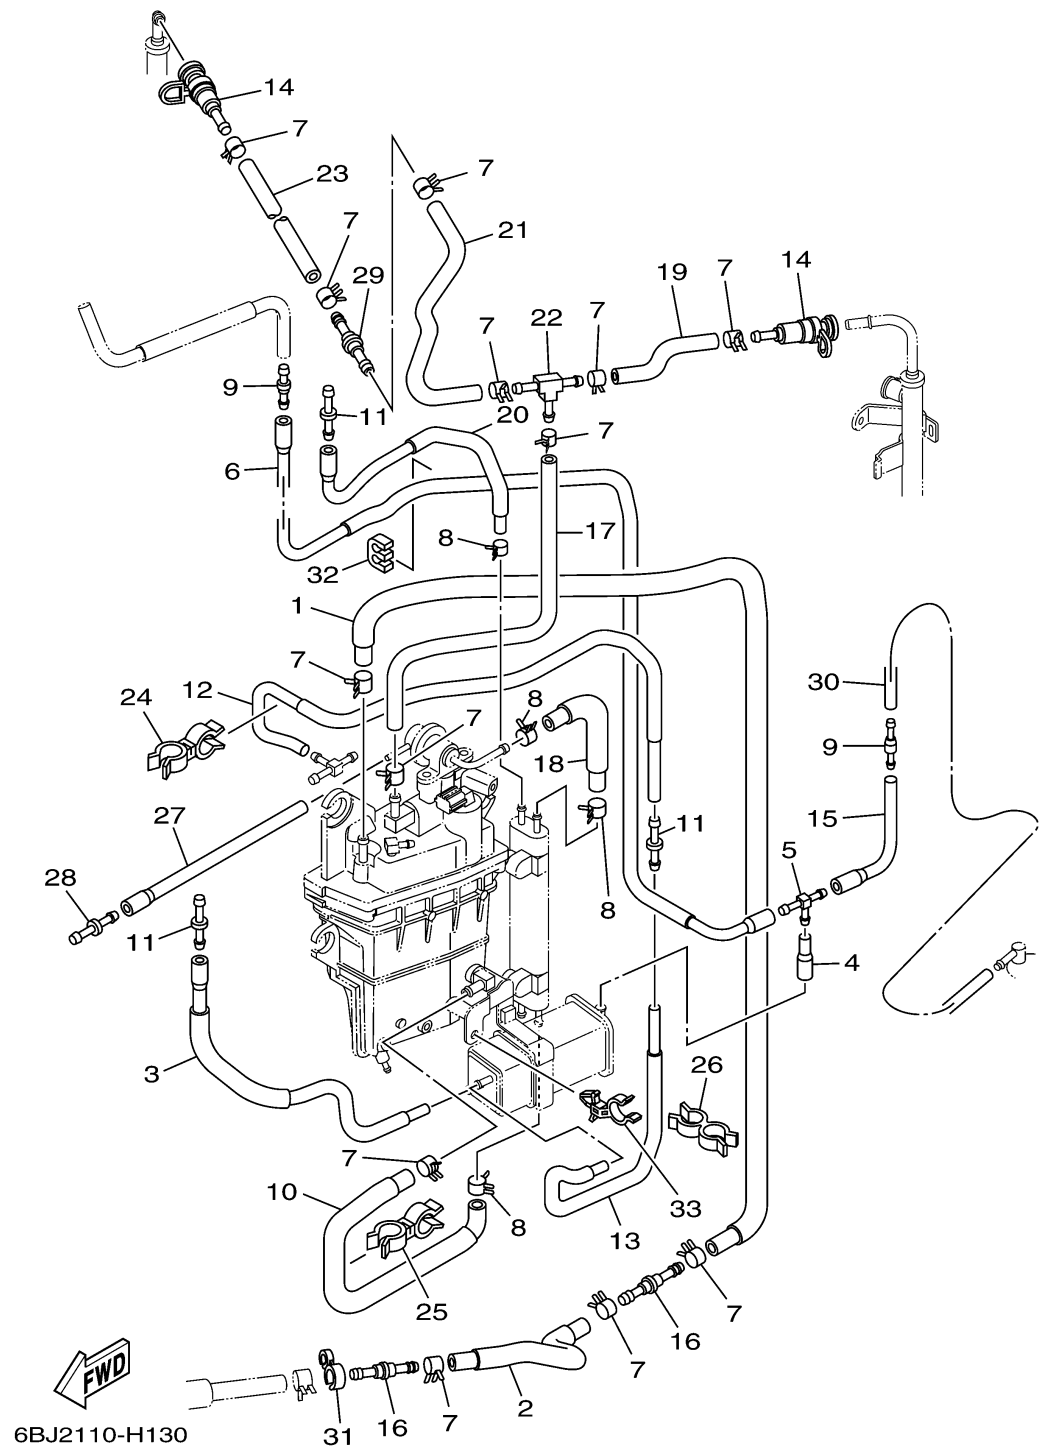

FUEL INJECTION PUMP 2

Ref No.	Part Number		Description	Qty	Remarks
1	6AW-24316-00-00	PIPE 6		1	
2	6AW-24317-00-00	PIPE 7		1	
3	6AW-1475H-00-00	PIPE 5		1	
4	6AW-13545-00-00	HOSE 1		1	
5	688-24378-00-00	PIPE, JOINT 3		1	
6	6AW-13548-00-00	HOSE, AIR 4		1	
7	68V-13577-00-00	CLIP		13	
8	68V-24519-00-00	CLIP		4	
9	6E5-21744-00-00	BREATHER		2	
10	6AW-24315-00-00	PIPE 5		1	
11	6P2-1410F-00-00	NIPPLE 1		3	
12	6AW-1475A-00-00	PIPE 1		1	
13	6AW-1475E-00-00	PIPE 2		1	
14	60E-24300-01-00	FUEL PIPE JOINT		2	
15	6AW-13547-00-00	HOSE 3		1	
16	6P2-24461-00-00	PIPE, JOINT		2	
17	6AW-13971-10-00	PIPE, FUEL 1		1	
18	6AW-13976-00-00	PIPE, FUEL 6		1	
19	6AW-13974-10-00	PIPE, FUEL 4		1	
20	6AW-2247A-00-00	HOSE 1		1	

CONTINUED ON NEXT FRAME >

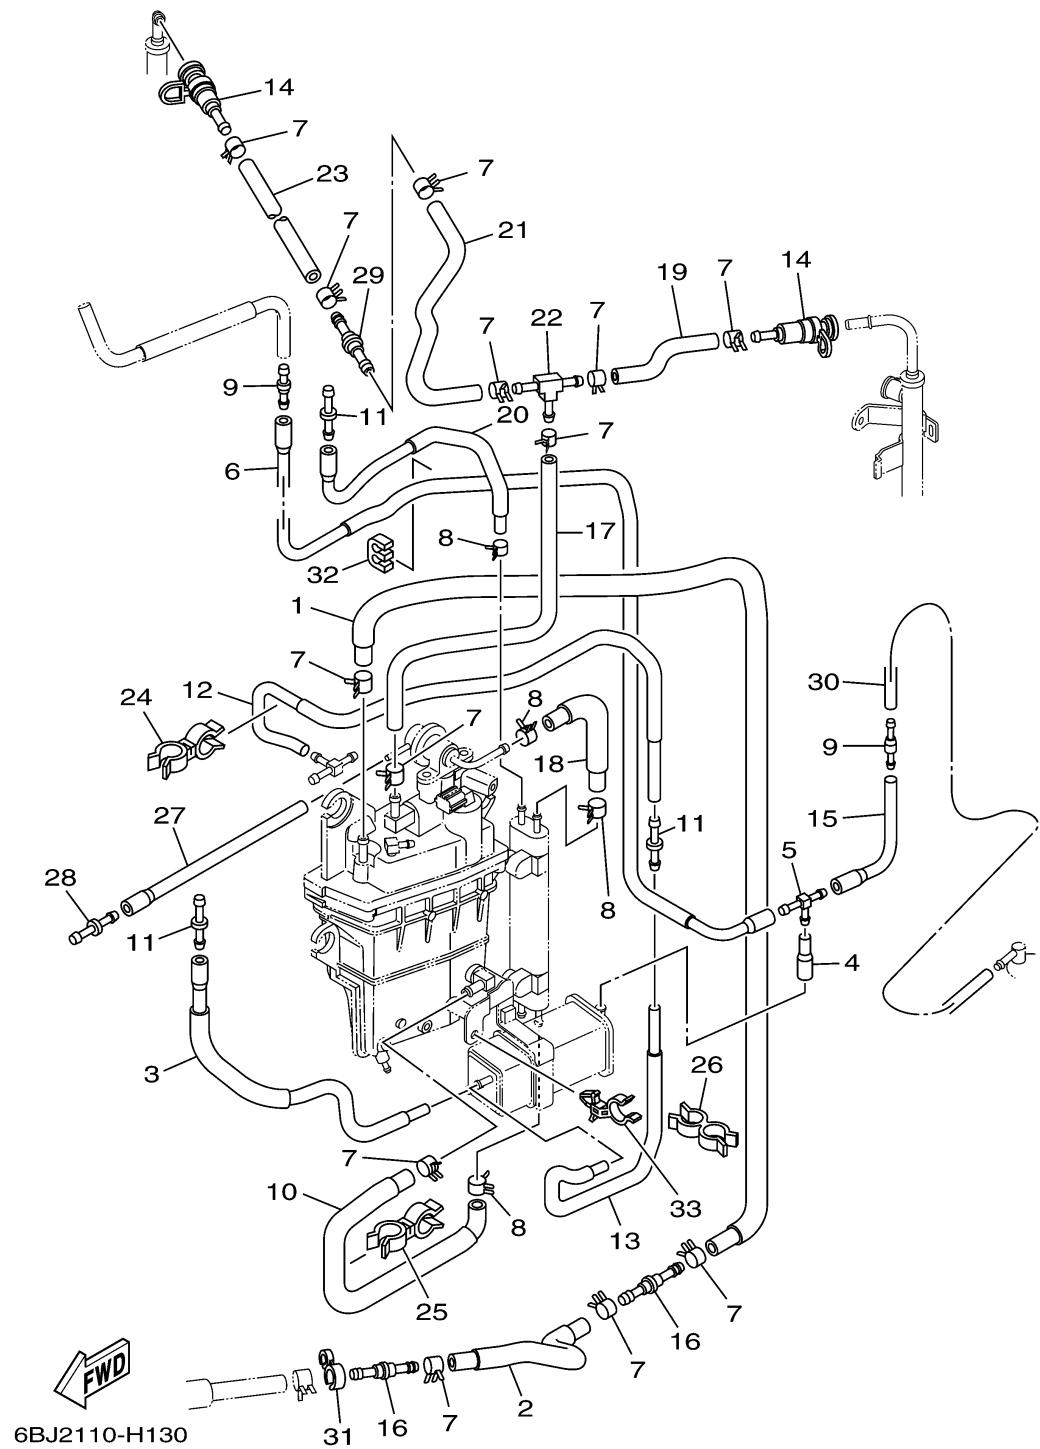

FUEL INJECTION PUMP 2

Ref No.	Part Number	Description	Qty	Remarks
21	6AW-13973-10-00	PIPE, FUEL 3	1	
22	6AW-24461-00-00	PIPE, JOINT	1	
23	6AW-13972-10-00	PIPE, FUEL 2	1	
24	6AW-2417H-00-00	CLAMP 1	1	
25	6AW-2417J-00-00	CLAMP 2	1	
26	6B6-12486-00-00	CLIP	1	
27	6AW-13543-00-00	HOSE, AIR	1	
28	6P2-24376-00-00	PIPE, JOINT 1	1	
29	6P2-24461-10-00	.PIPE, JOINT	1	
30	90445-08033-00	HOSE (L520)	1	
31	90464-13M34-00	CLAMP	1	
32	90464-07006-00	CLAMP	1	
33	90464-17006-00	CLAMP	1	