


STEERING

Ref No.	Part Number	Description	Qty	Remarks
1	6BP-W0084-00-4D	HANDLE STEERING ASSY	0	
2	6AH-42101-02-4D	HANDLE, STEERING	0	
3	90109-06M86-00	. .BOLT	0	
4	6AH-26288-00-00	GROMMET, CABLE	0	
5	66M-42119-01-00	GRIP, STEERING HANDLE	0	
6	67D-42177-00-00	RUBBER, HANDLE	0	
7	65W-42138-00-00	LEVER, THROTTLE	0	
8	90152-05011-00	SCREW, COUNTERSUNK	0	
9	65W-42159-00-00	STAY	0	
10	6G1-42126-00-00	FRICITION, STEERING HANDLE GRIP	0	
11	65W-42125-00-00	BOLT, FRICTION ADJUSTING	0	
12	91490-16010-00	PIN. COTTER	0	
13	6J0-42137-00-00	INDICATOR, THROTTLE	0	
14	90269-02M09-00	RIVET	0	
15	6X4-44188-00-00	WASHER	0	
16	90501-23215-00	SPRING, COMPRESSION	0	
17	90386-08004-00	BUSH	0	
18	6BP-26311-00-00	CABLE, THROTTLE 1	0	
19	6BP-26316-00-00	BOOT, THROTTLE CABLE	0	
20	6AH-44554-00-00	PLATE	0	


CONTINUED ON NEXT FRAME >

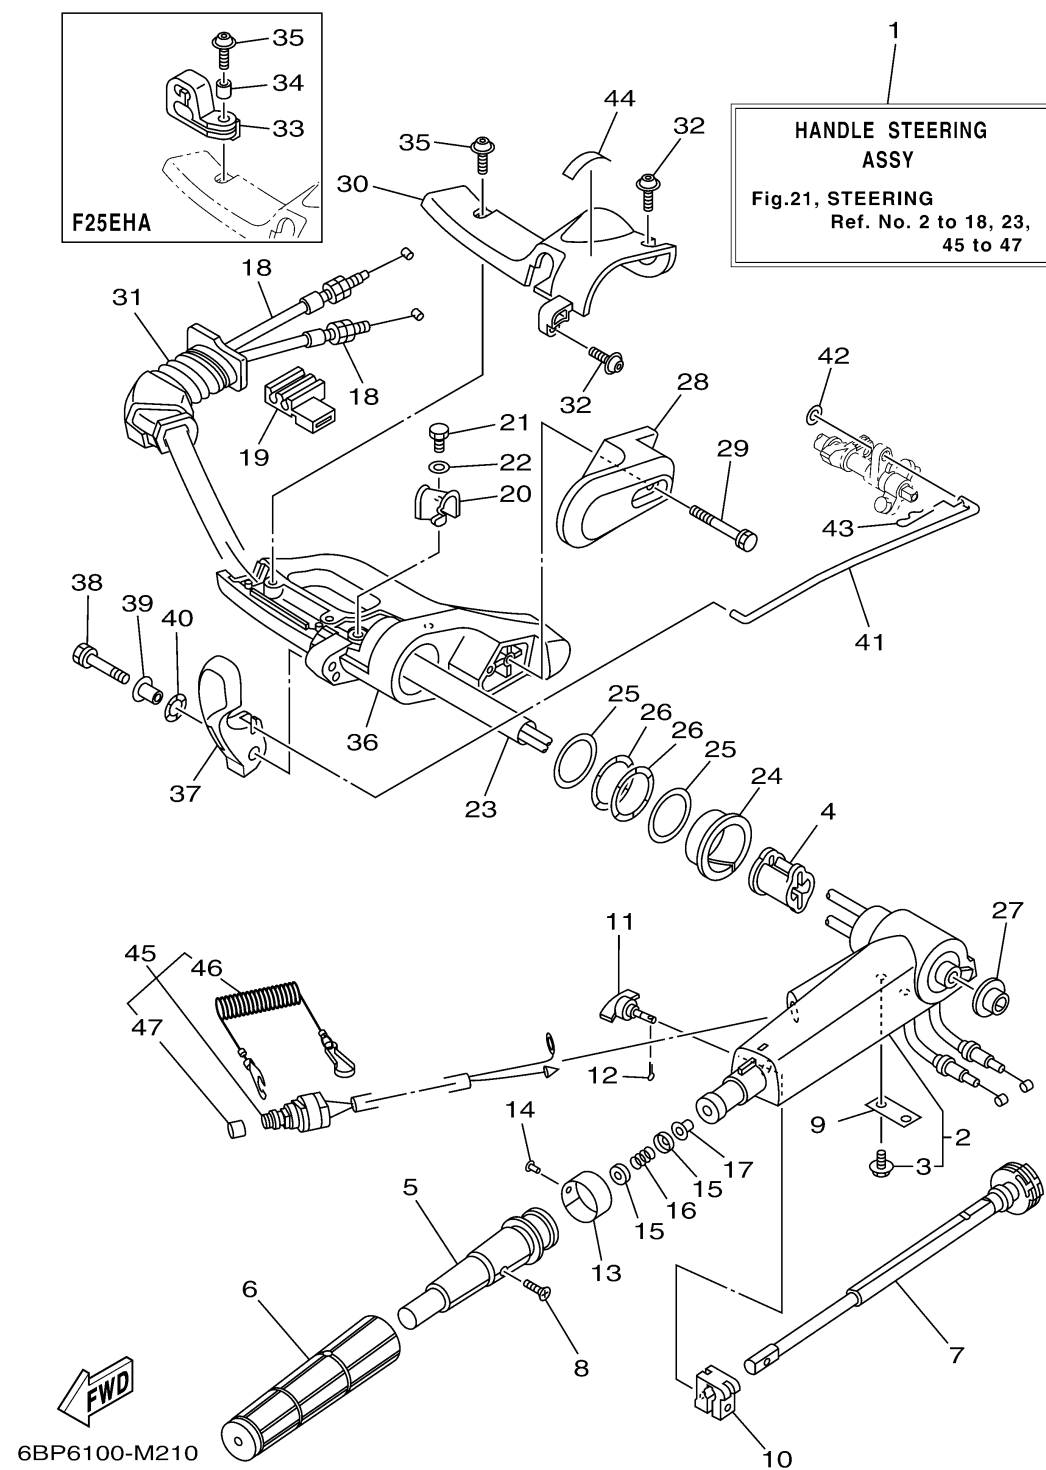

STEERING

Ref No.	Part Number	Description	Qty	Remarks
21	97095-06014-00	BOLT	0	
22	92995-06600-00	WASHER	0	
23	6AH-2634E-00-00	PROTECTOR 1	0	
24	90386-45001-00	BUSH	0	
25	90201-39008-00	WASHER, PLATE	0	
26	90206-39001-00	WASHER, WAVE	0	
27	90381-20001-00	BUSH, SOLID	0	
28	6AH-42131-00-4D	COVER, HANDLE STEERING	0	
29	97595-06555-00	BOLT, WITH WASHER	0	
30	6BL-42532-00-00	COVER	0	
31	6BL-42131-00-00	COVER, HANDLE STEERING	0	
32	90111-06072-00	BOLT,HEX. SOCKET BUTTON	0	
33	6BL-82594-00-00	CLAMP	0	
34	90387-06M53-00	COLLAR	0	
35	90111-06072-00	BOLT,HEX. SOCKET BUTTON	0	
35	90111-06133-00	BOLT,HEX. SOCKET BUTTON	0	
36	6BL-42121-00-4D	BRACKET	0	
37	6AH-44111-00-00	HANDLE, GEAR SHIFT	0	
38	90119-06M05-00	BOLT, WITH WASHER	0	
39	90387-06M86-00	.COLLAR	0	

CONTINUED ON NEXT FRAME >

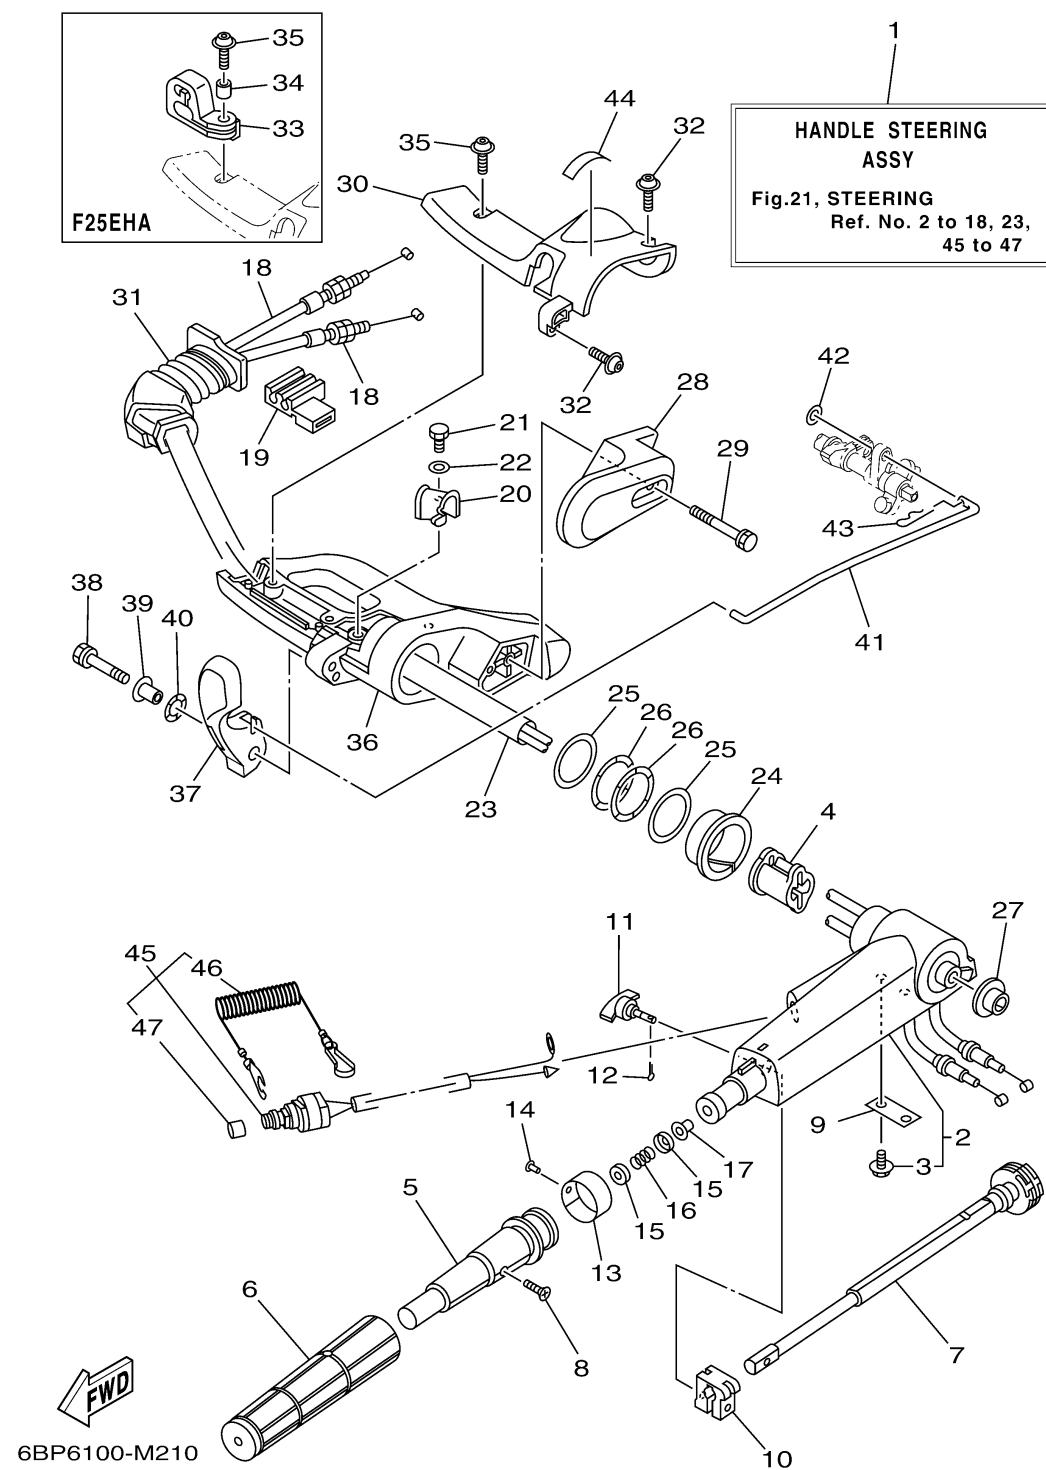

STEERING

Ref No.	Part Number	Description	Qty	Remarks
40	90206-15M18-00	WASHER, WAVE	0	
41	6BL-44124-00-00	LINK, SHIFT ROD	0	
42	92990-06200-00	WASHER, PLAIN	0	
43	90468-18008-00	.CLIP	0	
44	6G8-44191-00-00	INDICATOR, SHIFT	0	
45	6BL-82575-00-00	ENGINE STOP SWITCH ASSY	0	
46	682-82556-00-00	..LANYARD, STOP SWITCH	0	
47	689-8257Y-00-00	..CAP	0	