


FUEL INJECTION PUMP

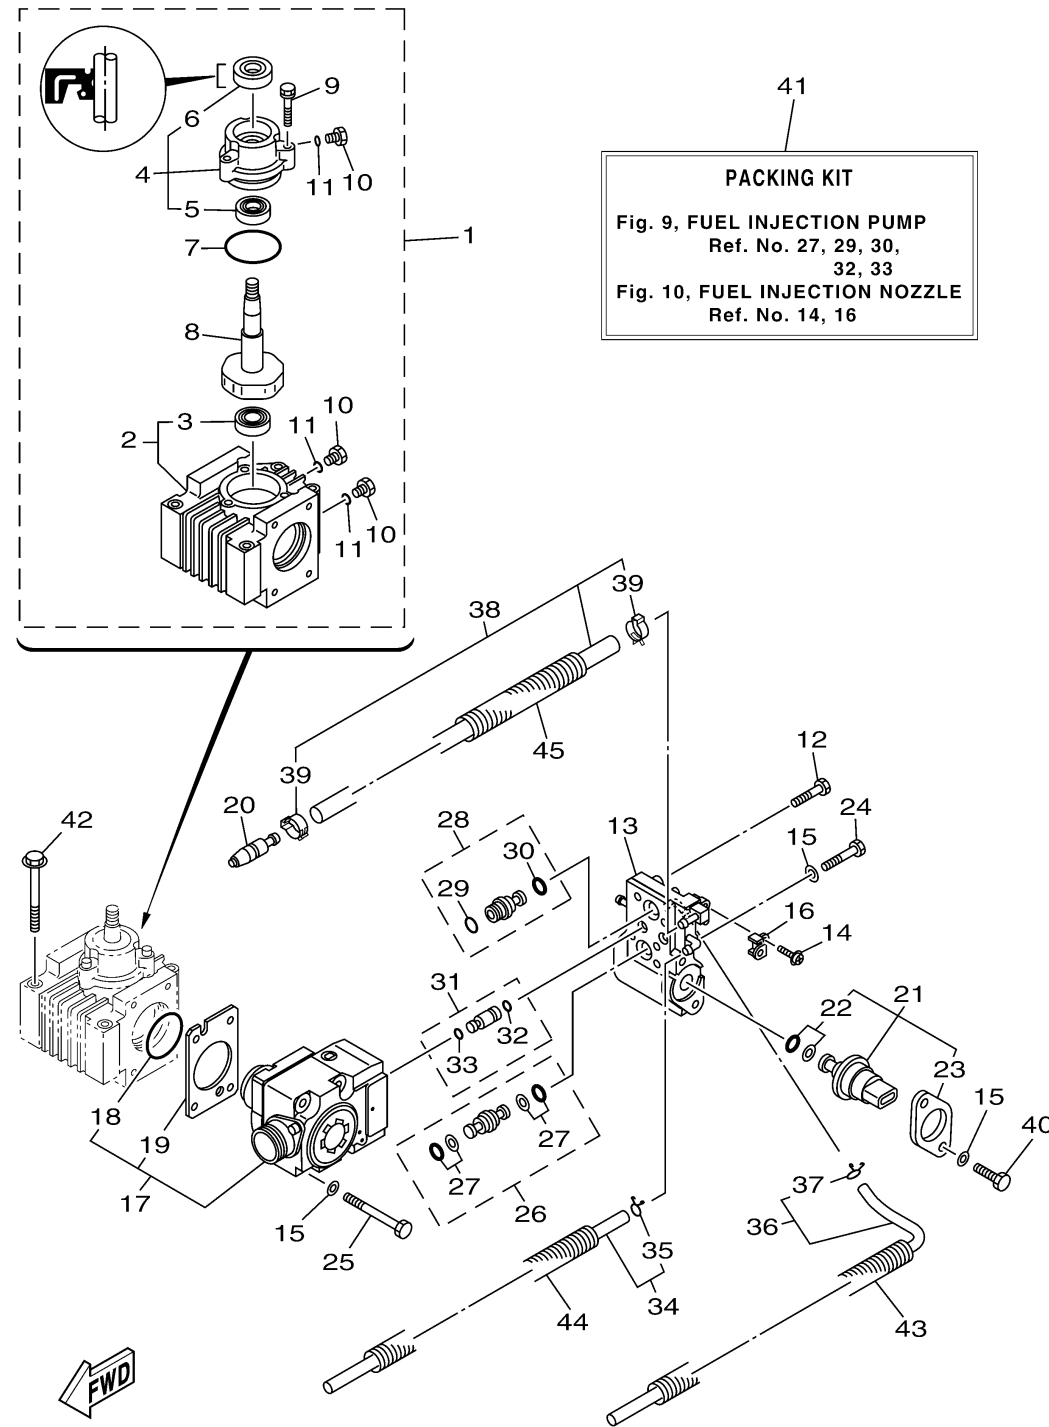


68JL100-M090

Ref No.	Part Number	Description	Qty	Remarks
1	68F-12170-10-00	CAMSHAFT ASSY 1	1	
2	68F-12424-10-00	..PLATE, CARTRIDGE INNER	1	
3	93306-00001-00	...BEARING	1	
4	68F-12173-00-00	..CAP, CAMSHAFT 1	1	
5	93306-001U0-00	...BEARING	1	
6	68F-12223-00-00	...SEAL	1	
7	68F-12439-00-00	..O-RING	1	
8	68F-12171-00-00	..CAMSHAFT 1	1	
9	68F-12228-00-00	..BOLT	3	
10	68F-13455-00-00	..PLUG	3	
11	68F-13473-00-00	..O-RING	3	
12	68F-12228-00-00	BOLT	2	
13	68F-13993-10-00	COVER, CONTROL RACK	1	
14	65L-14565-00-00	SCREW	1	
15	68F-24579-00-00	WASHER 2	8	
16	60V-13854-00-00	PLATE 4	1	
17	68F-13910-10-00	FUEL PUMP ASSY	1	
18	60V-14005-00-00	..RING, SEAL	1	
19	60V-14126-00-00	..GASKET	1	
20	68F-24300-00-00	FUEL PIPE JOINT	1	

CONTINUED ON NEXT FRAME >

FUEL INJECTION PUMP

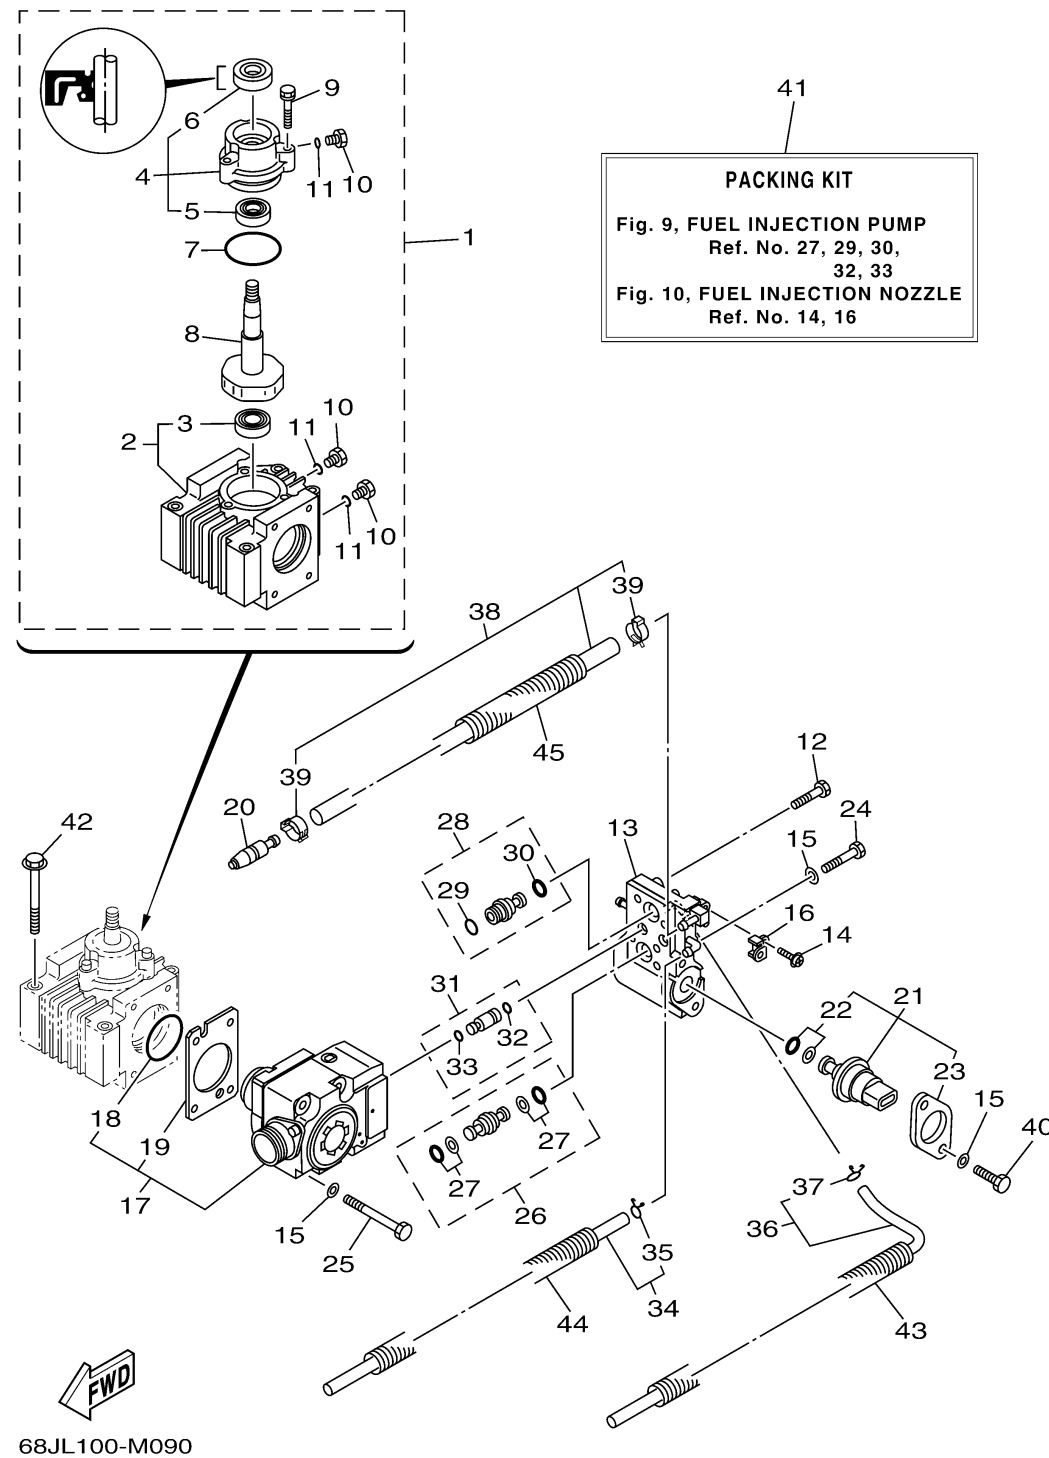


Ref No.	Part Number	Description	Qty	Remarks
21	68F-82380-01-00	SENSOR, PRESSURE	1	
22	68F-82384-00-00	..PACKING KIT	1	
23	68F-82388-00-00	..PLATE	1	
24	60V-24178-00-00	BOLT 3	2	
25	60V-24176-00-00	BOLT 1	4	
26	68F-13815-10-00	JOINT 1	1	
27	68F-2466A-00-00	..PACKING KIT	2	
28	68F-13816-10-00	JOINT 2	1	
29	68F-24486-00-00	..O-RING	1	
30	68F-24329-00-00	..SEAL	1	
31	68F-13758-10-00	PIPE, JOINT	1	
32	68F-13473-00-00	..O-RING	1	
33	60V-13473-00-00	..O-RING	1	
34	68F-24312-20-00	PIPE 2	1	
35	68F-24356-00-00	..CLIP, PIPE 1	1	
36	68F-24313-20-00	PIPE 3	1	
37	68F-24356-00-00	..CLIP, PIPE 1	1	
38	68F-13972-11-00	PIPE, FUEL 2	1	
39	65L-24387-00-00	..CLIP	2	
40	68F-13573-00-00	BOLT 1	2	

CONTINUED ON NEXT FRAME >

FUEL INJECTION PUMP

Ref No.	Part Number	Description	Qty	Remarks
41	68F-2466A-10-00	PACKING KIT	1	
42	97513-08570-00	BOLT, WITH WASHER	4	
43	90446-17M72-00	HOSE (L450)	1	
44	90447-13007-00	TUBE	1	
45	90446-20MF5-00	HOSE (L320)	1	

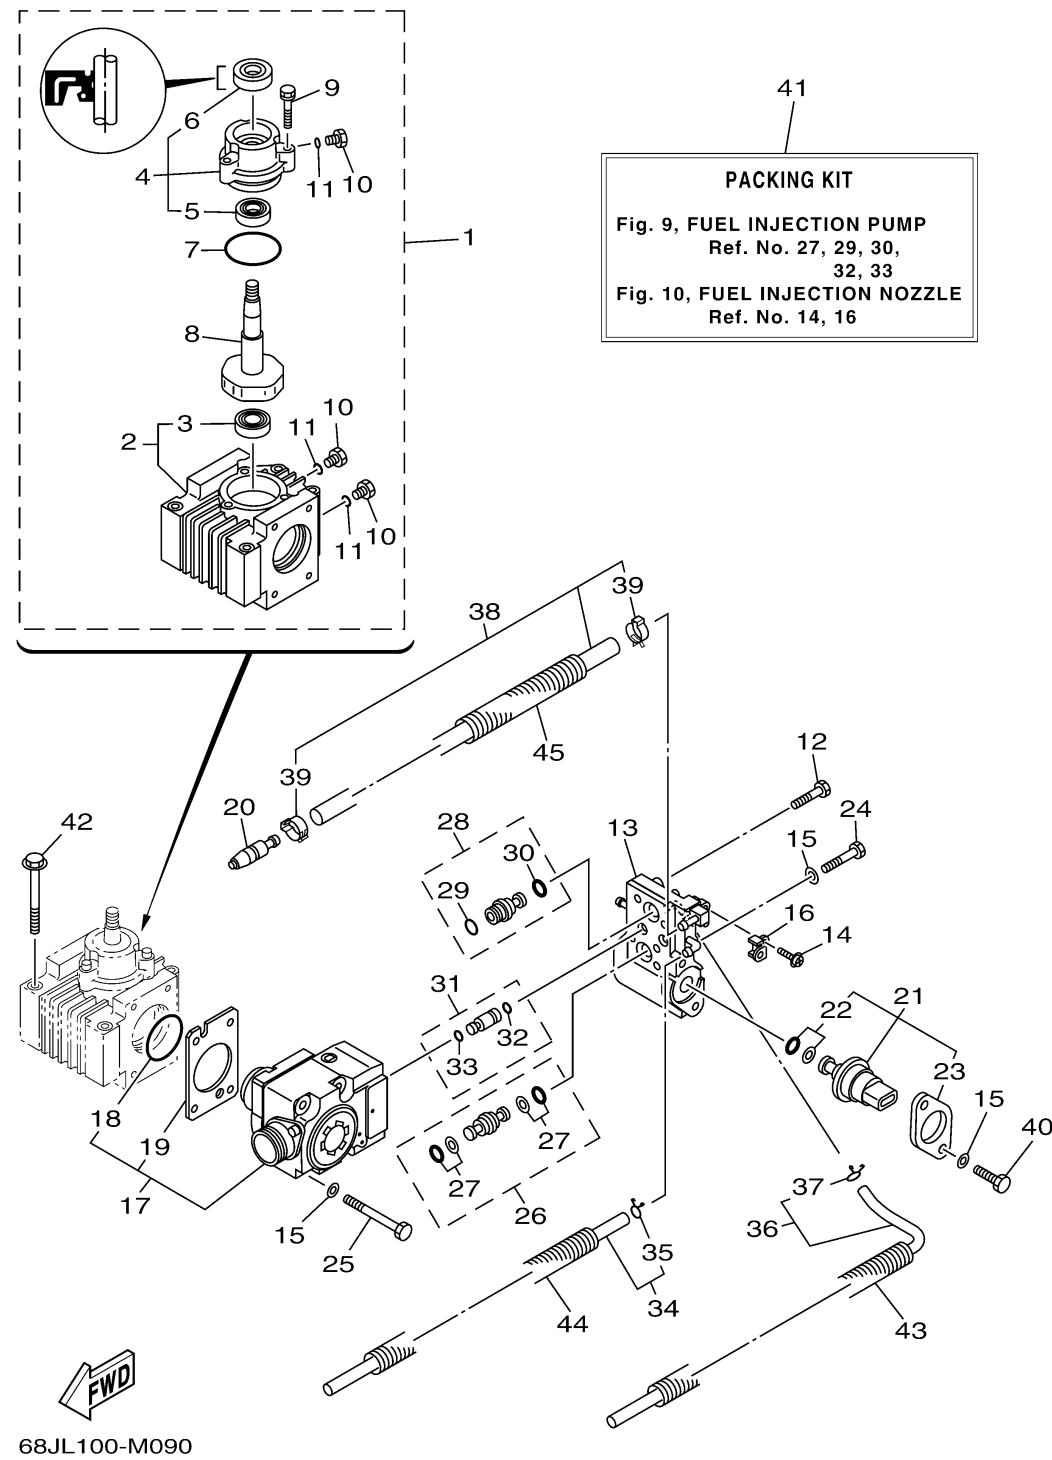

68JL100-M090