


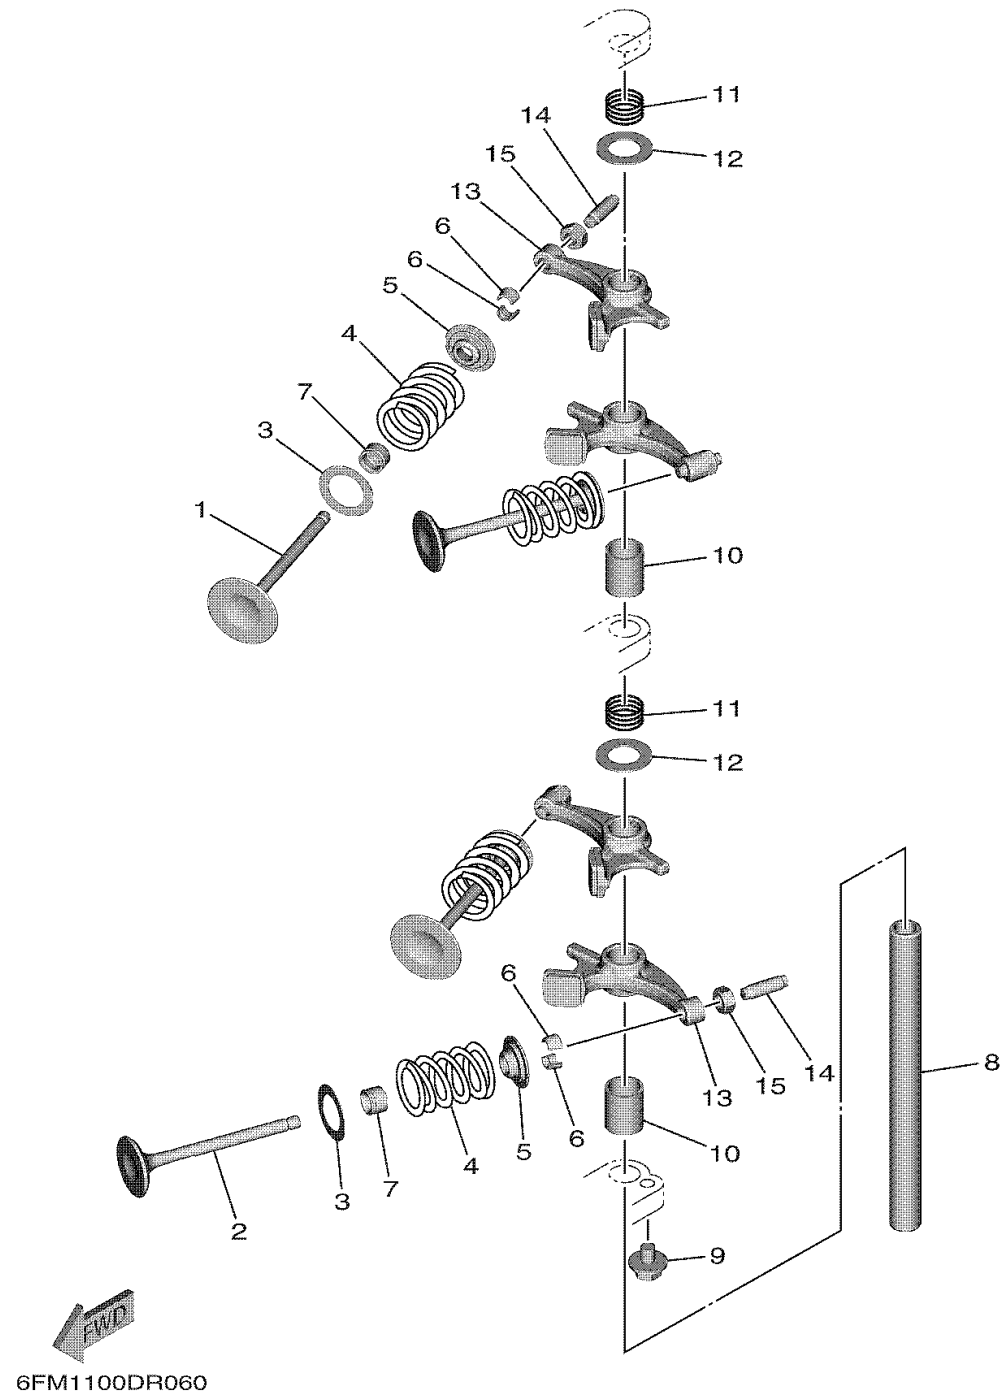

VALVE

Ref No.	Part Number	Description	Qty	Remarks
1	6FM-12111-00-00	VALVE, INTAKE	2	
2	6FM-12121-00-00	VALVE, EXHAUST	2	
3	62Y-12116-00-00	SEAT, VALVE SPRING	4	
4	3YF-12113-00-00	SPRING, VALVE INNER	4	
5	30X-12117-00-00	RETAINER, VALVE SPRING	4	
6	30X-12118-00-00	LOCK, VALVE SPRING RETAINER	8	
7	51Y-12119-00-00	SEAL, VALVE STEM	4	
8	66M-12146-00-00	SHAFT, ROCKER	1	
9	90119-06054-00	BOLT, WITH WASHER	1	
10	90387-13006-00	COLLAR	2	
11	90501-120A5-00	SPRING, COMPRESSION	2	
12	90201-13013-00	WASHER, PLATE	2	
13	6AH-12151-00-00	ARM, VALVE ROCKER	4	
14	64J-12159-00-00	SCREW, VALVE ADJUSTING	4	
15	62Y-12158-00-00	NUT, LOCK	4	