



FUEL INJECTION PUMP 1

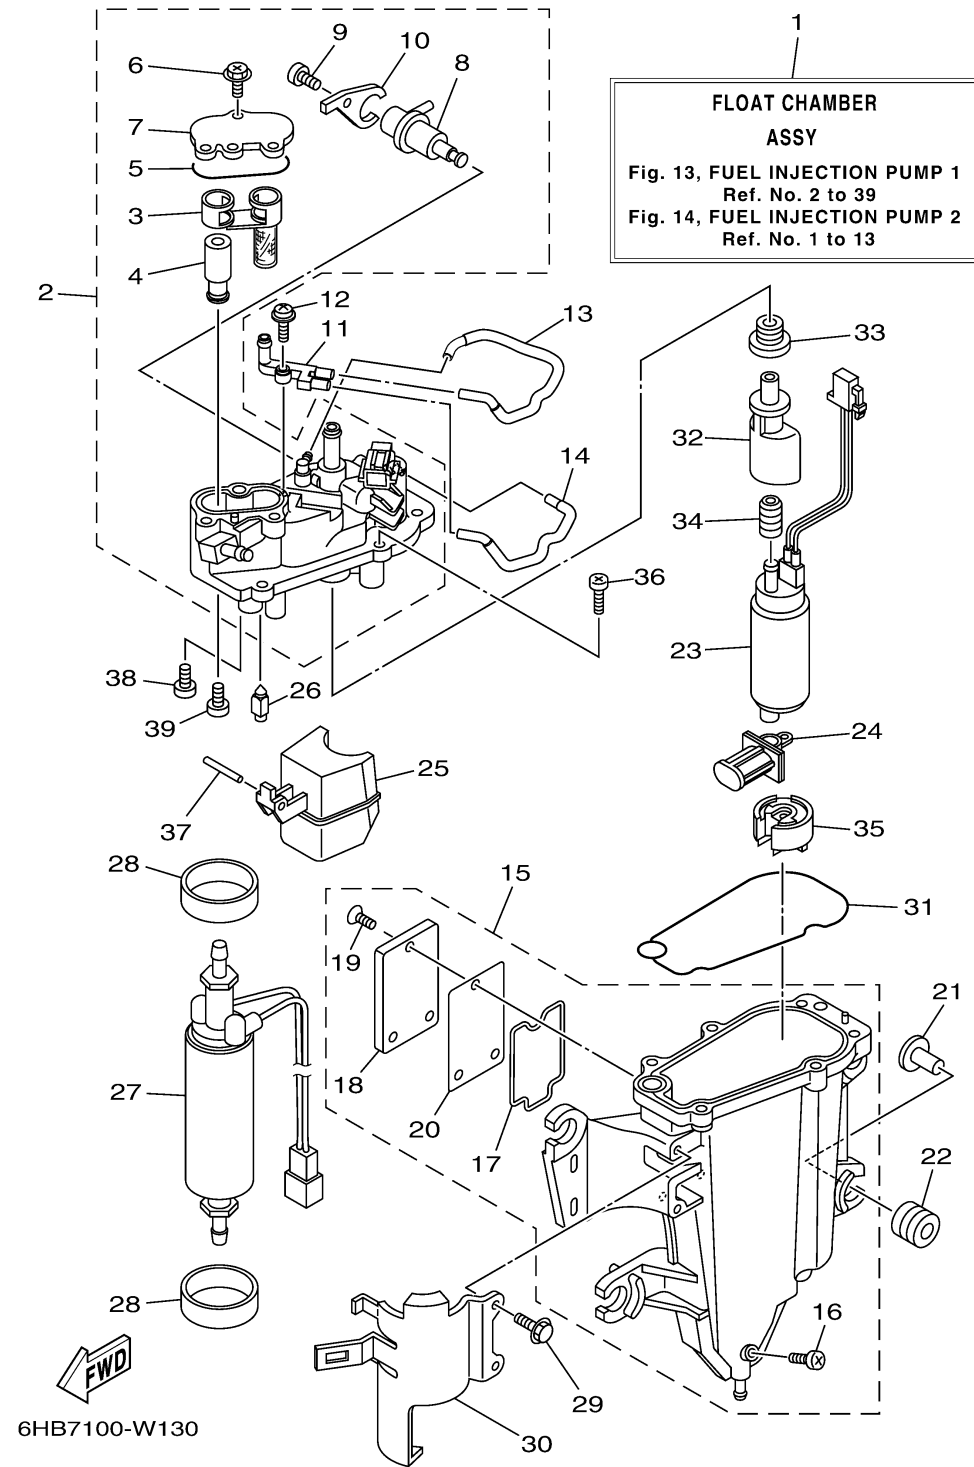

Ref No.	Part Number	Description	Qty	Remarks
1	6CB-14180-14-00	FLOAT CHAMBER ASSY	1	
2	6CB-14182-02-00	COVER, FLOAT CHAMBER	1	
3	6CB-24501-01-00	..FILTER, FUEL	1	
4	6CB-24460-00-00	..RELIEF VALVE ASSY	1	
5	6CB-13016-00-00	..O-RING	1	
6	6CB-14216-00-00	..SCREW	3	
7	6CB-24217-00-00	..COVER	1	
8	6CB-13906-01-00	..REGULATOR, PRESSURE	1	
9	6CB-14564-00-00	..SCREW	1	
10	6CB-14146-00-00	..PLATE	1	
11	68V-24379-10-00	PIPE, JOINT 4	1	
12	68V-14216-00-00	SCREW	1	
13	6CB-1475H-00-00	PIPE 5	1	
14	6CB-1475J-00-00	PIPE 6	1	
15	6CB-14181-01-00	BODY, FLOAT CHAMBER 1	1	
16	6P2-14191-00-00	..PLUG, DRAIN	1	
17	6CB-14239-00-00	..SEAL	1	
18	6CB-24452-10-00	..COVER	1	
19	6CB-14429-01-00	..SCREW	3	
20	6CB-24482-00-00	..GASKET 1	1	

CONTINUED ON NEXT FRAME >

FUEL INJECTION PUMP 1

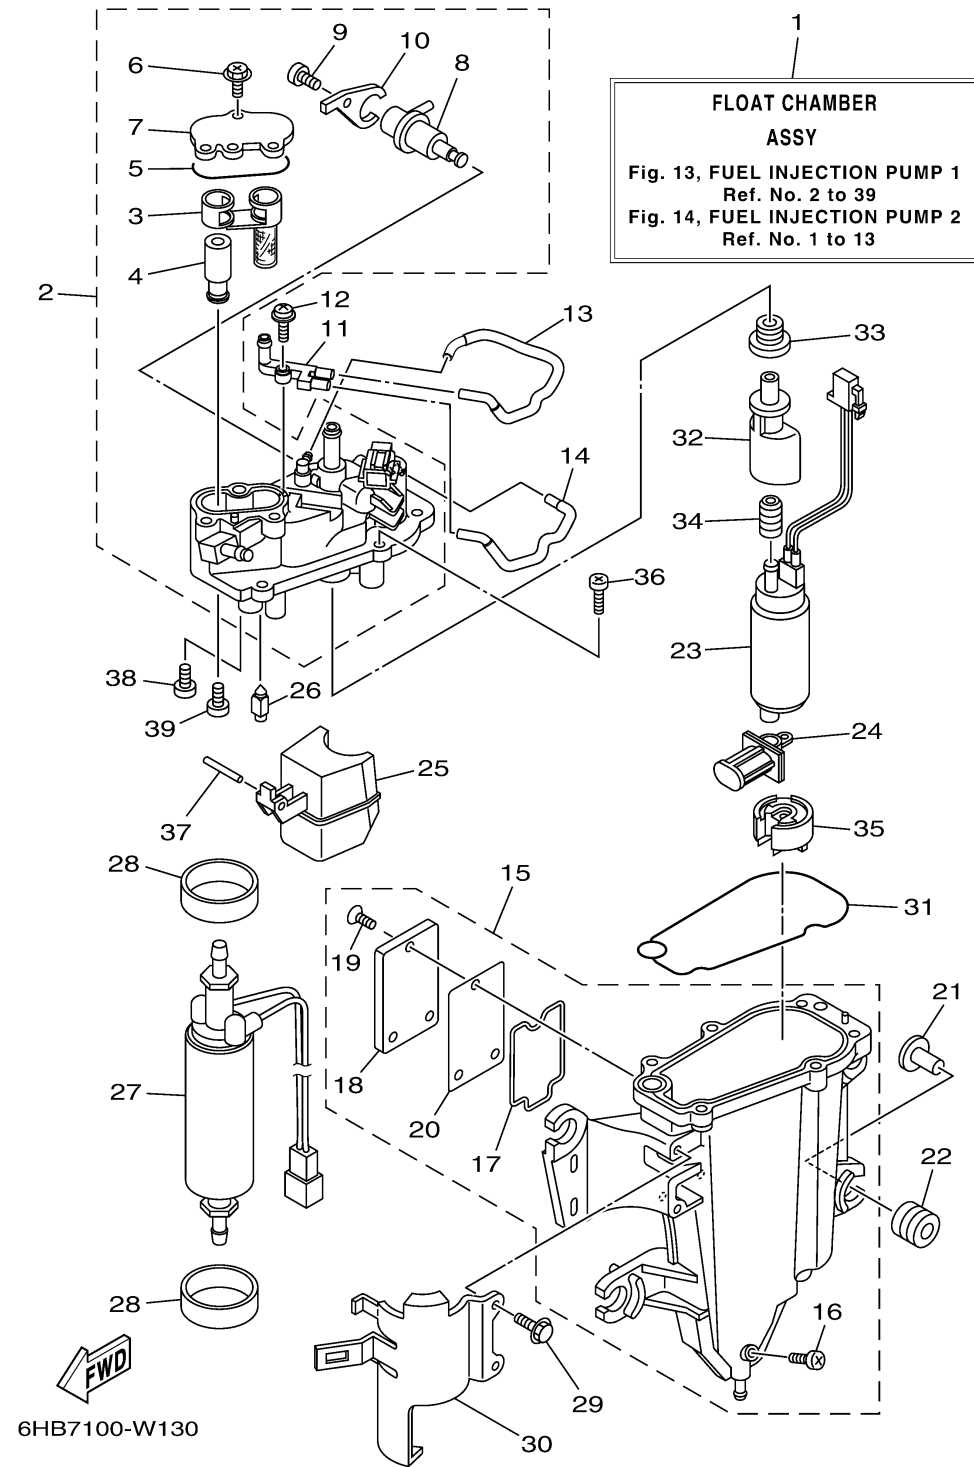

Ref No.	Part Number	Description	Qty	Remarks
21	63P-13716-00-00	COLLAR	4	
22	6CB-13593-00-00	.DAMPER	4	
23	6CB-13907-12-00	FUEL PUMP COMP.	1	
24	63P-13915-00-00	FILTER	1	
25	6CB-14985-00-00	FLOAT	1	
26	6CB-14546-00-00	VALVE, NEEDLE	1	
27	6GR-24410-01-00	FUEL PUMP ASSY	1	
28	6CB-24492-00-00	BUSH, FUEL PUMP	2	
29	6CB-24592-00-00	BOLT	2	
30	6CB-24491-00-00	BRACKET, FUEL PUMP	1	
31	6CB-14984-00-00	GASKET, FLOAT CHAMBER	1	
32	6AW-13132-00-00	JOINT	1	
33	6CB-1447B-00-00	BUSH 1	1	
34	6AW-13781-00-00	DAMPER, PUMP	1	
35	6AW-13784-00-00	COVER, PUMP	1	
36	63P-14567-00-00	SCREW	6	
37	6P2-14386-00-00	PIN, FLOAT	1	
38	4SV-24453-00-00	SCREW	1	
39	98507-04008-00	SCREW, PAN HEAD	1	