



VAPOR SEPARATOR 1

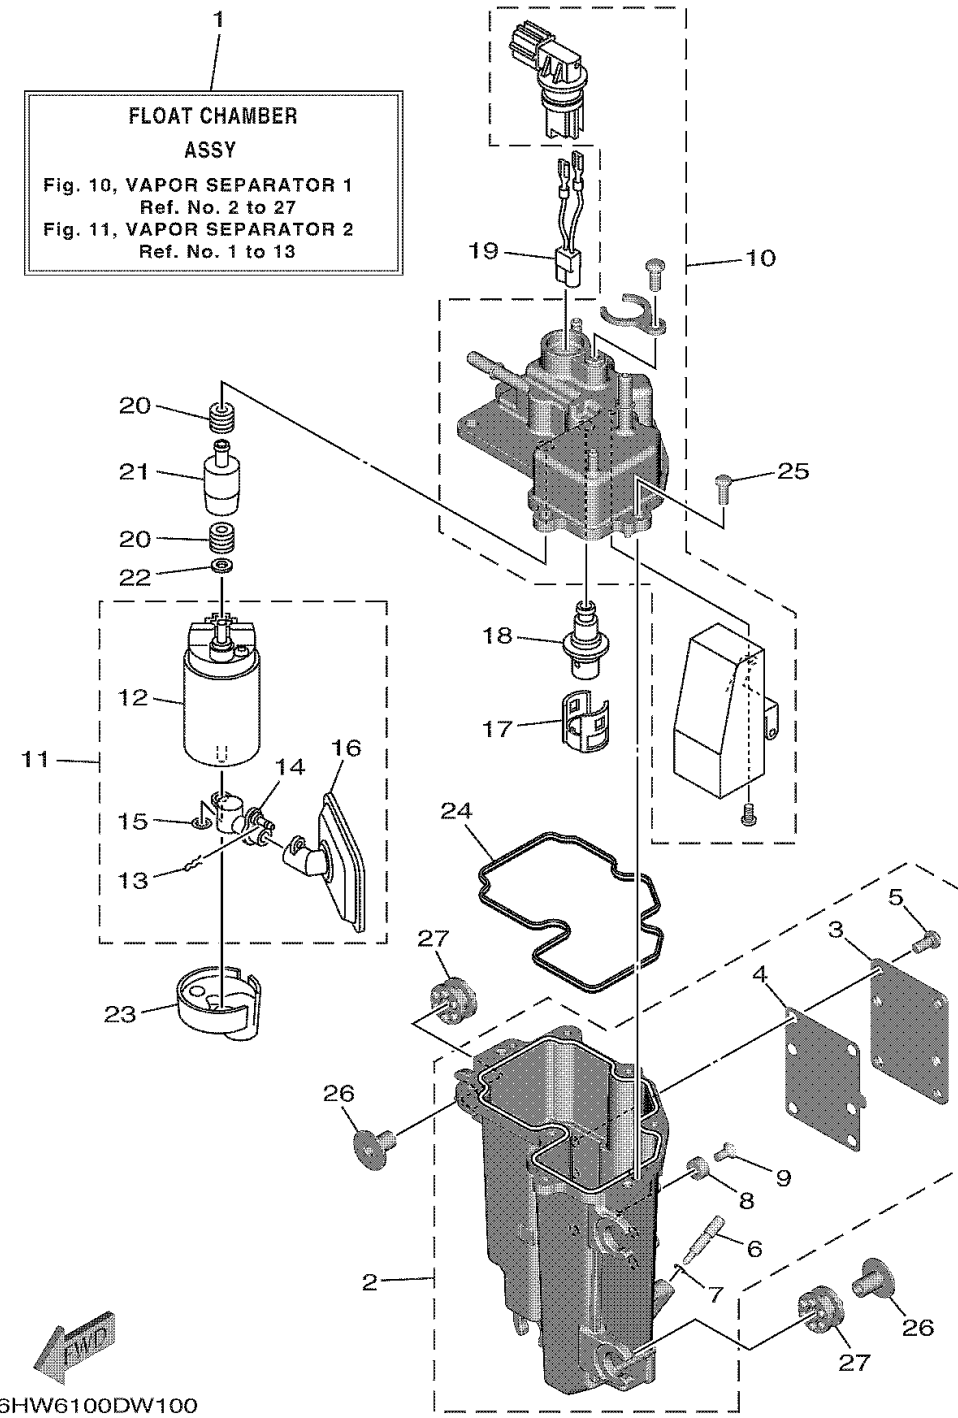

Ref No.	Part Number	Description	Qty	Remarks
1	6FP-14180-03-00	FLOAT CHAMBER ASSY	1	
2	6FP-14960-00-00	BODY ASSY	1	
3	6FP-24452-00-00	. .COVER, COOLER	1	
4	6FP-24462-00-00	. .GASKET, COOLER	1	
5	6FP-14591-00-00	. .SCREW	6	
6	6C5-14191-00-00	. PLUG, DRAIN	1	
7	6C5-14397-00-00	. O-RING	1	
8	63P-11325-21-00	. .ANODE	1	
9	6FP-24444-00-00	. .SCREW	1	
10	6FP-14182-01-00	COVER, FLOAT CHAMBER	1	
11	6FP-13910-01-00	FUEL PUMP ASSY	1	
12	6FP-13907-01-00	. .FUEL PUMP COMP.	1	
13	6BG-14137-00-00	. .CLIP	1	
14	6FP-13938-00-00	. .JOINT	1	
15	6C5-14127-10-00	. .CLIP	1	
16	6FP-13915-00-00	. .FILTER	1	
17	6FP-13927-00-00	SUPPORT	1	
18	6FP-13906-00-00	REGULATOR, PRESSURE	1	
19	6FP-87226-00-00	WIRE HARNESS ASSY	1	
20	6FP-13781-00-00	SEAL, FUEL PUMP FILTER	2	

CONTINUED ON NEXT FRAME >

VAPOR SEPARATOR 1

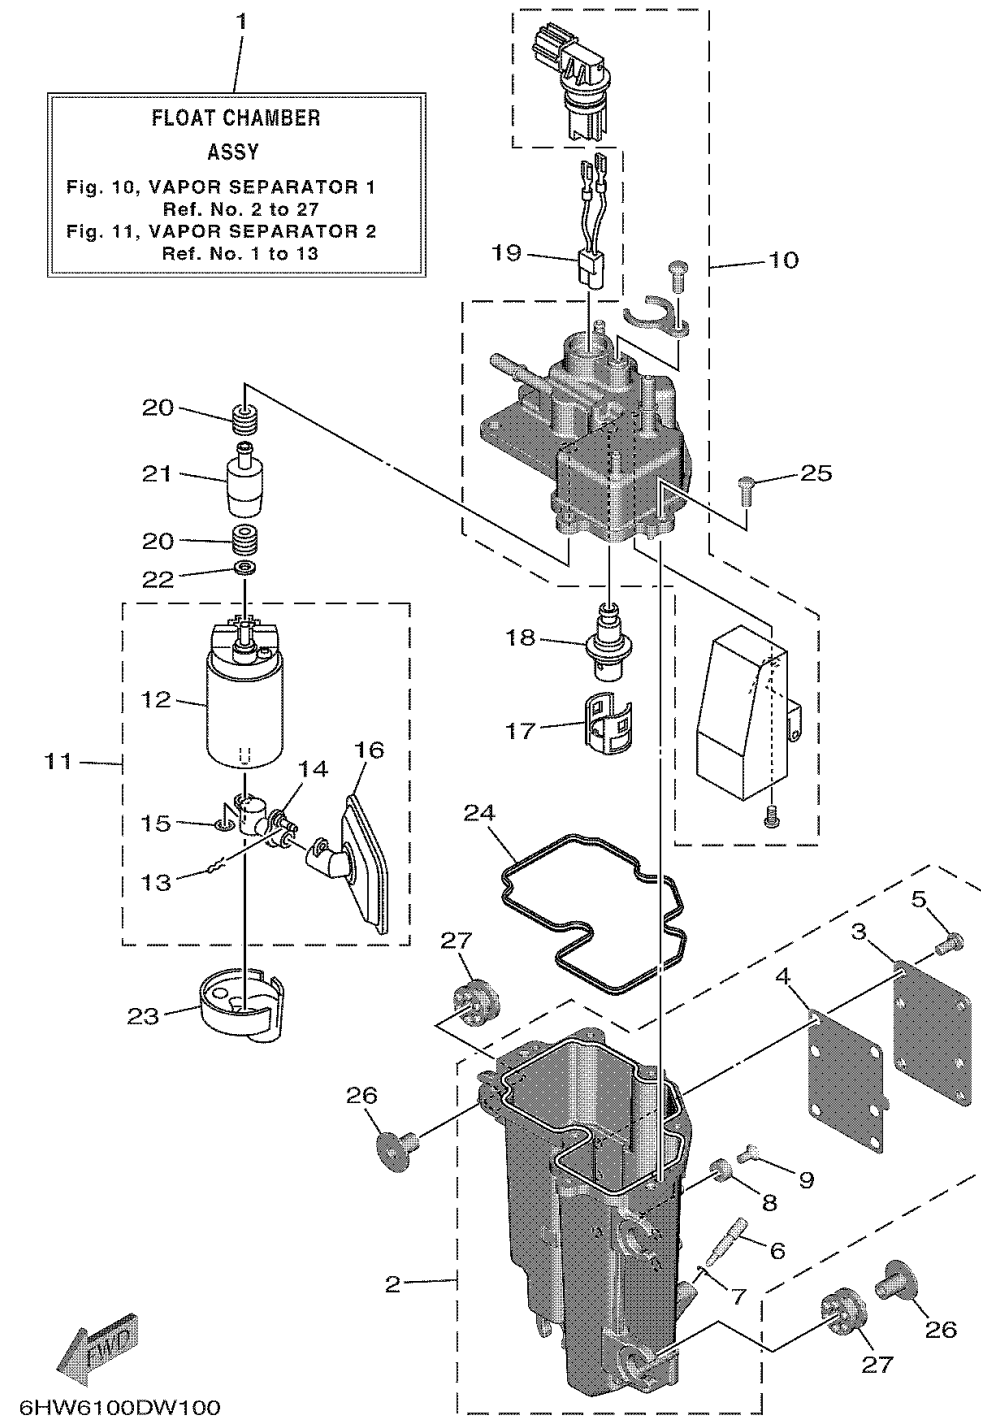

Ref No.	Part Number	Description	Qty	Remarks
21	6FP-13132-00-00	ADAPTOR	1	
22	6FP-13716-00-00	SPECER, FUEL PUMP	1	
23	6FP-13593-01-00	DAMPER	1	
24	6FP-14984-00-00	GASKET, FLOAT CHAMBER	1	
25	6C5-14567-00-00	SCREW	8	
26	90387-06M03-00	COLLAR	4	
27	69L-85516-01-00	SPACER	4	