



# POWER TRIM TILT ASSY 2

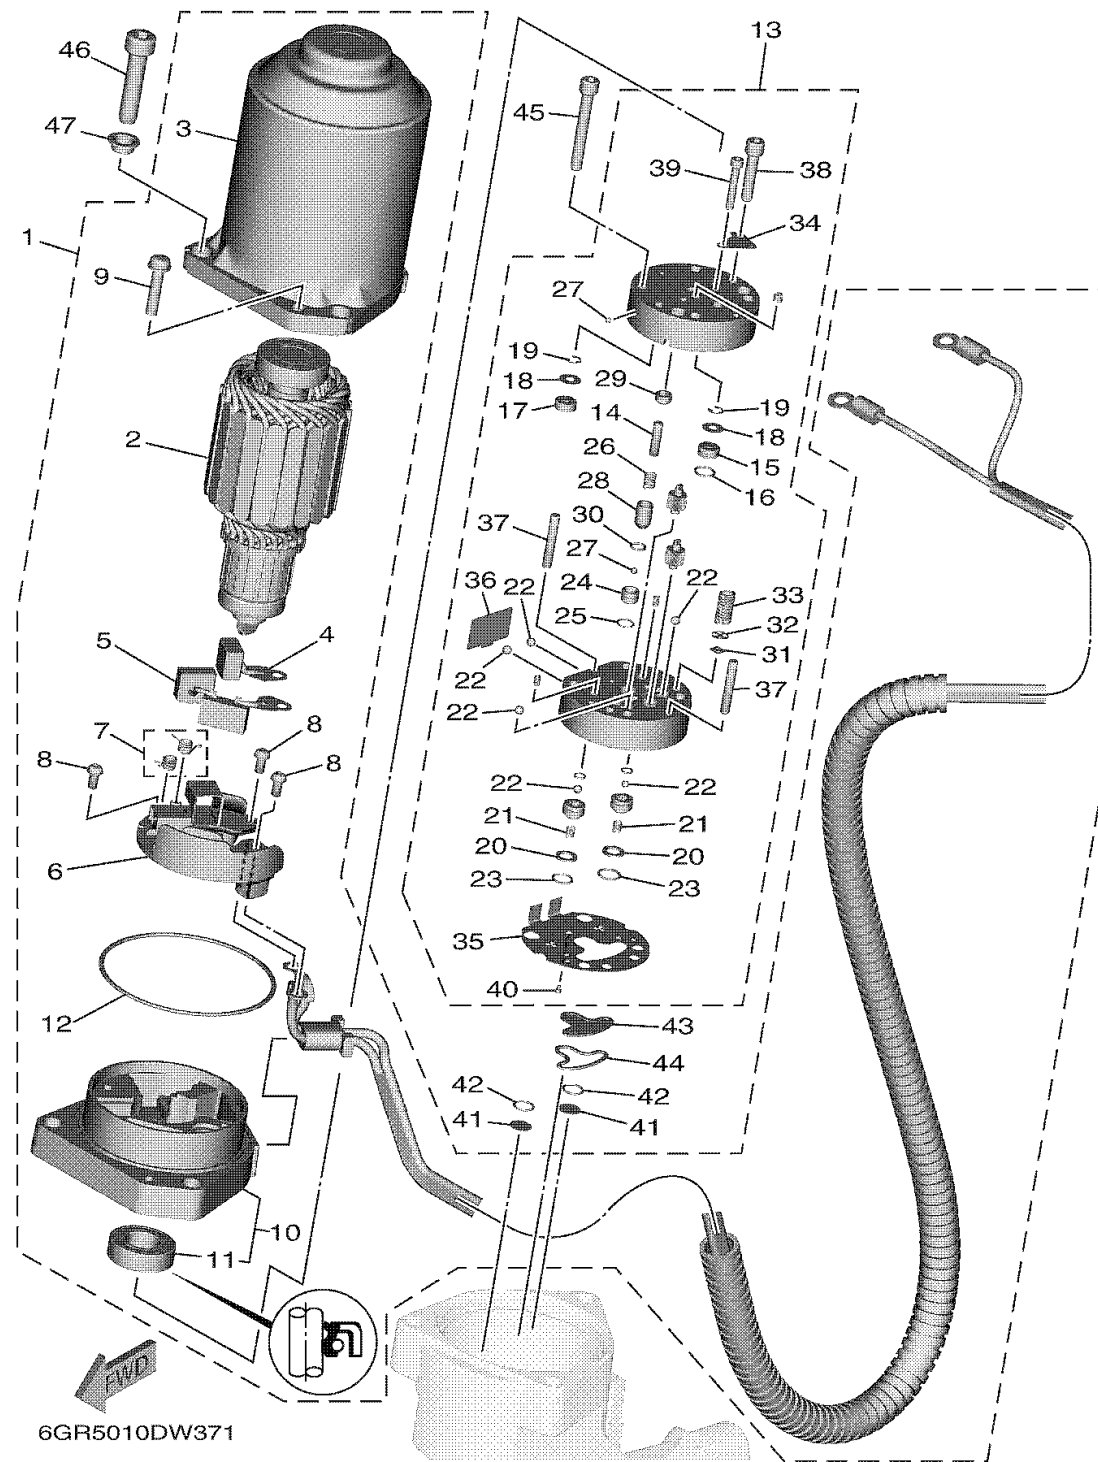

Ref No.	Part Number	Description	Qty	Remarks
1	6GR-43880-02-00	MOTOR ASSY	1	
2	6GR-43805-00-00	..ARMATURE ASSY	1	
3	6GR-43804-00-00	..STATOR ASSY	1	
4	6GR-43892-00-00	..BRUSH 2	1	
5	6GR-82181-00-00	..CIRCUIT BREAKER COMP.	1	
6	6GR-4380F-00-00	..PLATE, BRUSH HOLDER	1	
7	6GR-4386K-00-00	..SPRING, BRUSH	1	
8	97602-04310-00	..SCREW, PAN HEAD WITH WASHER	4	
9	67C-43879-10-00	..SCREW, WITH WASHER	2	
10	6GR-43881-02-00	..FRAME, END	1	
11	6GR-43882-01-00	...OIL SEAL	1	
12	6GR-43864-01-00	..O-RING	1	
13	6GR-43830-00-00	GEAR PUMP ASSY	1	
14	93603-08072-00	..PIN, DOWEL	1	
15	6CJ-43841-00-00	..PISTON, SHUTTLE	1	
16	6H1-43883-00-00	..O-RING	1	
17	6CJ-4384M-00-00	..PISTON, SHUTTLE 2	1	
18	69A-4384F-00-00	..SEAL, MAIN VALVE	2	
19	99002-03600-00	..CIRCLIP	2	
20	6C6-4387G-00-00	..WASHER	2	

CONTINUED ON NEXT FRAME >


# POWER TRIM TILT ASSY 2

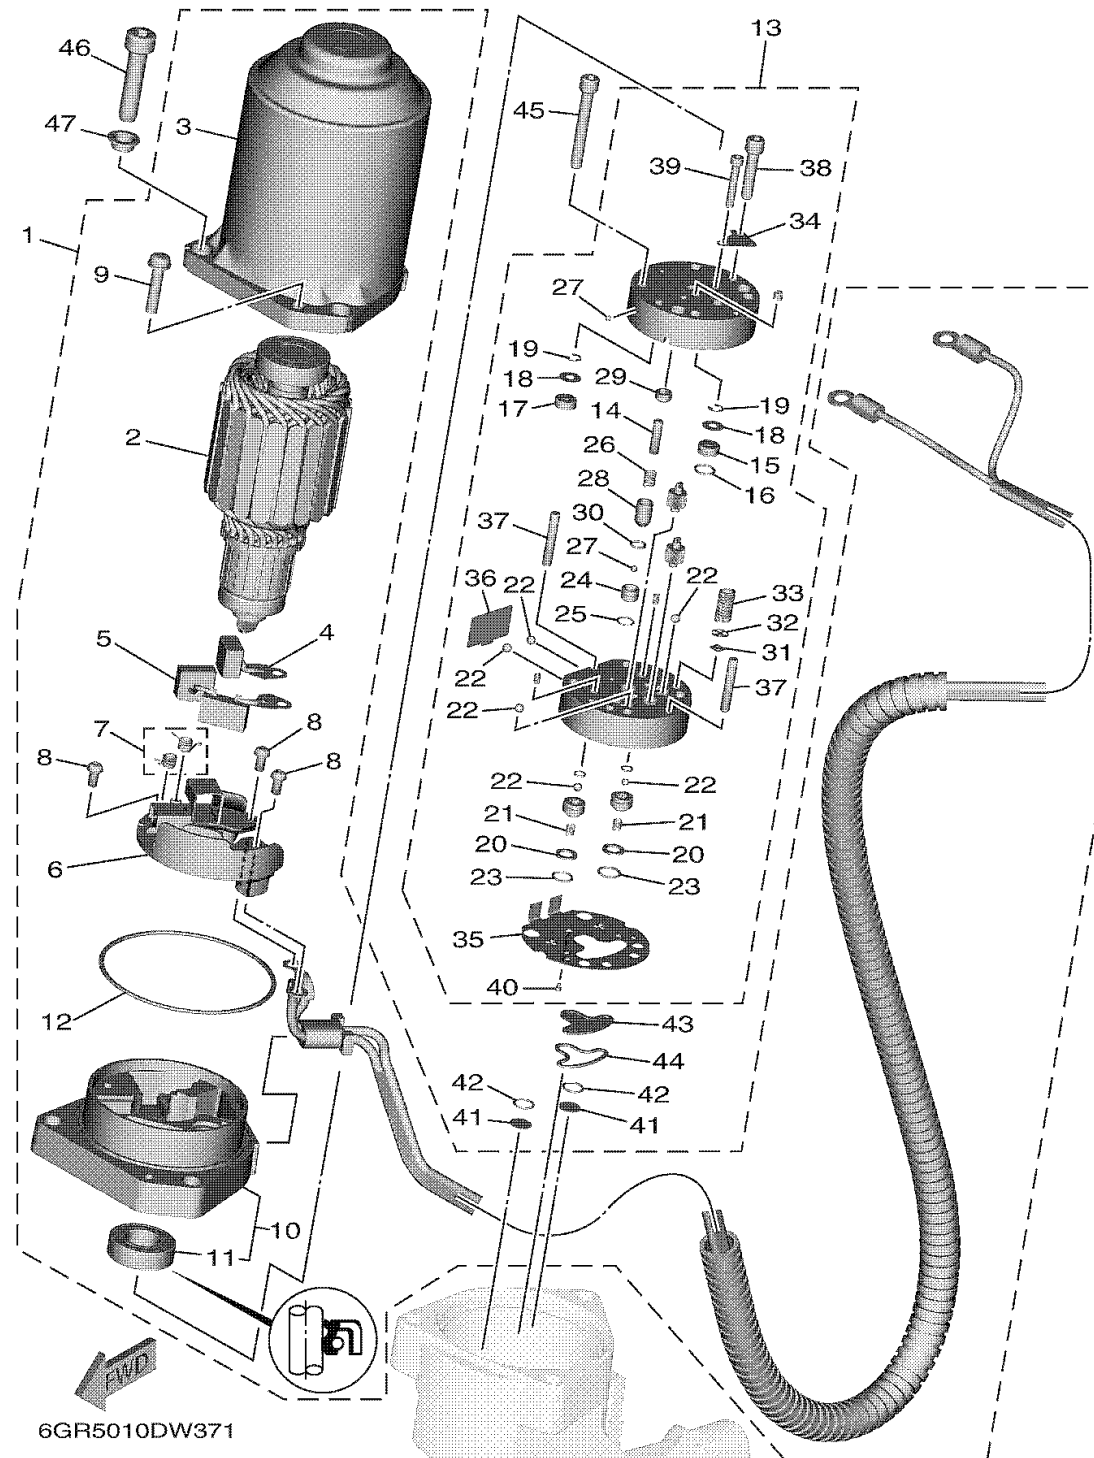

Ref No.	Part Number	Description	Qty	Remarks
21	6C6-43853-00-00	..SPRING, MAIN VALVE	2	
22	93505-32038-00	..BALL	6	
23	69J-4389J-00-00	..O-RING	2	
24	6GR-43851-00-00	..SEAT, RELIEF VALVE	1	
25	93210-064A5-00	..O-RING	1	
26	6C5-43855-10-00	..SPRING, UP RELIEF	1	
27	93501-08001-00	..BALL	2	
28	6D8-43844-00-00	..PIN, VALVE SUPPORT	1	
29	6D8-43843-00-00	..SCREW, VALVE LOCK	1	
30	93210-04N51-00	..O-RING	1	
31	6H1-4384G-11-00	..SEAL, RELIEF VALVE	1	
32	6H1-43844-10-00	..PIN, VALVE SUPPORT	1	
33	6GR-43856-00-00	..SPRING, DOWN RELIEF	1	
34	6D8-4382L-00-00	..CAP, RELIEF VALVE	1	
35	6GR-43895-00-00	..SEAT, RELIEF VALVE	1	
36	6C5-43854-00-00	..SPRING, MANUAL RELEASE	1	
37	93604-26256-00	..PIN, DOWEL	2	
38	91318-05030-00	..BOLT	2	
39	91318-03025-00	..BOLT	2	
40	91318-03005-00	..BOLT	1	

CONTINUED ON NEXT FRAME >

## POWER TRIM TILT ASSY 2

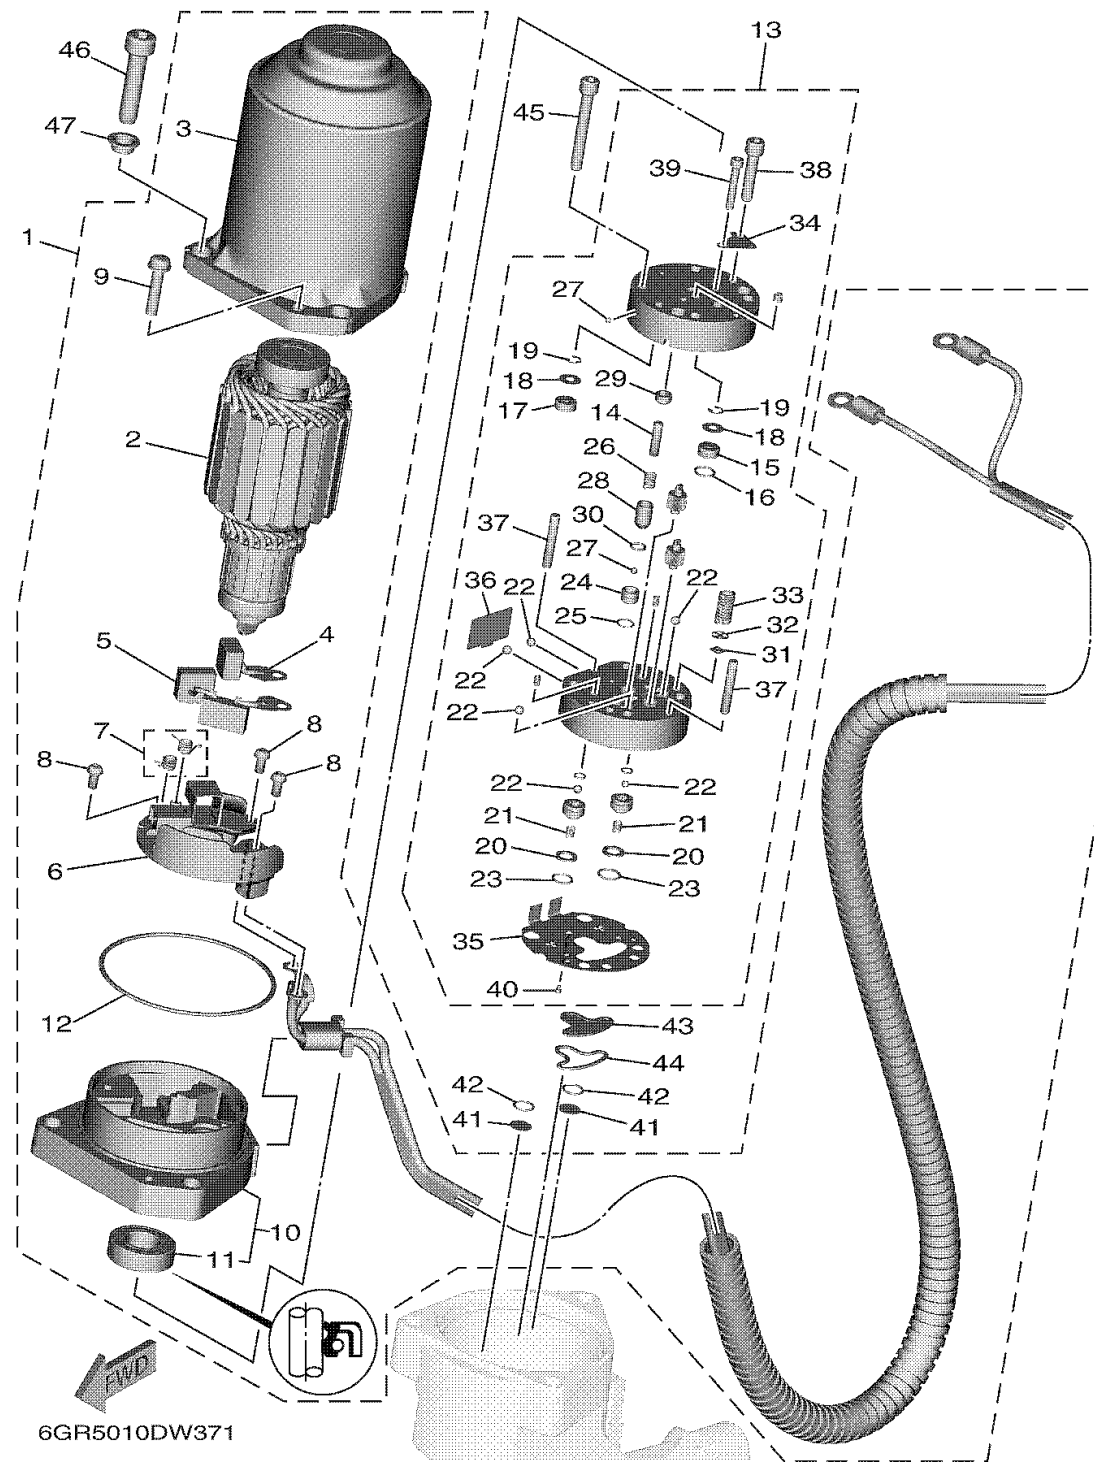

Ref No.	Part Number	Description	Qty	Remarks
41	6C6-43817-00-00	FILTER 2	2	
42	69J-4389J-00-00	.O-RING	2	
43	6C5-43816-00-00	FILTER 1	1	
44	6C5-4380G-00-00	PLATE	1	
45	91318-05045-00	BOLT	4	
46	90110-08M05-00	BOLT, HEXAGON SOCKET HEAD	3	
47	6GR-23113-00-00	COLLAR	3	