



# FUEL INJECTION PUMP 1

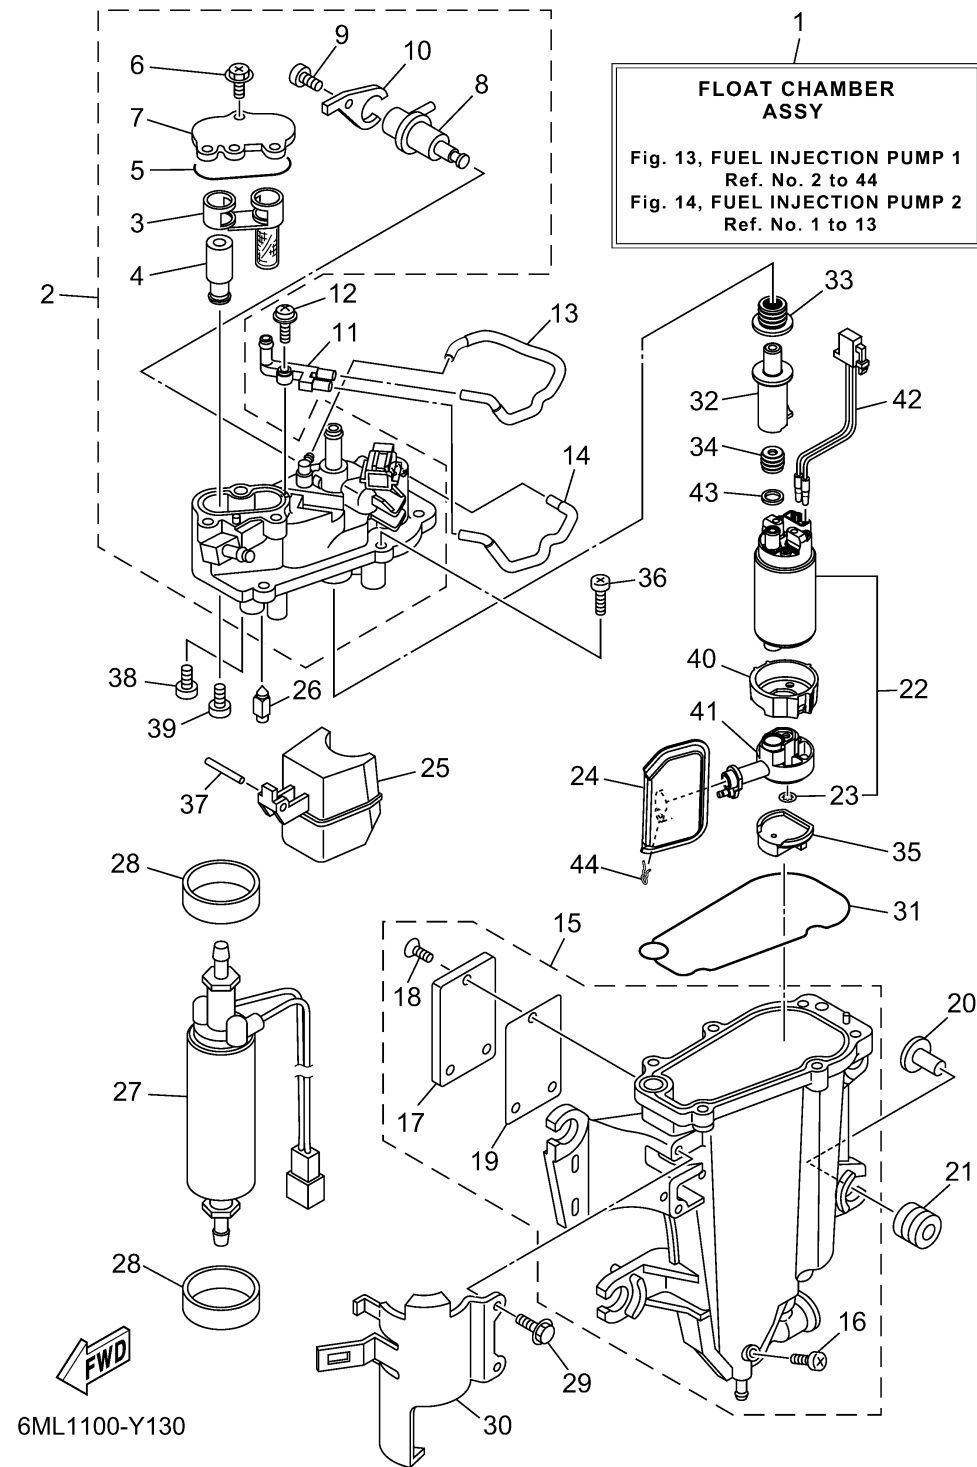

Ref No.	Part Number	Description	Qty	Remarks
1	6ML-14180-00-00	FLOAT CHAMBER ASSY	1	
2	6ML-14182-00-00	COVER, FLOAT CHAMBER	1	
3	6CB-24501-01-00	. .FILTER, FUEL	1	
4	6CB-24460-00-00	. .RELIEF VALVE ASSY	1	
5	6CB-13016-00-00	. .O-RING	1	
6	6CB-14216-00-00	. .SCREW	3	
7	6CB-24217-00-00	. .COVER	1	
8	6CB-13906-01-00	. .REGULATOR, PRESSURE	1	
9	6CB-14564-00-00	. .SCREW	1	
10	6DA-14146-00-00	. .PLATE	1	
11	68V-24379-10-00	PIPE, JOINT 4	1	
12	68V-14216-00-00	SCREW	1	
13	6CB-1475H-00-00	PIPE 5	1	
14	6CB-1475J-00-00	PIPE 6	1	
15	6ML-14181-00-00	BODY, FLOAT CHAMBER 1	1	
16	6P2-14191-00-00	. .PLUG, DRAIN	1	
17	6EK-24452-00-00	. .COVER	1	
18	6K8-14591-10-00	. .SCREW	3	
19	6CB-24482-00-00	. .GASKET 1	1	
20	63P-13716-00-00	COLLAR	4	

CONTINUED ON NEXT FRAME >

# FUEL INJECTION PUMP 1

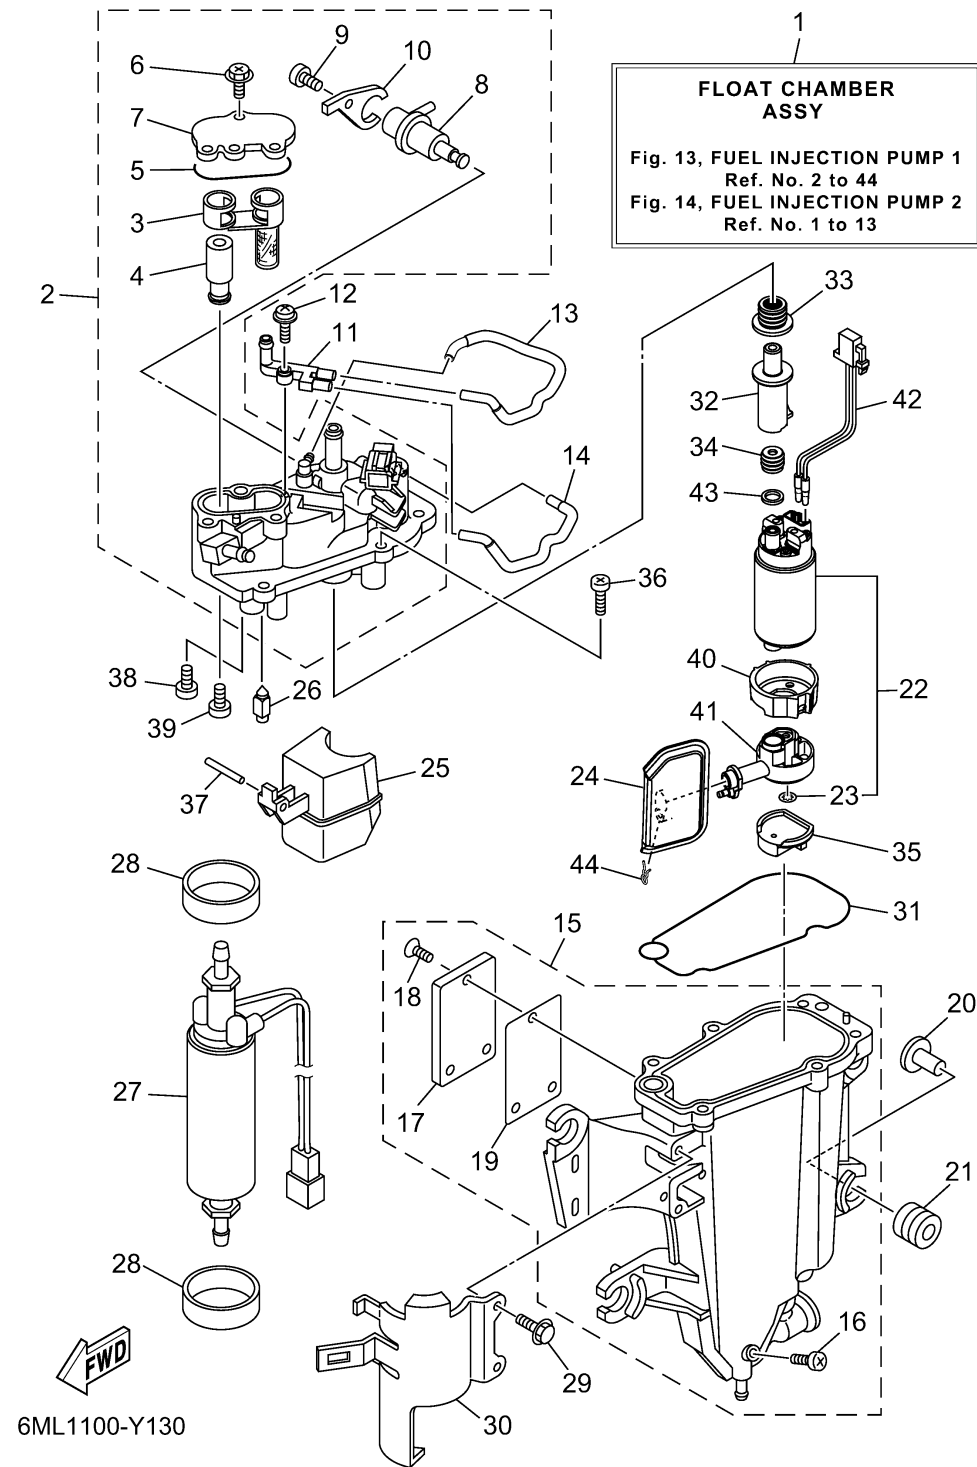


Ref No.	Part Number	Description	Qty	Remarks
21	6CB-13593-00-00	DAMPER	4	
22	6ML-W1390-00-00	FUEL PUMP KIT	1	
23	6C5-14127-10-00	. .CLIP	1	
24	6LH-13915-00-00	FILTER	1	
25	6CB-14985-00-00	FLOAT	1	
26	6CB-14546-00-00	VALVE, NEEDLE	1	
27	6GR-24410-02-00	FUEL PUMP ASSY	1	
28	6CB-24492-00-00	BUSH, FUEL PUMP	2	
29	6CB-24592-00-00	BOLT	2	
30	6CB-24491-00-00	BRACKET, FUEL PUMP	1	
31	6CB-14984-00-00	GASKET, FLOAT CHAMBER	1	
32	6LH-13132-00-00	JOINT	1	
33	6LH-1447B-00-00	BUSH 1	1	
34	6LH-13781-00-00	DAMPER, PUMP	1	
35	6LH-13784-00-00	COVER, PUMP	1	
36	63P-14567-00-00	SCREW	6	
37	6P2-14386-00-00	PIN, FLOAT	1	
38	4SV-24453-00-00	SCREW	1	
39	98507-04008-00	SCREW, PAN HEAD	1	
40	6LH-24492-00-00	BUSH, FUEL PUMP	1	

CONTINUED ON NEXT FRAME >

# FUEL INJECTION PUMP 1

Ref No.	Part Number	Description	Qty	Remarks
41	6LH-13938-00-00	PIPE	1	
42	6LH-87226-00-00	WIRE HARNESS ASSY	1	
43	6LH-13716-00-00	COLLAR	1	
44	6FM-14137-00-00	CLIP	1	

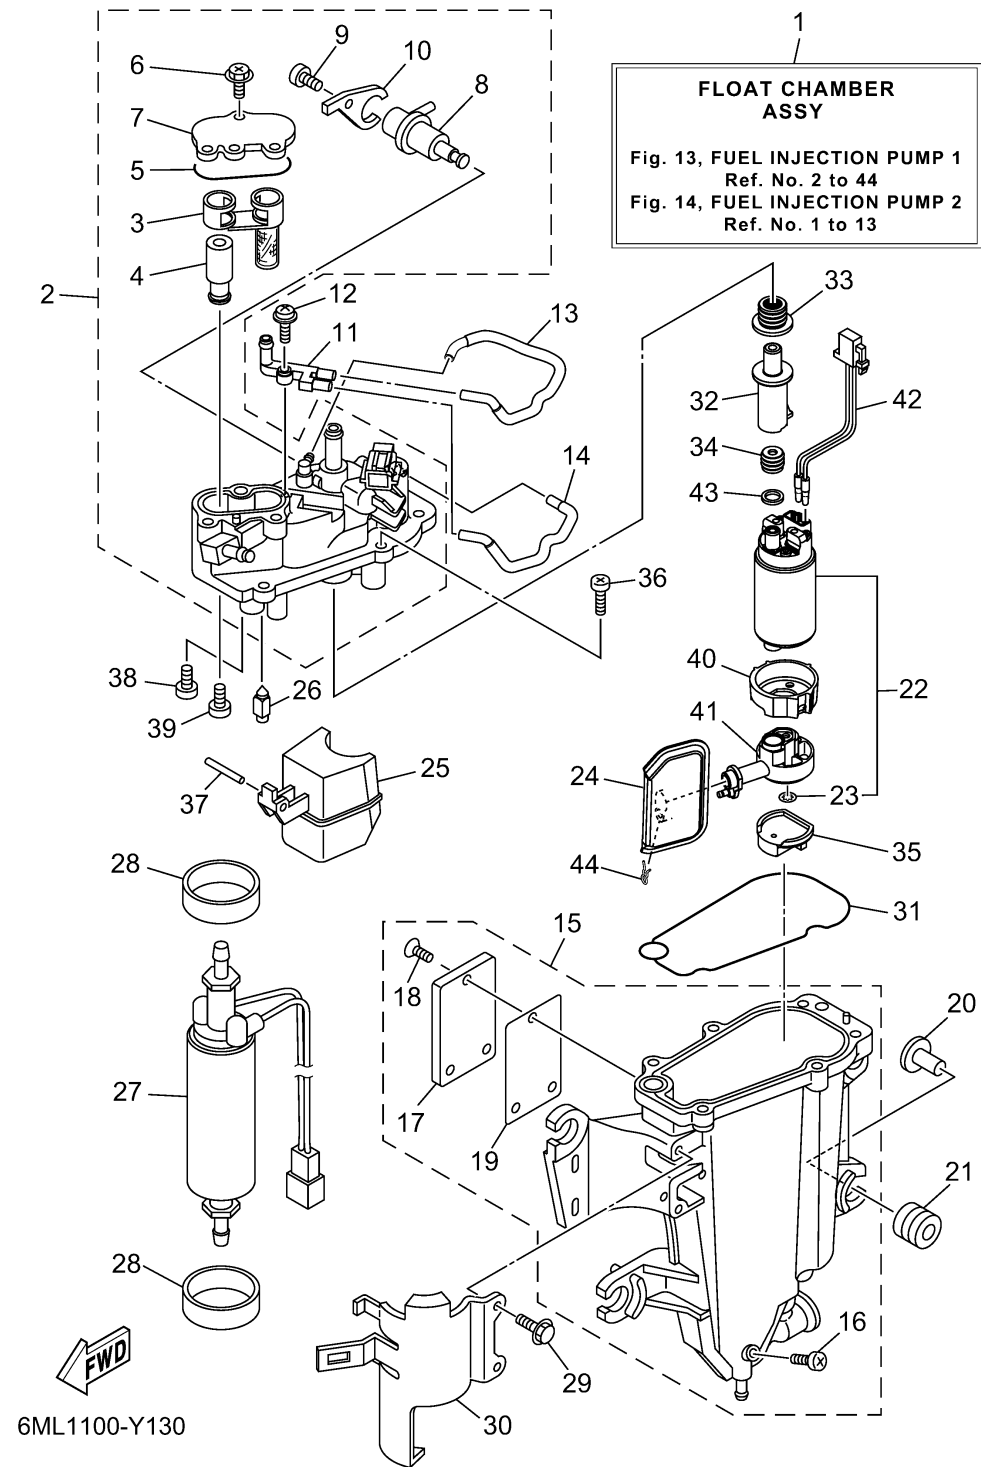

6ML1100-Y130