



FUEL INJECTION PUMP 1

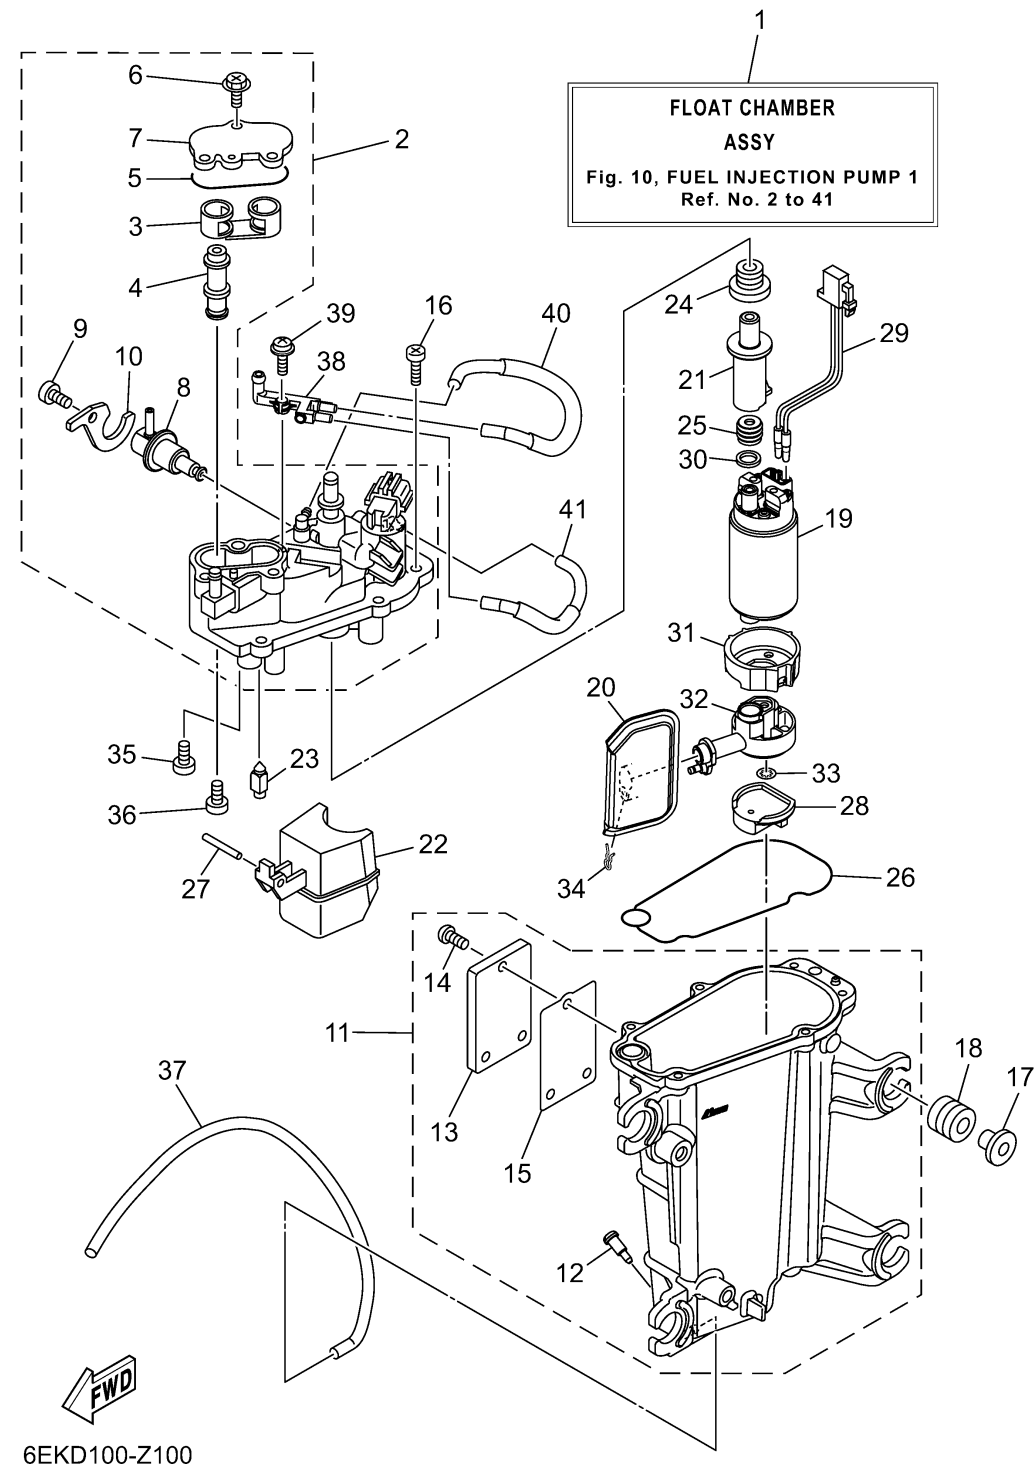

Ref No.	Part Number	Description	Qty	Remarks
1	6EK-14180-20-00	FLOAT CHAMBER ASSY	1	
2	6EK-14182-00-00	COVER, FLOAT CHAMBER	1	
3	6EK-24478-00-00	..JOINT	1	
4	6EK-24481-00-00	..PLUG	1	
5	6CB-13016-00-00	..O-RING	1	
6	6CB-14216-00-00	..SCREW	3	
7	6CB-24217-00-00	..COVER	1	
8	6CB-13906-01-00	..REGULATOR, PRESSURE	1	
9	6CB-14564-00-00	..SCREW	1	
10	6DA-14146-00-00	..PLATE	1	
11	6EK-14181-00-00	BODY, FLOAT CHAMBER 1	1	
12	6P2-14191-00-00	..PLUG, DRAIN	1	
13	6EK-24452-00-00	..COVER	1	
14	6K8-14591-10-00	..SCREW	3	
15	6CB-24482-00-00	..GASKET 1	1	
16	63P-14567-00-00	SCREW	6	
17	63P-13716-00-00	COLLAR	4	
18	6CB-13593-00-00	DAMPER	4	
19	6FP-13907-01-00	FUEL PUMP COMP.	1	
20	6LH-13915-00-00	FILTER	1	

CONTINUED ON NEXT FRAME >

FUEL INJECTION PUMP 1

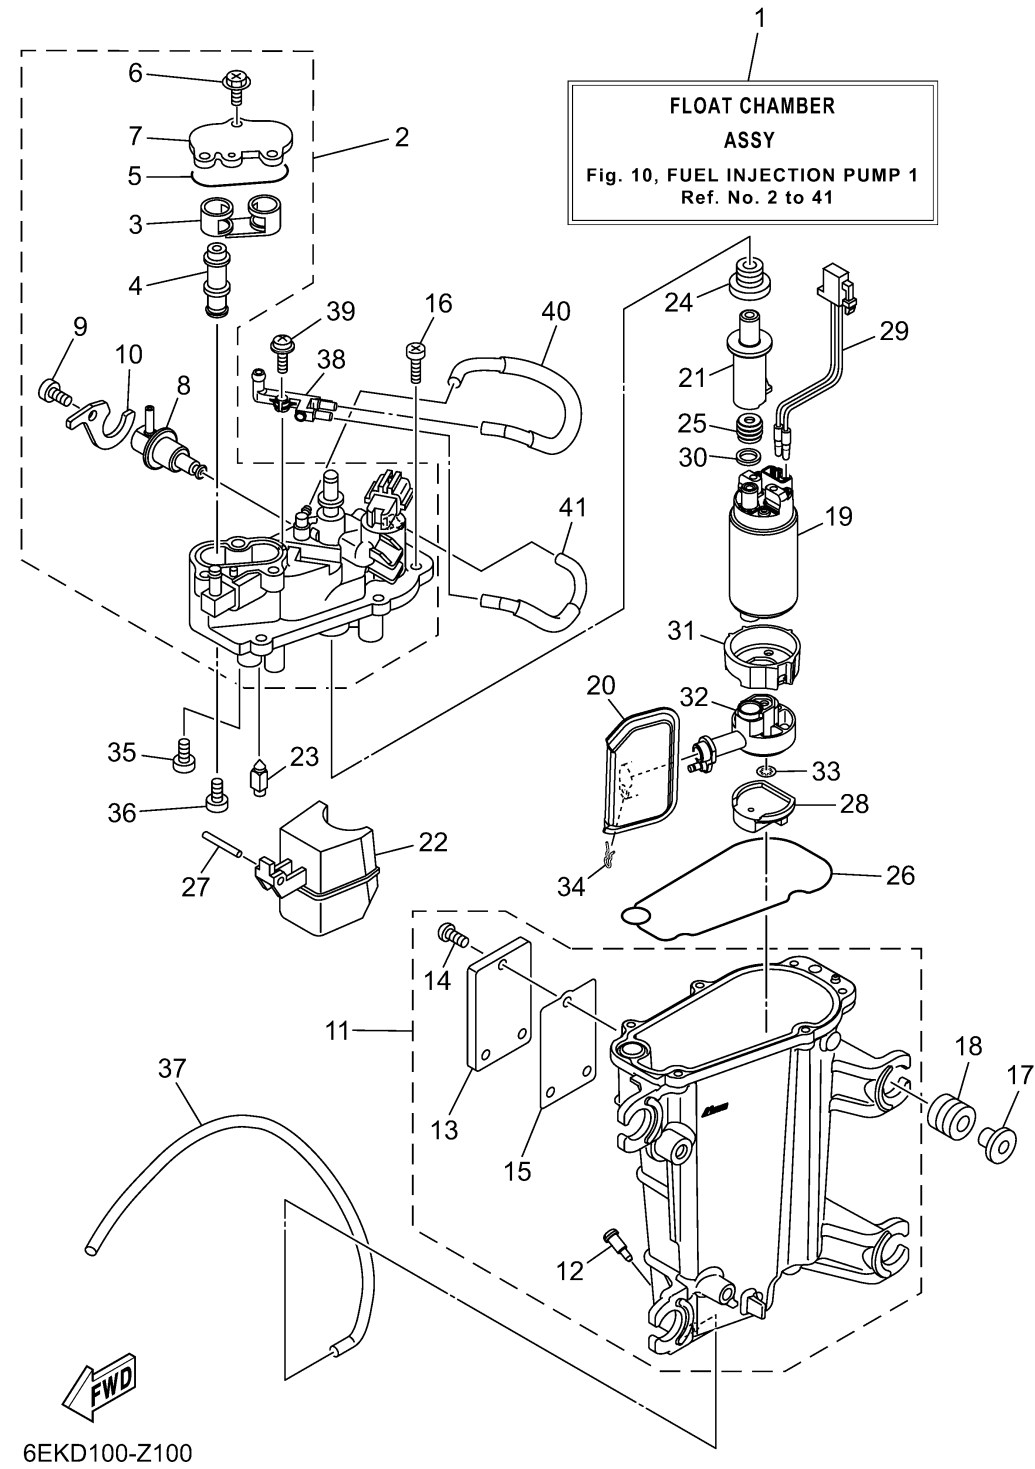


Ref No.	Part Number	Description	Qty	Remarks
21	6LH-13132-00-00	JOINT	1	
22	6CB-14985-00-00	FLOAT	1	
23	6CB-14546-00-00	VALVE, NEEDLE	1	
24	6LH-1447B-00-00	BUSH 1	1	
25	6LH-13781-00-00	DAMPER, PUMP	1	
26	6CB-14984-00-00	GASKET, FLOAT CHAMBER	1	
27	6P2-14386-00-00	PIN, FLOAT	1	
28	6LH-13784-00-00	COVER, PUMP	1	
29	6LH-87226-00-00	WIRE HARNESS ASSY	1	
30	6LH-13716-00-00	COLLAR	1	
31	6LH-24492-00-00	BUSH, FUEL PUMP	1	
32	6LH-13938-00-00	PIPE	1	
33	6C5-14127-10-00	.CLIP	1	
34	6FM-14137-00-00	CLIP	1	
35	4SV-24453-00-00	SCREW	1	
36	98507-04008-00	SCREW, PAN HEAD	1	
37	6AW-14197-00-00	PIPE	1	
38	68V-24379-10-00	PIPE, JOINT 4	1	
39	68V-14216-00-00	SCREW	1	
40	6EK-1475H-00-00	PIPE 5	1	

CONTINUED ON NEXT FRAME >

FUEL INJECTION PUMP 1

Ref No.	Part Number	Description	Qty	Remarks
41	6EK-1475J-00-00	PIPE 6	1	

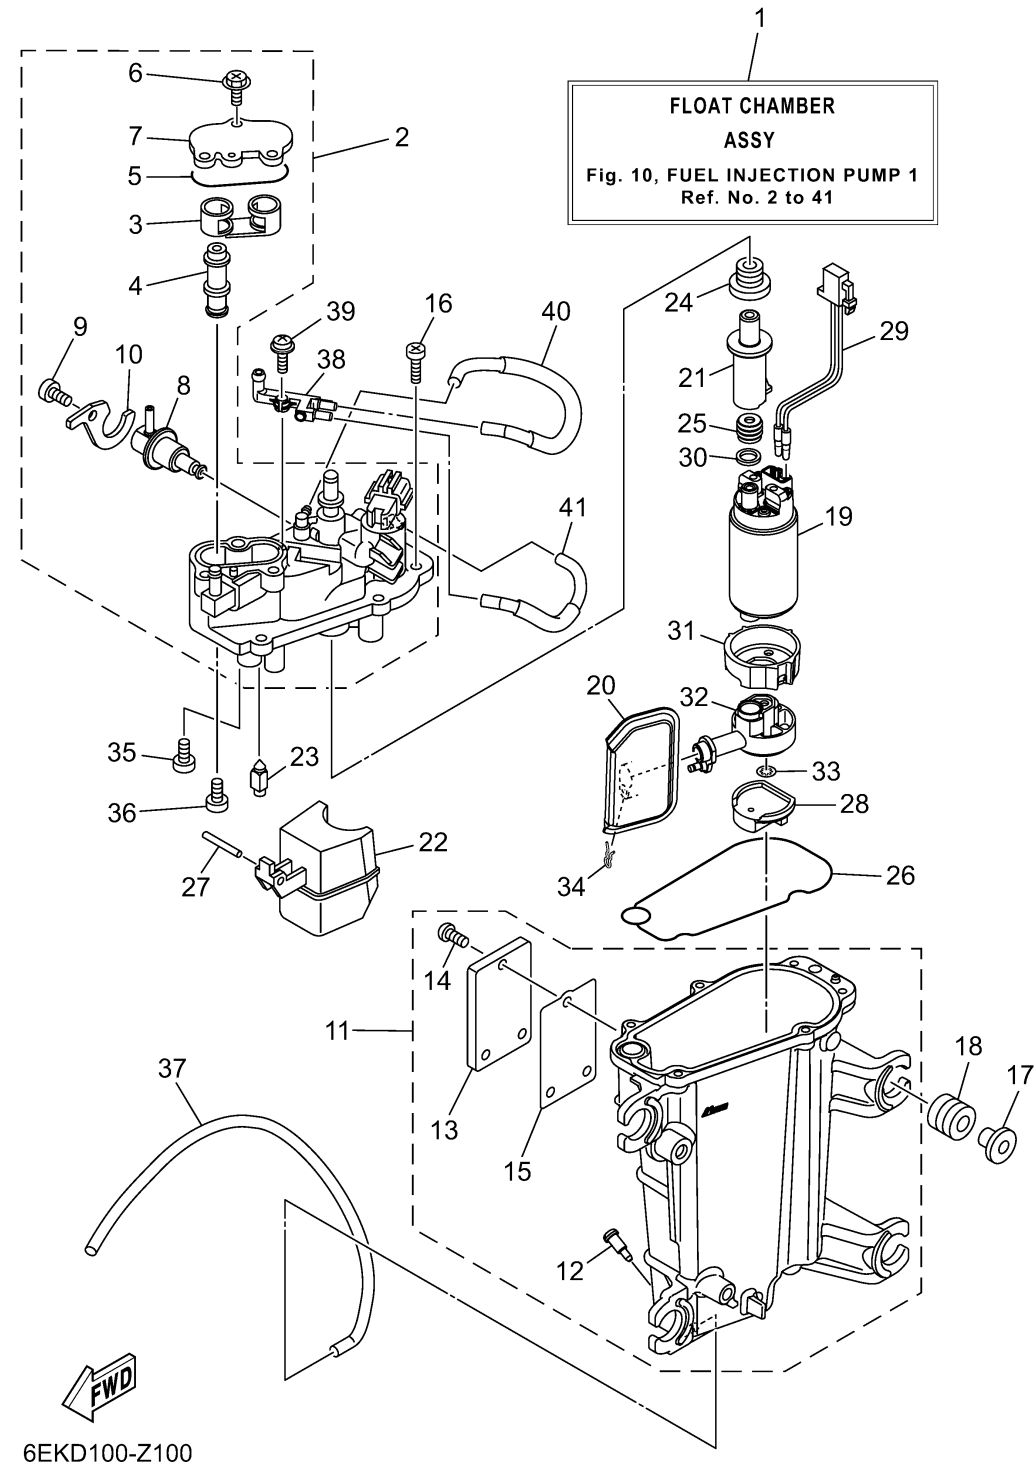

6EKD100-Z100