


STARTER

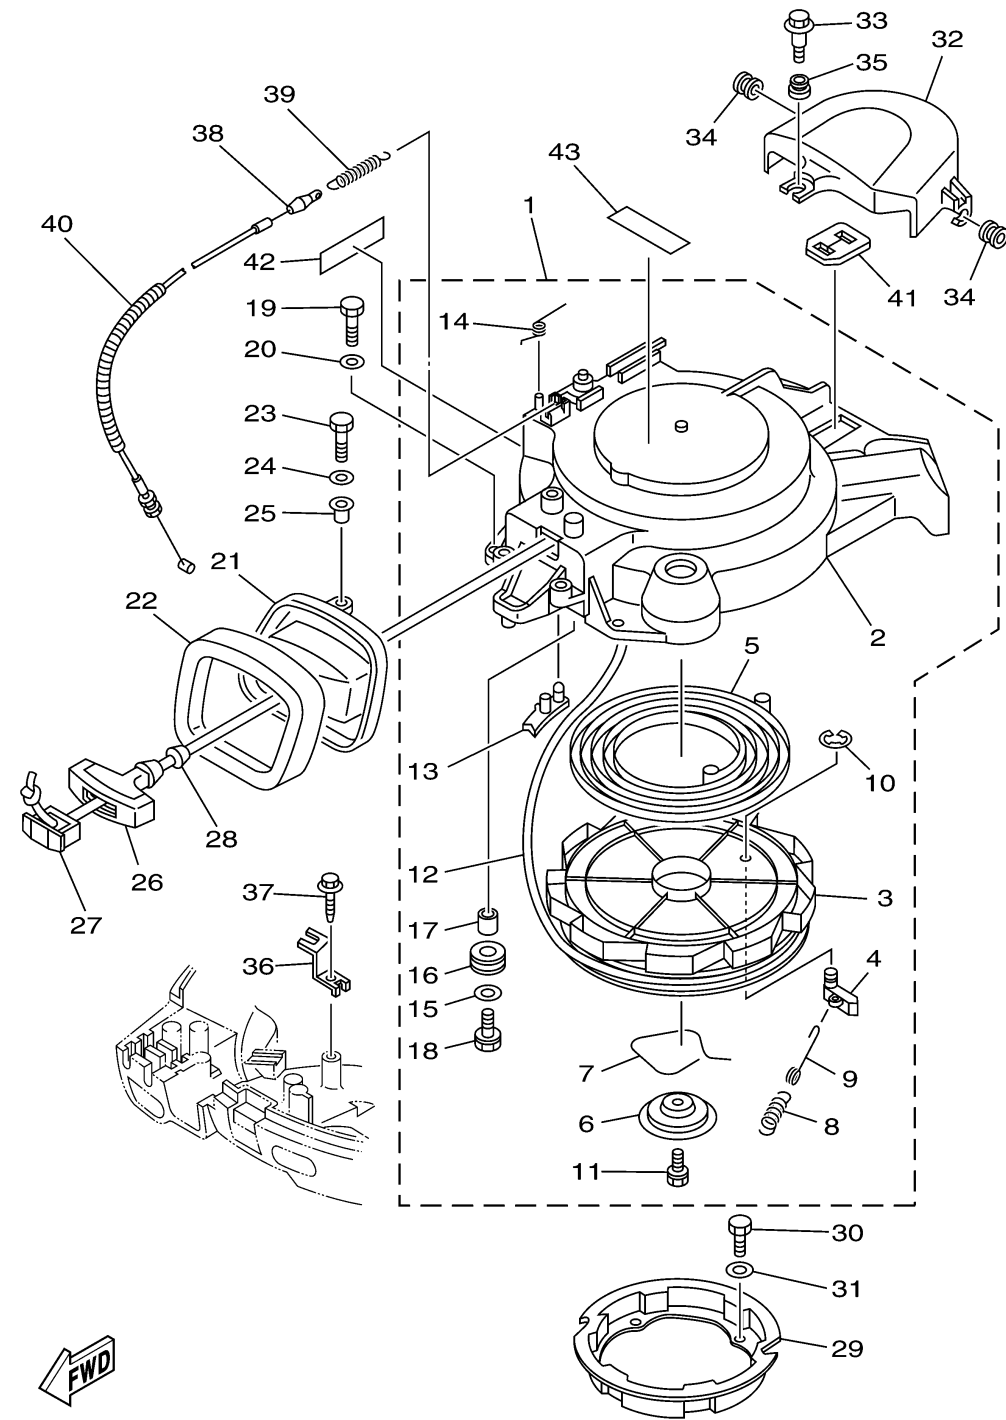


FWD
67C3110-C110

Ref No.	Part Number	Description	Qty	Remarks
1	67C-15710-00-00	STARTER ASSY	1	MH
2	67C-15711-00-00	..CASE, STARTER	1	
3	66T-15714-00-00	..DRUM, SHEAVE	1	
4	63V-15741-00-00	..PAWL, DRIVE	1	
5	66T-15713-00-00	..SPRING, STARTER	1	
6	66T-15716-00-00	..PLATE, DRIVE	1	
7	66T-15705-00-00	..SPRING, DRIVE PAWL	1	
8	66T-15767-00-00	..SPRING	1	
9	66T-15784-00-00	..SPRING, RETURN	1	
10	63V-15744-00-00	..CIRCLIP	1	
11	63V-15768-00-00	..BOLT	1	
12	90890-44374-00	STARTER, ROPE 50M O/M	1	UNAVAILABLE - OBTAIN LOCALLY - CUT TO 1.8M
13	66T-15794-00-00	..STOPPER	1	
14	66T-15734-00-00	..SPRING, RETURN	1	
15	6F5-15791-00-00	..WASHER, LOCK	1	
16	6F5-15752-00-00	..ROLLER, WIRE	1	
17	6F5-15753-00-00	..BUSH	1	
18	97523-06425-00	..BOLT, WITH WASHER	1	
19	97095-06025-00	BOLT	4	MH
20	92995-06600-00	WASHER	4	MH

CONTINUED ON NEXT FRAME >

STARTER

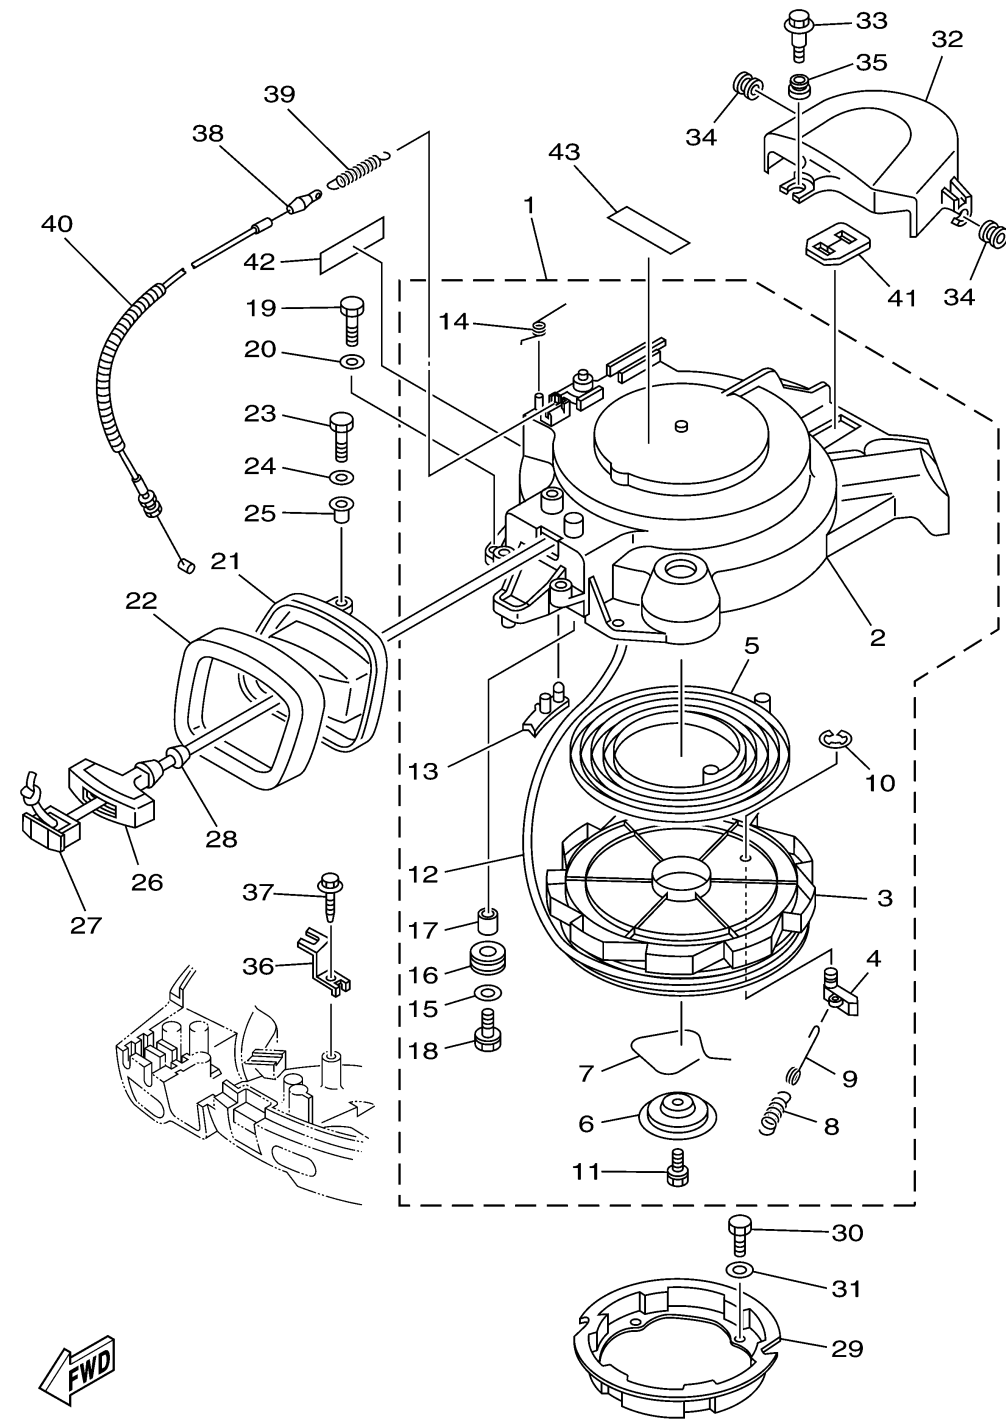


FWD
67C3110-C110

Ref No.	Part Number	Description	Qty	Remarks
21	67C-15758-00-00	GUIDE, ROPE	1	MH
22	67C-15762-00-00	SEAL, RUBBER 2	1	MH
23	97095-06025-00	BOLT	3	MH
24	92995-06600-00	WASHER	3	MH
25	90387-06M89-00	COLLAR	3	MH
26	689-15755-01-00	.HANDLE, STARTER	1	MH
27	6F5-15779-02-00	.COVER	1	MH
28	6A0-15789-00-00	.DAMPER	1	MH
29	67C-15723-00-00	PULLEY, STARTER	1	MH
30	97095-06010-00	BOLT	4	MH
31	92995-06600-00	WASHER	4	MH
32	67C-46297-00-00	COVER, DUST	1	MH
33	90109-06MA1-00	BOLT	1	MH
34	90480-10M16-00	.GROMMET	2	MH
35	90480-12072-00	GROMMET	1	MH
36	66M-15774-00-00	STAY 4	1	MH
37	90109-06M86-00	BOLT	1	MH
38	67C-15770-00-00	CABLE COMP., STARTER STOP	1	MH
39	66T-15731-00-00	.SPRING, RETURN	1	MH
40	90446-10M86-00	HOSE (L140)	1	MH

CONTINUED ON NEXT FRAME >

STARTER

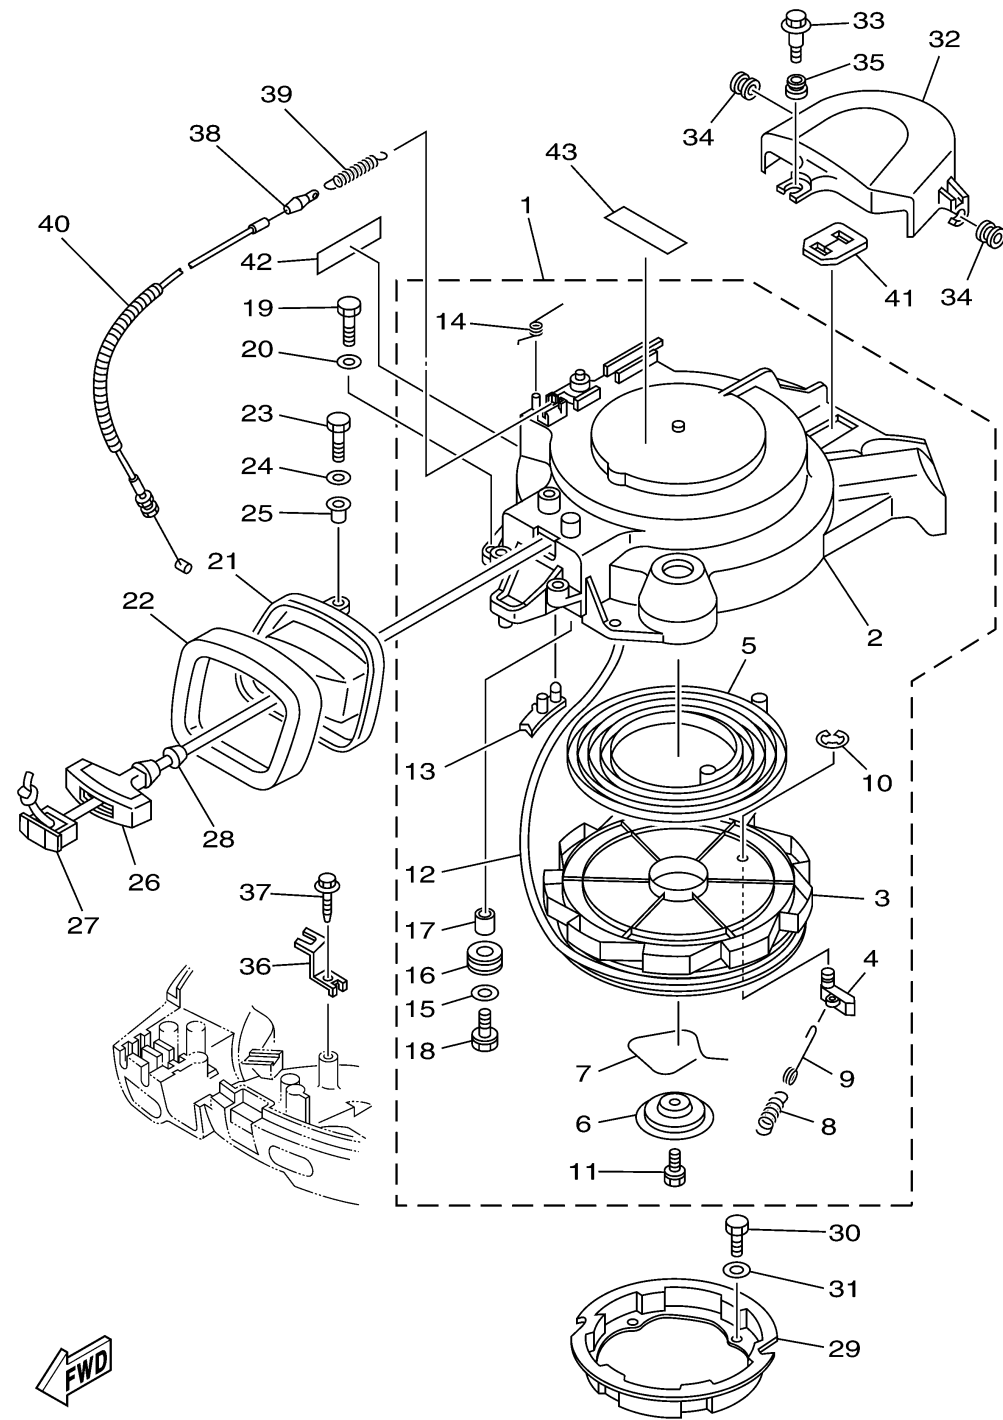

67C3110-C110

Ref No.	Part Number	Description	Qty	Remarks
41	65W-81639-10-00	PLATE, ARMATURE FITTING	1	MH
42	62Y-13437-41-00	MARK, CAUTION	1	MH
43	6A1-83625-41-00	MARK 5	1	MH