


# POWER TRIM TILT ASSY

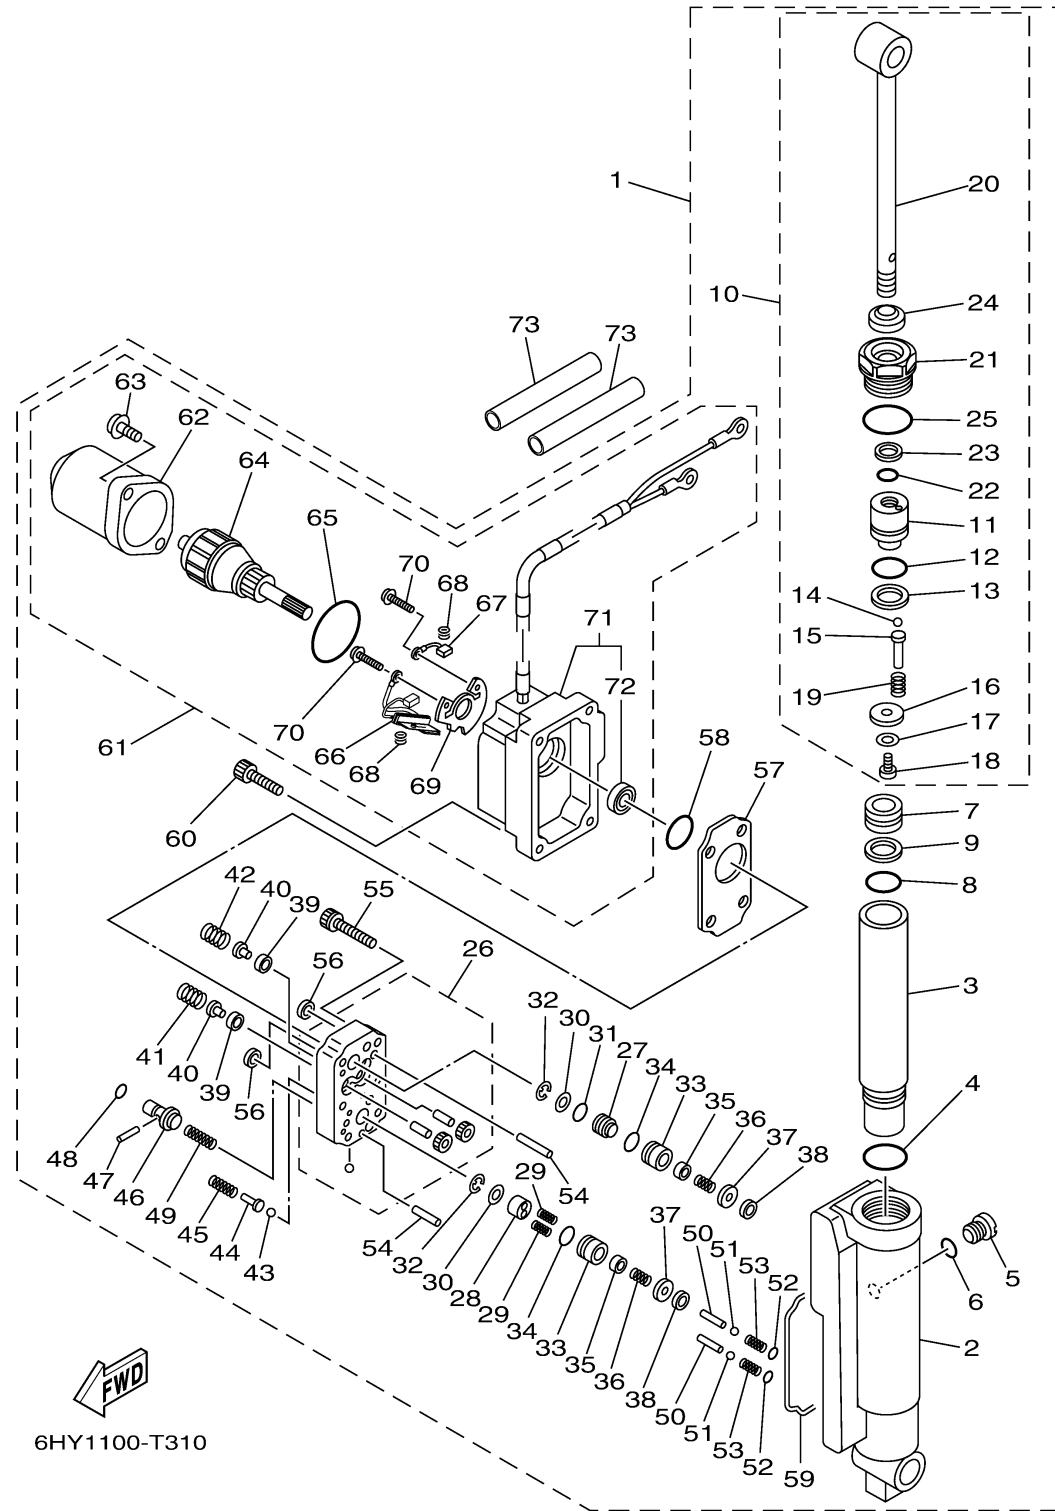


6HY1100-T310

Ref No.	Part Number	Description	Qty	Remarks
1	6HY-43840-00-8D	POWER TILT ASSY	1	
2	6HY-4380K-00-00	..CYLINDER, TILT SUB ASSY	1	
3	6AH-22471-00-00	..CYLINDER, SHOCK ABSORBER	1	
4	93210-320A7-00	..O-RING	1	
5	6H1-4388E-11-00	..PLUG, TAPER SCREW	1	
6	93210-07003-00	..O-RING	1	
7	6AH-43814-00-00	..PISTON, FREE	1	
8	93210-24709-00	...O-RING	1	
9	6C5-43871-00-00	..RING, BACK UP	1	
10	6AH-43810-00-00	..TILT PISTON SUB ASSY	1	
11	6AH-4380D-00-00	...PISTON COMP.	1	
12	93210-24709-00	...O-RING	1	
13	6C5-43871-00-00	...RING, BACK UP	1	
14	93501-08001-00	...BALL	5	
15	6AH-4386A-00-00	...PIN, ABSORBER VALVE	5	
16	6AH-4385E-00-00	...PLATE, PISTON	1	
17	92902-06200-00	...WASHER	1	
18	6AH-43878-00-00	...BOLT, SOCKET	1	
19	6AH-43857-00-00	...SPRING, ABSORBER VALVE	5	
20	6AH-43801-00-00	...ROD	1	

CONTINUED ON NEXT FRAME >


# POWER TRIM TILT ASSY

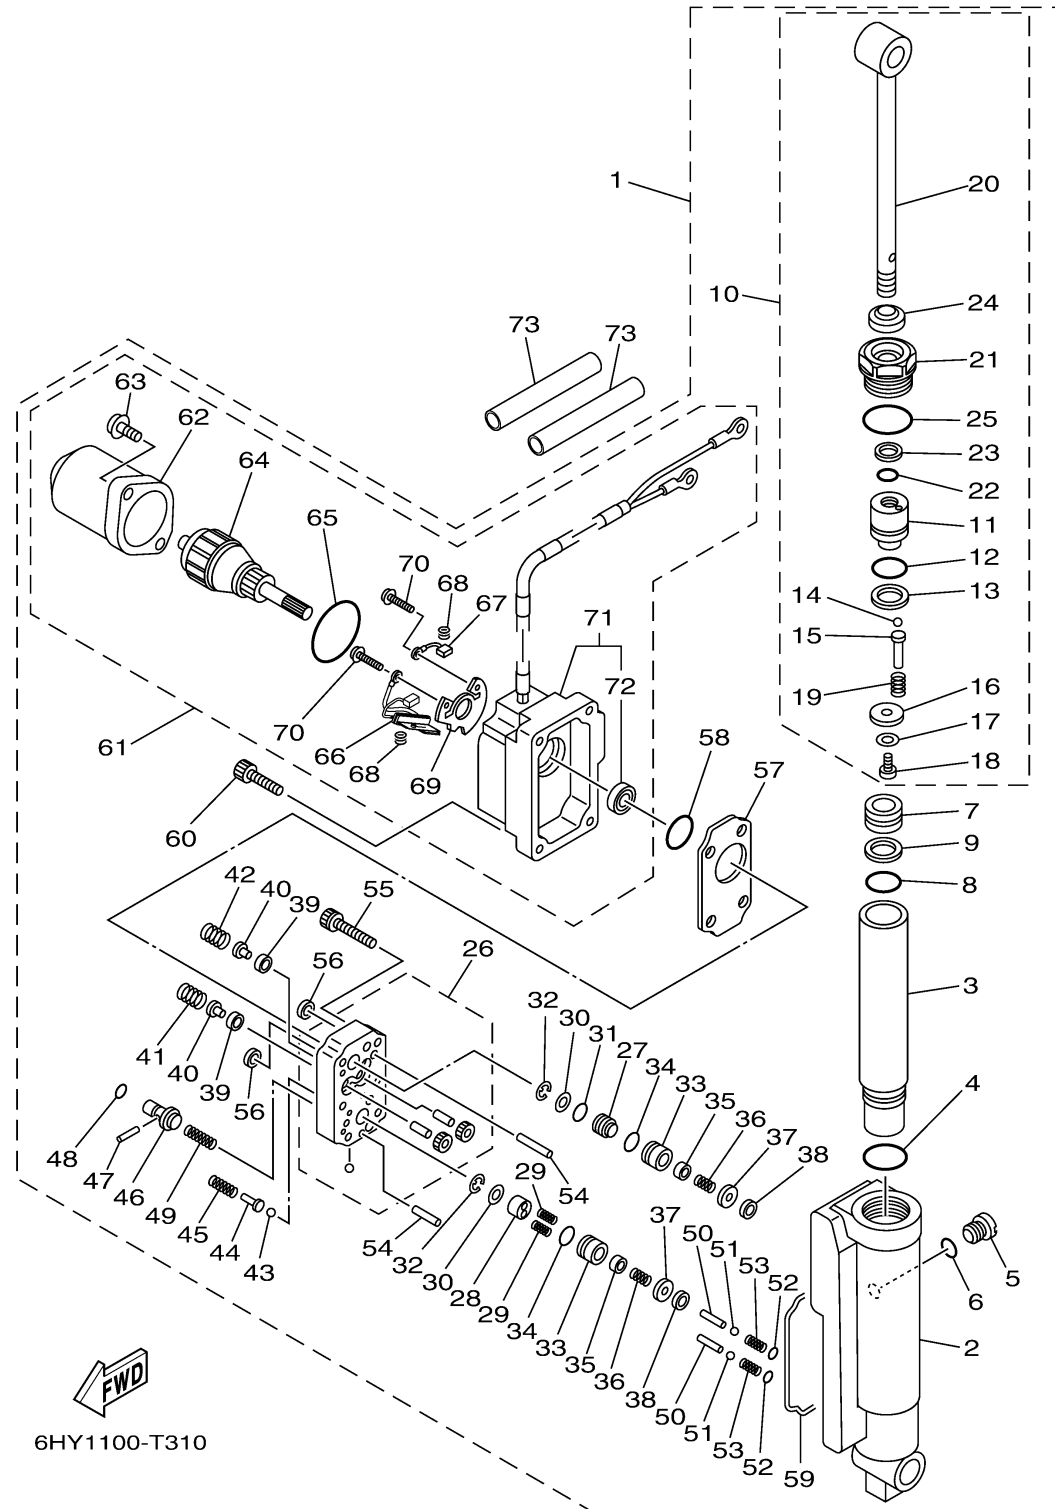

Ref No.	Part Number	Description	Qty	Remarks
21	6AH-43811-00-00	...SCREW, CYLINDER END	1	
22	6H1-43866-01-00	...O-RING	1	
23	69A-43871-00-00	...RING, BACK UP	1	
24	69A-43812-00-00	...SEAL, DUST	1	
25	62X-43862-00-00	...O-RING	1	
26	6AH-43830-00-00	..GEAR PUMP ASSY	1	
27	69A-43841-00-00	..PISTON, SHUTTLE	1	
28	69A-4384M-00-00	..PISTON, SHUTTLE 2	1	
29	62Y-43894-00-00	..SPRING, SHUTTLE RETURN	2	
30	69A-4384F-00-00	..SEAL, MAIN VALVE	2	
31	6H1-43883-00-00	..O-RING	1	
32	99002-03600-00	..CIRCLIP	2	
33	69G-4382G-00-00	..VALVE SEAT	2	
34	93210-12N52-00	...O-RING	2	
35	6T4-43808-00-00	..SEAT VALVE COMP. 1	2	
36	69G-43853-00-00	..SPRING, MAIN VALVE	2	
37	69G-4388F-00-00	..SPACER	2	
38	69J-4381C-00-00	...FILTER 3	2	
39	6H1-4384G-11-00	..SEAL, RELIEF VALVE	2	
40	6H1-43844-10-00	..PIN, VALVE SUPPORT	2	

CONTINUED ON NEXT FRAME >


# POWER TRIM TILT ASSY

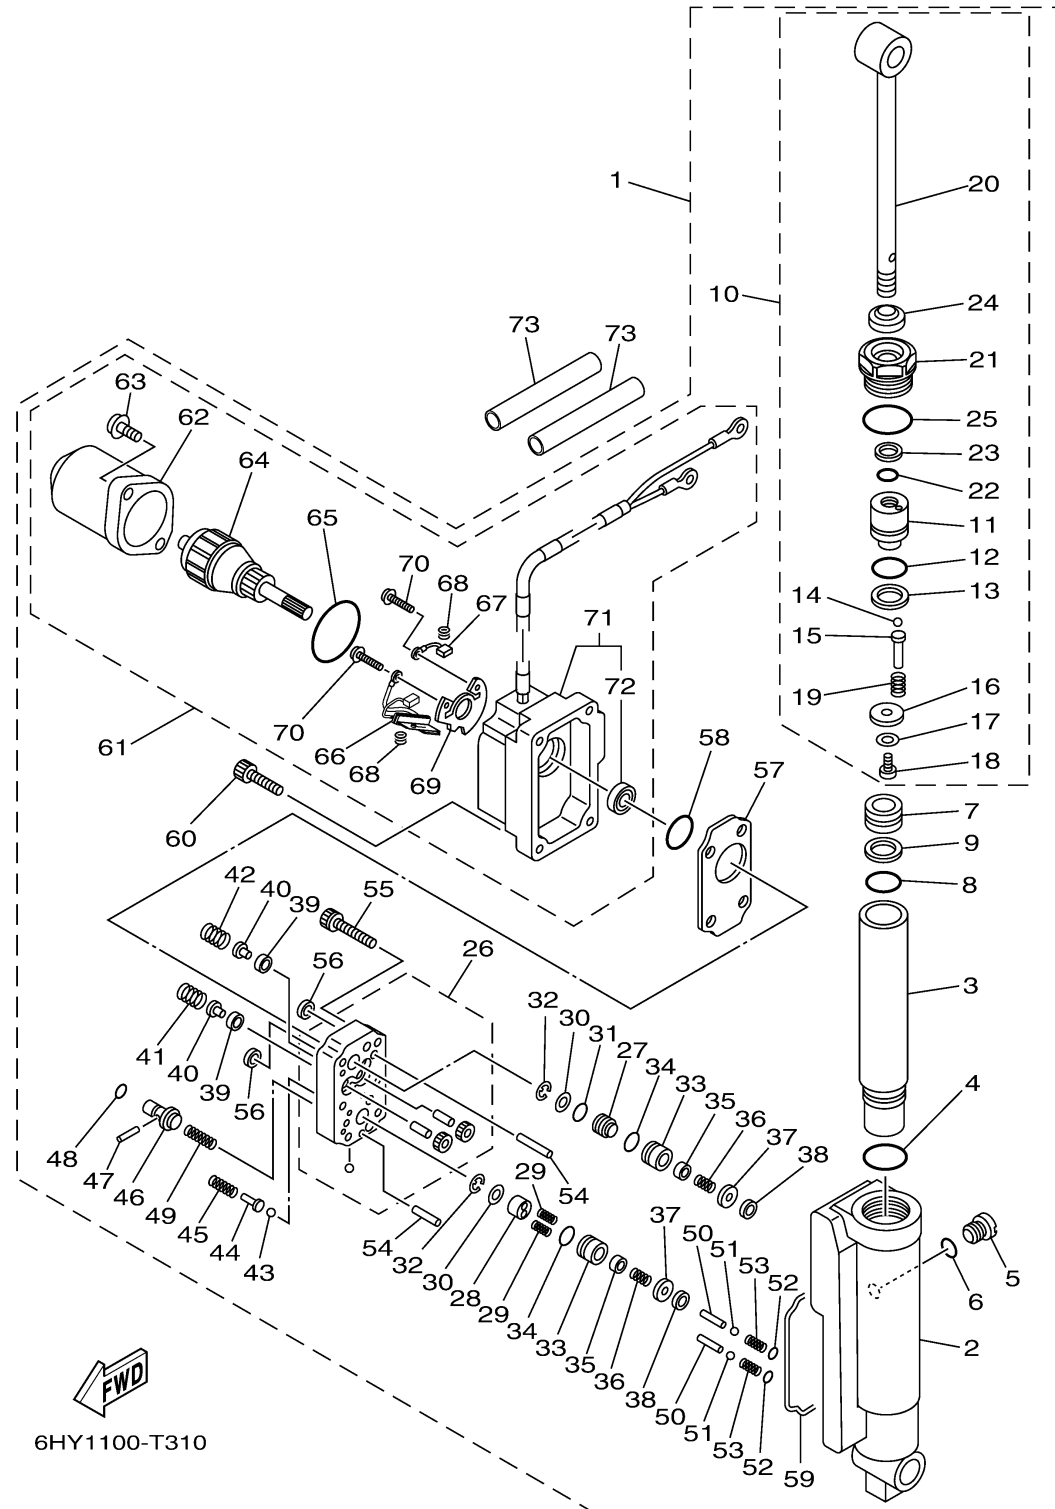

Ref No.	Part Number	Description	Qty	Remarks
41	6F2-43855-00-00	..SPRING, UP RELIEF	1	
42	6H1-43856-10-00	..SPRING, DOWN RELIEF	1	
43	93501-08001-00	..BALL	2	
44	69A-4386A-00-00	..PIN, ABSORBER VALVE	2	
45	69A-43824-00-00	..SPRING, DOWN RELIEF 2	2	
46	69A-43848-10-00	..ROD, MANUAL RELEASE	1	
47	93602-15250-00	..PIN, DOWEL	1	
48	93210-06001-00	..O-RING	1	
49	6AH-43854-00-00	..SPRING, MANUAL RELEASE	1	
50	69A-4381G-00-00	..PIN 1	2	
51	93501-08001-00	..BALL	2	
52	6H1-43883-00-00	..O-RING	2	
53	69A-4384H-00-00	..SPRING	2	
54	93606-14081-00	..PIN, DOWEL	2	
55	91312-05025-00	..BOLT, HEXAGON SOCKET HEAD	6	
56	69J-4381C-00-00	..FILTER 3	2	
57	6AH-4381J-00-00	..PLATE	1	
58	N35-43862-10-00	..O-RING	1	
59	69A-23129-00-00	..GASKET, DRAIN PLUG	1	
60	69A-43878-00-00	..BOLT, SOCKET	4	

CONTINUED ON NEXT FRAME >

# POWER TRIM TILT ASSY

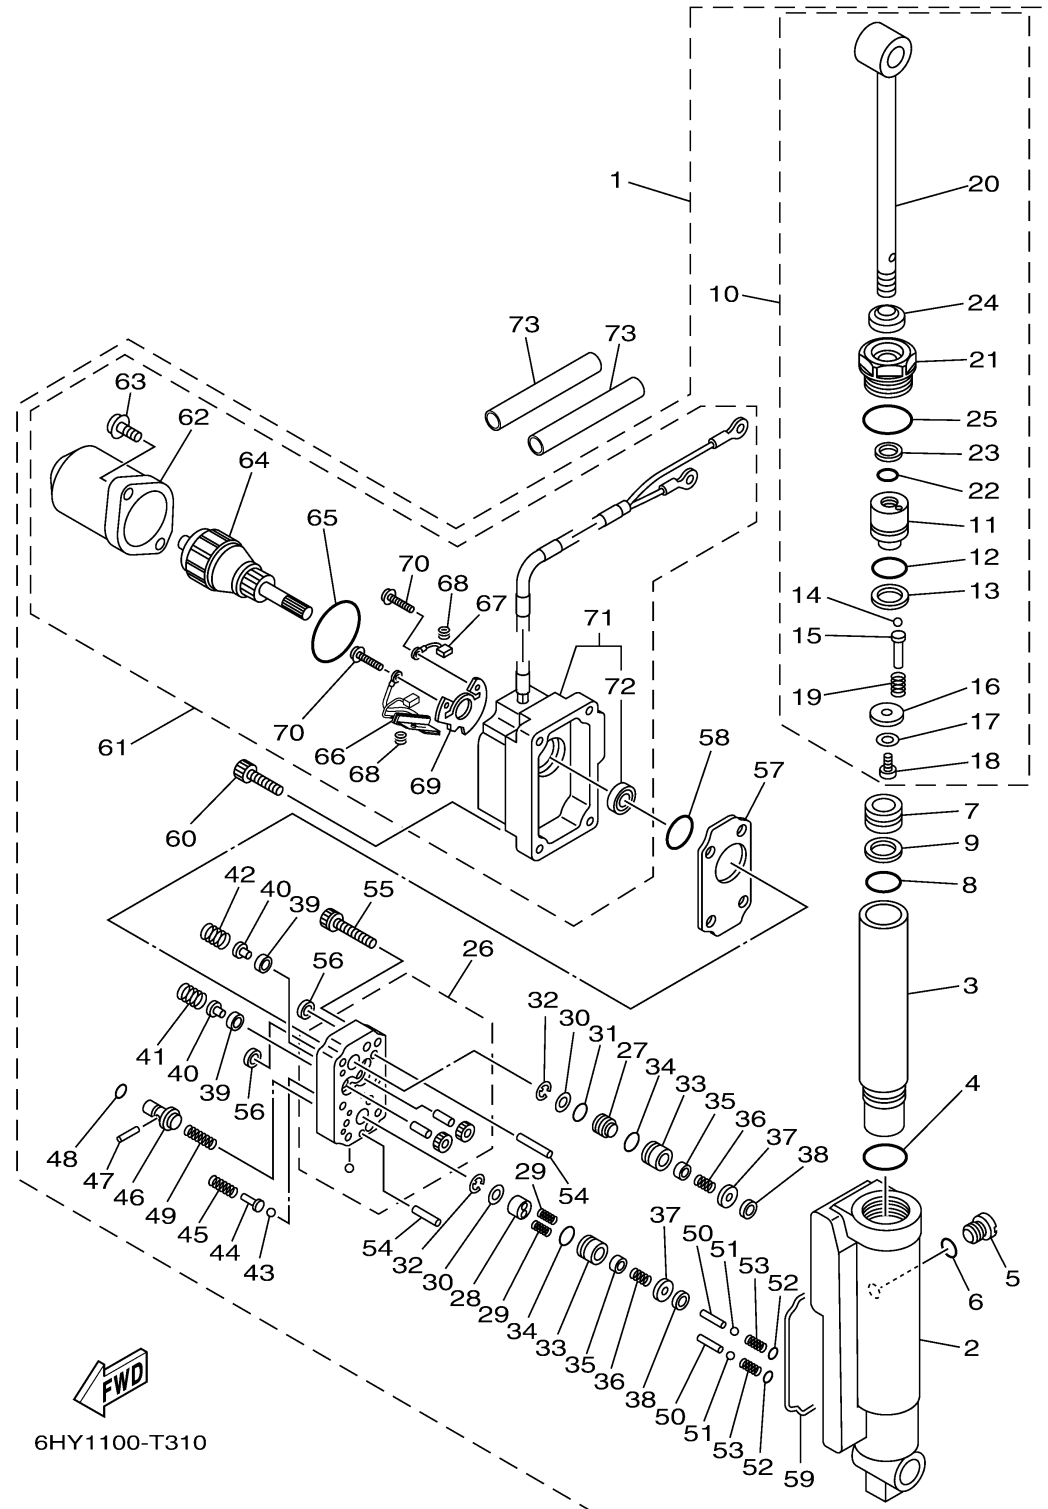

Ref No.	Part Number	Description	Qty	Remarks
61	6HY-43880-00-00	..MOTOR ASSY	1	
62	6AH-43804-00-00	...STATOR ASSY	1	
63	67C-43879-10-00	...SCREW, WITH WASHER	2	
64	67C-43805-11-00	...ARMATURE ASSY	1	
65	67C-43862-10-00	...O-RING	1	
66	67C-82181-10-00	...CIRCUIT BREAKER COMP.	1	
67	67C-43892-10-00	...BRUSH 2	1	
68	67C-4386K-10-00	...SPRING, BRUSH	2	
69	67C-4380F-10-00	...PLATE, BRUSH HOLDER	1	
70	97602-04316-00	...SCREW, PAN HEAD WITH WASHER	2	
71	6HY-43881-01-00	...FRAME, END	1	
72	67C-43882-10-00	...OIL SEAL	1	
73	90446-15003-00	HOSE (L100)	2	